

REMOTE CONTROLLED

GH1088

FART MACHINE

User Manual

Installation:

1. Remove the screw located on the battery cover by using a small Phillips screwdriver.
2. Insert 4 x AA (not included) batteries by using the correct polarity in the unit.
3. Place the battery cover back on and tighten the screw securely in place.

Note: The remote control comes installed with a 12V A23 battery.

Operation:

1. Press the power switch to On which is located on the right side of the unit.
2. Press the remote button to release the fart sound, each sound will last several seconds.
3. Press the power switch to Off when not in use.

Note: The different noises will automatically cycle through.

Safety:

1. Do not pull apart the casing of the fart machine or remote control while turned on to avoid damage and injury.
2. Keep the fart machine away from high temperatures as it may cause damage to the unit and batteries.
3. Do not expose the fart machine to water, moisture or liquids.

Specifications:

Wireless Frequency: 433MHz
Remote Control Range: Up to 15m
Play Time: Up to 5 Hours
Batteries:
Fart Machine: 4 x AA (Not Included)
Remote Control: 1 x 12V A23 (Included)
Dimensions: 120(H) x 95(W) x 40(D)mm

Distributed by:
Electus Distribution Pty Ltd
46 Eastern Creek Dr,
Eastern Creek NSW 2766
Australia
Ph 1300 738 555
Int'l +61 2 8832 3200
Fax 1300 738 500

www.electusdistribution.com.au