

**Item: XC4834****Description**

The USB to serial adapter enables you to connect a serial device to a free USB port of your PC or notebook.

**Specification**

- Prolific chip set
- RS232 serial interface with DB9 connector
- Connector with screws
- Cable length ca. 1.5 m
- Data transfer rate up to 128 Kb/s

**System requirements**

- Windows 2000/XP/Server-2003/Vista/7/7-64, Linux ex Kernel 2.6
- PC or Notebook with a free USB Port

**Package content\***

- USB to serial adapter
- Driver CD

**Driver Installation**

1. Switch on your computer.
2. Connect the adapter to an available USB port of your computer.
3. Afterwards, Windows displays the Hardware wizard.
4. Put the driver CD in the CD-ROM drive.
5. Follow the instructions of the driver installation.
6. Restart the computer after installation of the driver.
7. You can now start to use the device.