


Function Description of Front &Back Panel				
		(6) (c) (c) (c) (c) (c) (c) (c) (c) (c) (c	ī	19 (19)
1 Microphone 1		2 Microphone 2		
Microphone volume adjustment: Turn right to volume up, turn left to volume down. Volume level is 30.				
Microphone echo adjustment: Turn right to echo effect up, turn left to effect down.Effect level is 30.				
Bass adjustment:Turn right to bass effect up, turn left to bass effect down. Effect level is -8 to +8.				
Treble adjustment:Turn right to treble effect up,turn left to treble effect down. Effect level is -8 to +8.				
Volume adjustment: Turn right to volume up, turn left to volume down. Volume level is 30.				
8 TF Card	9 USB		10 LED Display	

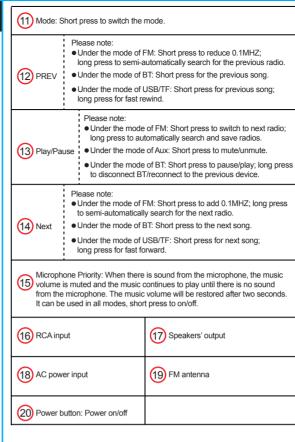

12 PREV	long press to semi-automatically search for the previous radio. • Under the mode of BT: Short press for the previous song. • Under the mode of USB/TF: Short press for previous song; long press for fast rewind.		
long press to au • Under the mode • Under the mode		e of FM: Short press to switch to next radio; itomatically search and save radios. e of Aux: Short press to mute/unmute. e of BT: Short press to pause/play; long press T/reconnect to the previous device.	
	to semi-automaticall Under the mode of I Under the mode of I Iong press for fast fo	FM: Short press to add 0.1MHZ; long press y search for the next radio. BT: Short press to the next song. USB/TF: Short press for next song; orward.	
from the	e microphone. The music e used in all modes, shor	volume will be restored after two seconds.	
16 RCA inp	out	17 Speakers' output	
18 AC power input		19 FM antenna	
20 Power b	outton: Power on/off		

Quick Setup

- 1.Insert the power AC cable to the amplifier.
- 2.Use speaker's wire to connect the speaker's output to your passive speakers.
- 3. Connect the power cable to the socket.
- 4. Press the power button to power on.

Note:Before connecting the power supply, please turn down the volume control to 0 (always to left) to avoid your hearing from damage.

5. Connect the audio source(Aux input/U-Disk input/BT input /TF card input).


Input priority: BT→USB→TF→FM→AUX1→AUX2. no matter in which mode the power is turned off or turned on after standby, the current mode status would be memorized.

Built in BT Player Operation

- 1.Click the volume knob to switch to BT mode.
- 2. Turn on the BT Function in your phone and click: "search settings" on the phone. The device name of AA0530 will be displayed, click to connect and wait for connection. When connect successfully, there will indicate a beep, then you can play music by your phone. You can control the volume both on the phone or on the amplifier&remote.
- 3. When playing the BT music of the mobile phone, the device will stop immediately and turn to phone call mode if there is a phone call.

Remote Control

Infrared remote control working distance: <15 m

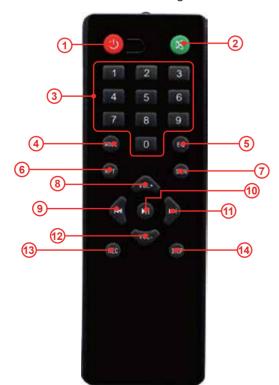

2 Mute/unmute Under the mode of USB/TF: song selection; under the mode of FM: intelligent channel and frequency selection. Mode switch: BT \rightarrow USB \rightarrow TF \rightarrow FM \rightarrow AUX1 \rightarrow AUX2 Under the mode of BT/USB/TF: Switch EQ $(NOR \rightarrow POP \rightarrow ROC \rightarrow JAZ \rightarrow CLA \rightarrow COU)$; under the mode of FM: Switch to the last channel. Under the mode of USB/TF: Play mode $(ALL \rightarrow ONE \rightarrow FOLD \rightarrow RAN)$ TF and USB switch button&under the mode of FM is search channels Volume up Under the mode of BT/ USB/TF is the previous song: long press to rewind the song. Under the mode of FM, it is the frequency band fine-tuning down; long press to search the channels upward. Under the mode of BT/USB/TF is play/pause; under the mode of FM is next channel&long press to search channels; under the mode of AUX1/AUX2 is

(1)

Power on/off

mute/unmute.

- Under the mode of BT/USB/FM is next song & long press to fast forward the song; under the mode 11) of FM,it is the frequency band fine-tuning up & long press to search the channels downward.
- (12) Volume down
- 13 No effect
- Under the mode of USB/TF is to stop the song, press button 10 to restart the song.

Package Contents

Power Amplifier ×1 AC Power Cable ×1

Remote ×1

User Manual ×1

Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty: or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Any expenses relating to the return of your product to the store

will normally have to be paid by you. The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by: Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766 Ph. 1300 738 555