

flow


AA2113

BC8



BONE CONDUCTION SWIMMING HEADPHONES

 USER MANUAL

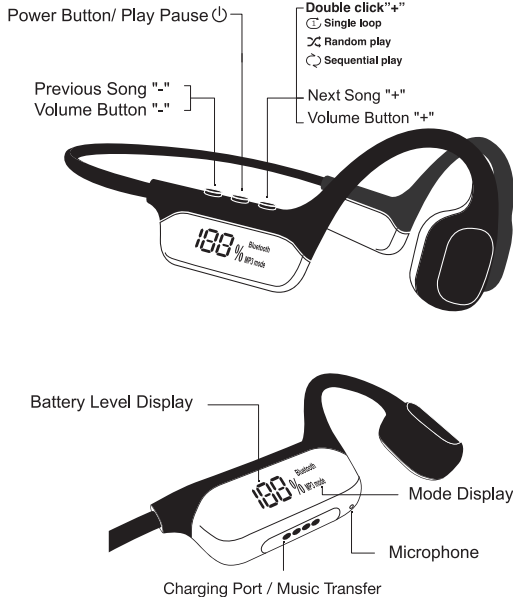

- 1 -

ON/OFF



Power ON: Press and hold the Power Button for 2 seconds until the LCD Screen display Battery Level and MP3 mode with "power on" prompt sound

 
Power Off: Press and hold the Power Button for 2 seconds until you hear the "power off" prompt sound

Bluetooth Pairing

To enable Bluetooth for the first time, you need to manually click on the connection button of your device. The earphones prompt sound is: Bluetooth is connected.

1. In power on state, double-click the power button to switch the headphones to Bluetooth mode, the LCD screen will display Bluetooth mode and with "Bluetooth mode" prompt sound.
2. Open your device's Bluetooth settings and select "FLOW BC8" headphones will say connected.

NOTE:
In order to save power, we have set the earphones to automatically shut down after leaving the Bluetooth range for 30 minutes.

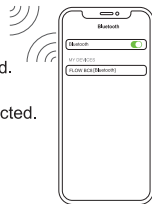

- 2 -

VOLUME CONTROL + -

The volume control has 16 levels. When set to the highest level, a 'maximum volume' sound reminder will play.



Volume Up: In music or call mode, click the "+" button to increase the volume by one bar

Volume Down: In music or call mode, click the "-" button to decrease the volume by one bar

Note: Maxing out your phone's volume does not set the headphones to maximum. Use the '+' button on the headphones to increase the volume further

MULTIFUNCTION BUTTON

1. Play/Pause Music
Click once Power Button to play/pause

3. Answer Call
When in Bluetooth connection /music play, click once Power Button to answers the call when there is an incoming call

5. Previous Song
In music mode, press and hold the "-" button for 2 seconds to play the previous song

2. End Call
under call status, click once Power Button to end call

4. Reject Call
When in Bluetooth connection /music play, long press the Power Button for 2 seconds to reject call when there is an incoming call Button to end call

6. Next Song
In music mode, press and hold the "+" button for 2 seconds to play the next song previous song

- 3 -

7. Voice Assistant:

(After connecting to Bluetooth, while not on a phone call)
Press the power button **three times** to enter voice assistant mode.

To exit, press the power button **three times** again.

Note: For Android: Make sure "Bluetooth headphone button start" is enabled in the voice assistant settings.


For iOS: Background apps must be closed to activate Siri with the headset.

8. MP3 Mode: While in MP3 mode, press the "+" button twice to switch between: Single song loop / Random play / Sequential play

MP3 MODE

The system defaults to MP3 mode when each power on.

1. In MP3 mode, double click the power button to switch to Bluetooth mode, and the LCD screen will display Bluetooth mode and with "Bluetooth mode" prompt sound.
2. In Bluetooth mode, double click the power button to switch to MP3 mode, and the LCD screen will display MP3 mode and with "MP3 mode" prompt sound.
3. The MP3 function supports music in MP3, WAV, WMA, APE format.

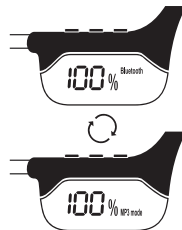

- 4 -

CHARGING

1. When the headphones are charging via the 5V magnetic charging cable, they will automatically turn off and cannot be powered on during charging. The last digit of the battery percentage on the display will flash while charging.
2. When charging, the percentage [100%] means the charged amount is full.



CHARGER AND BATTERY

1. Before using any charger to charge the headphones, please check whether the charger specifications are in line with the requirements (recommended: charger output voltage DC5V +/-0.25V, output current: 100mA-500mA), charging voltage is too high may damage the Bluetooth headphones.
2. Warning: Only use approved chargers with this package, use of other chargers may violate the term of approval and warranty of the device and may result in danger. If the factory is shipped with a charging cable, you need to connect the charger or computer through the 3C certification to charge it. Prohibit serious collision with this product, serious impact may damage the electronic motherboard and battery.

CHARGING THE BATTERY


The headphones uses built-in non-removable rechargeable battery, please do not try to remove the battery from the headphones, so as not to damage the headphones. If a long term non-use headphones, please store it to dry and ventilated place, and charge it every two months.

- 5 -

1. When the headphones connected to show 10% or less, and hear the low battery tone of low battery please charge, that the headphones power is insufficient. if you continue to use it will automatically shut down, then you need to charge.
2. Plug the charger into the AC power outlet.

ADJUSTABLE STRAP (FIXED STRAP)

Function 1: Adjustable Strap to Adjust Size

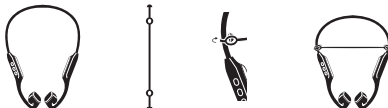


Function 2: Fixed Strap for Swimming

When swimming, using the fixed strap can prevent headphones from falling off due to water flow impact

Connect the headset to your computer using the magnetic data cable. After about 5 seconds, the computer will recognize the headset as a USB drive.

The MP3 function supports music in MP3, WAV, WMA, APE format.

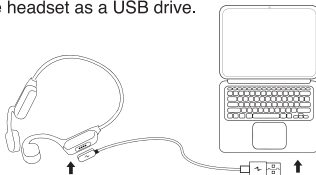

- 6 -

IMPORTANT NOTE

1. Store the headphones in cool and dry place. The working temperature should be 0-45°C (32-113°F). Working in a cold/hot environment or a highly humid area or an extremely low air pressure may reduce the battery life.
2. Keep the product away from heat sources, direct sunlight, combustible gas, fire, high voltage equipment.
3. Keep the charging port dry before connecting to charger will reduce the risk.
4. Avoid dropping, crushing, or exposing the headphones to salt water or corrosive liquids.
5. For optimal performance, position the speakers on your cheekbones, just in front of your ears. Do not place the speakers inside your ears.
6. Listening at maximum volume may cause hearing damage and audio distortion.
7. Warning: Not intended for children under 3 years of age. Contains small parts that may present a choking hazard.

PRODUCT SPECIFICATIONS

Music Play Time	-----	≈ 9 Hours
Standby Time	-----	≈ 10 Days
Charging Time	-----	≈ 2 Hours
Bluetooth Version	-----	5.4
Speaker Impedance	-----	8Ω+3db
Microphone Sensitivity	-----	42 earth 2db
Product Weight	-----	30g
Memory capacity	-----	32G

- 7 -

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.
If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:
Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555