

digitech

Headphones

with Bluetooth Technology & FM Radio



Model:
AA2128

Instruction Manual

CONTENTS

Before First Use	3
Box Contents	3
Features	3
Product Diagram.....	4
Operation	5
Troubleshooting.....	8
Safety	9
Specifications.....	9
Warranty Information.....	12

BEFORE FIRST USE

Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use.

Find a safe and convenient place to keep this instruction manual for future reference.

Unpack the product but keep all packaging materials until you have made sure your new product is undamaged and in good working order. Ensure you have all accessories listed in this manual.

BOX CONTENTS



1 x Headphones



1 x 3.5mm to 3.5mm
Auxiliary Cable



1 x USB Charging Cable

FEATURES

- Bluetooth Wireless Technology
- FM Radio & microSD Card Slot
- Rechargeable Battery
- In-Built Microphone
- 3.5mm Auxiliary Jack

PRODUCT DIAGRAM



Feature		Description
1	Power On/Off	Press and hold for up to 3 seconds to power the unit on or off
2	USB Power Socket	Connect to the USB charging cable and suitable USB power source
3	Volume Down / Previous Track	Press and hold to decrease the volume Press once to skip to the previous music track
4	Play /Pause / Call Button	Press to play or pause while playing music Press to accept, reject or redial last number called
5	Volume Up / Next Track	Press and hold to increase the volume Press once to skip to the next music track
6	Mode Button	Select between Bluetooth, FM Radio & microSD card playing modes.
7	microSD Card Slot	Insert a microSD card up to 64GB
8	3.5mm Auxiliary Jack	Connect to an audio device such as a smart phone using the 3.5mm auxiliary cable
9	LED Status Indicator	Displays the charging and pairing status of the head-phones
10	Microphone	Microphone to use for phone calls

OPERATION

Bluetooth Pairing

1. Press and hold the power button for up to 3 seconds to turn the headphones on.
2. Once the headphones have been turned on; the LED indicator should be flashing red and blue.
3. Open the settings of your smart phone and ensure Bluetooth® is turned on.
4. Once your Bluetooth is enabled; Scan for devices and the Bluetooth name **Digitech AA-2128** should appear.
5. Press the Digitech AA-2128 on the Bluetooth device list and your smartphone should show that it is connected.
6. You will hear a beeping sound from the earphones indicating it is connected. The blue LED will flash slowly. The battery status can also be shown in your Bluetooth settings

NOTE: Pairing will last up to 10 minutes, if you do not finish pairing in this time; then you will need to repeat the pairing process.

Bluetooth® Hands-Free

Function	Button
Answer Incoming Call	Press the call button to answer the current incoming call
Reject Incoming Call	Press and hold the call button for up to 2 seconds to reject the current incoming call
Hang Up Call	Once a call has been received; press the call button again to hang up
Increase Volume	Press and hold the volume up button to increase the volume.
Decrease Volume	Press and hold the volume down button to decrease the volume.
Redial Last Number	Press the call button twice to dial the last number called automatically. Press the button again to cancel the call.

Music Playback

Function	Button
Increase Volume	Press and hold the volume up button for up to 1 seconds to increase the volume.
Decrease Volume	Press and hold the volume down button for up to 1 seconds to decrease the volume.
Pause	Press the play/pause button to pause the current music track
Play	Press the play/pause button again after pausing to resume the current music track
Next Track	Press the volume up button once to skip to the next music track
Previous Track	Press the volume down button once to skip to the previous music track

FM Radio

1. Press and hold the power button for up to 3 seconds to turn the headphones on.
2. Press the mode button once to switch to FM radio mode. You will hear the sound "FM mode".
3. The FM radio station will begin at 87.5MHz.
4. Press the play/pause button to begin automatically searching for a radio station. As soon as a radio station is found; it will stop on that station.
5. Press the play/pause button to keep searching for radio stations.
6. Press the previous or next track buttons to manually switch between frequencies.

microSD Card Playback

1. Press and hold the power button for up to 3 seconds to turn the headphones on.
2. Insert a microSD card up to 64GB into the micro SD card slot.
3. Once the microSD card has been inserted; the music will be played automatically from the microSD card. Alternatively, you can press the mode button until you hear the words "TF Card Music".
4. You can use the play/pause buttons or next and previous tracks while in this mode.
5. The music audio formats supported are MP3 and WAV.

NOTE: The microSD card needs to be formatted to FAT32 or exFAT.

3.5mm Audio Input

1. Insert the 3.5mm to 3.5mm auxiliary cable to the 3.5mm input socket located at the bottom of the headphones.
2. The headphones aren't required to be turned on in this mode. It will automatically play once your device is connected and playing audio.
3. You can now play audio from your device such as a smartphone, tablet, computer or MP3 player.

NOTE: All functions can't operate in this mode such as play/pause, volume adjustment, skipping tracks and the microphone.

LED Status Indicator

LED	Description
Red On	Charging
Red Off	Fully Charged
Blue Flashing	FM Radio & microSD Mode
Red & Blue Flashing	Bluetooth Pairing

Charging

1. Insert the USB charging cable in a suitable 5VDC mains power adaptor (not included) or a suitable USB charging port such as a computer.
2. Insert the micro B USB plug of the USB charging cable into the USB power socket of the headphones.
3. The LED status indicator will light up red once charging has started.
4. Once fully charged; the red LED status indicator will turn off. It takes up to 2 hours for a full charge.

NOTE: It is required to turn off the headphones while charging. .

TROUBLESHOOTING

Problem	Solution
Battery Won't Charge Or Power On	Connect to a suitable USB charging source such as a USB mains power adaptor or USB charging port and make sure it's correctly turned on.
	Make sure the battery is fully charged up to 2 hours and make sure the LED status indicator has turned off.
No Audio	Ensure the volume is correctly turned up on your smartphone if in Bluetooth mode.
	Ensure the earphones are correctly paired and turned on if in Bluetooth mode.
	Turn the earphones off and on again, turn off the Bluetooth of your smartphone or tablet and turn back on.
	Ensure the earphones are in Bluetooth range. They will automatically connect if you come back in range within 3 minutes.
No Power / LED Indicator	Ensure the USB charging cable is connected properly to a USB charging port or a USB charging adaptor.
	Check to see if your USB power source is working correctly.
Bluetooth Won't Pair	Restart the headphones and smartphone, tablet, computer or MP3 player.
	Type in the password "0000" if it asks you for one.
	Make sure the headphones are in Bluetooth mode.
microSD not recognised	Ensure the format of the microSD card is FAT32 or exFAT. Plug it in to a computer to check or change the current format.
	Make sure the capacity of the microSD card is 64GB or below.
	Ensure the microSD card is inserted the correct way.

SAFETY

- Do not open the headphones to prevent the unit from damage.
- Keep the headphones away from high temperatures as it may damage the device.
- Do not expose the headphones to water or liquids to prevent the unit from damage.

SPECIFICATIONS

Bluetooth® Version	4.2+EDR
Transmission Range	Up to 10m
Frequency Response	20Hz-20KHz
Sensitivity	98dB±3dB
Mic Sensitivity	-42dB±3dB
Impedance	32Ω
FM Frequency	87.5-108.0MHz
Playback Time	8-14 Hours
Talk Time	Up to 10 Hours
Standby Time	Up to 180 Hours
Charging Time	Up to 2 Hours
microSD Capacity	Up to 64GB
microSD Format	FAT32/exFAT
microSD Audio Format	MP3, WAV
Battery	Li-Ion 3.7V, 400mA
Power	5VDC, 1A (Micro B USB)
Power Consumption	50mA (Max)
Dimensions	190(H) x 180(W) x 78(D)mm

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555