



Noise Cancelling Headphones
with Bluetooth®
AA-2131
User Manual

BOX CONTENTS

- 1 x Noise Cancelling Headphones
- 1 x Carry Case
- 1 x 3.5mm to 3.5mm Auxiliary Cable
- 1 x USB Charging Cable
- 1 x 3.5mm Mono Airplane Adaptor

FEATURES

- Active Noise Cancellation
- Bluetooth® Wireless Technology
- Rechargeable Battery
- In-Built Microphone
- 3.5mm Auxiliary Jack
- In-Built Controls

 
PRODUCT DIAGRAM



1. Volume Up / Next Track
2. Power / Play / Pause / Call
3. Volume Down / Previous Track
4. LED Status Indicators
5. 3.5mm Aux Input
6. Noise Cancelling On / Off
7. Microphone
8. USB Charging Socket

BLUETOOTH® PAIRING

1. Press and hold the power on/off button for up to 2 seconds. The LED status indicator will flash blue and red alternatively.


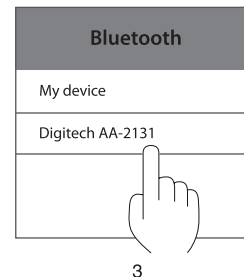


Bluetooth

My device

Digitech AA-2131

  2. Open your smartphone or tablet settings and ensure Bluetooth is enabled.
3. Scan for devices and select "Digitech AA-2131" to pair.
4. It will show in your Bluetooth settings on your smartphone that the device is now connected.

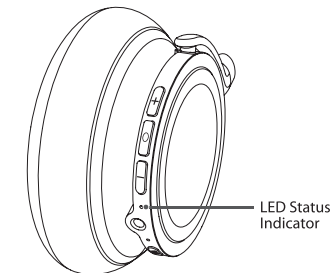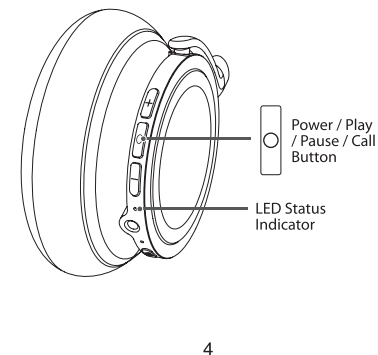

5. The blue LED status indicator will start flashing slowly. This indicates that the Bluetooth connection is successful.

You can now start playing music.

 
Distributed by:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia

Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500

www.techbrands.com

Made in China

CONTROLS

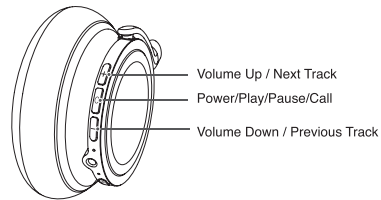

1. Power/Play/Pause/Call Button:

Power: Press and hold the button for up to 2 seconds to turn the headphones on/off.

Play/Pause: Press the button to either play or pause the current track

Incoming Call: When an incoming call is received; press the button to answer the call.

Hang Up Call: Press the button again to hang up the one call once received.

Reject Call: When you have an incoming call, press and hold the button for 1 second to reject.

2. Volume Up / Next Track:

Volume Up: Press the button to turn up the volume

6

 
Next Track: Press and hold the button for one second to skip to next track.

3. Volume Down / Previous Track:

Volume Down: Press the button to turn down the volume

Next Track: Press and hold the button for one second to go back to the previous track.

3.5MM AUX-IN MODE

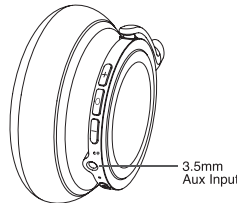


1. Connect the 3.5mm to 3.5mm audio cable to the 3.5mm aux input. Once it is connected, you can now start playing music.

Note: Incoming calls can't be received while playing in Aux In mode.

7

 NOISE CANCELLING

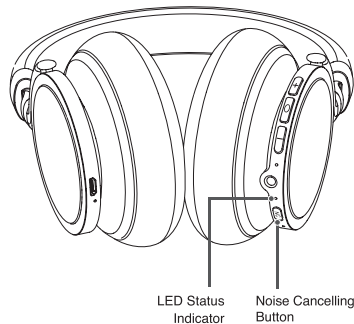

1. Press and hold the noise cancelling button for 1 second to activate the noise cancelling function. Once it has been turned on; the LED status indicator will be green.
2. Press and hold the noise cancelling button for 1 second to turn the noise cancelling off.

8

LED STATUS INDICATORS

LED	Description
Red On	Charging
Red Flashing	Low Battery
Blue On	Fully Charged
Blue Flashing	Bluetooth® Connected
Red & Blue Flashing	Bluetooth® Connecting
Green On	Noise Cancelling On

CHARGING

1. Plug the USB micro B cable into the USB charging socket on the headphones.
2. Plug the USB plug into a 1A USB mains power adaptor or suitable USB charging port on a computer and turn on.
3. The LED status indicator will be red; once the unit has fully charged then the LED indicator will turn off.

9

SPECIFICATIONS

Bluetooth® Version: 4.0+EDR
Transmission Range: Up to 10m
Frequency Response: 20Hz-20KHz
Playback Time:
Noise Cancelling On: 22-30 Hours
Bluetooth® On: 22-30 Hours
Noise Cancelling & Bluetooth® On: 12-14 Hours

Talk Time:

Bluetooth® On: 30-40 Hours
Noise Cancelling & Bluetooth® On: 12-15 Hours

Charging Time: 2-3 Hours

Battery: Li-Ion 3.7V, 500mA

Power: 5VDC, 1A (Micro B USB)

Power Consumption: 40mA (Max)

Dimensions: 200(H) x 142(W) x 80(D)mm

10

TROUBLESHOOTING

No Sound From Headphones:

1. Please check to see if the unit is turned on correctly and the source device such as Aux or Bluetooth is playing correctly.
2. Plug in the USB charging cable and leave connected to power before turning on again.

Bluetooth Won't Connect:

1. Check to see if the device is showing up on the Bluetooth devices list.
2. Turn off the bluetooth settings of your device and disconnect it.
3. Turn on both your device and headphones and try to connect again.

Distorion In Sound:

1. Ensure the audio cable is connected properly.
2. Ensure the battery has enough power otherwise you may need to charge the unit.
3. Try changing the volume.

11

SAFETY NOTICE

1. Keep the headphones away from high temperatures to avoid damaging the battery.
2. Do not expose the headphones to water, moisture or liquid as it may damage the damage.
3. Do not modify or open the headphones.
4. Only clean the headphones with a dry cloth, detergent or liquids may damage the device.

12