

digitech

Wireless Sports Earphones with Bluetooth Technology



**User Manual
AA-2141**

Box Contents:




1 x Wireless Sports Earphones



1 x USB Charging Cable

Product Diagram:

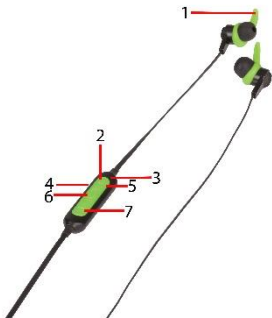

#	Feature	Description
1.	Detachable Ear Hooks	Removable ear hooks that fit inside your ear more comfortably
2.	Microphone	Microphone to use for phone calls which is located on the rear side
3.	LED Status Indicator	Displays the charging and pairing status of the earphones
4.	USB Power Socket	Connect to the USB charging cable and suitable USB power source
5.	Volume Up / Next Track	Press and hold to increase the volume Press once to skip to the next music track
6.	Power/Pairing/Play /Pause / Call Button	Press and hold to power on the unit and pair via Bluetooth Press to play or pause while playing music Press to accept, reject or redial last number called
7.	Volume Down / Previous Track	Press and hold to decrease the volume Press once to skip to the previous music track

Operation:

Bluetooth Pairing:

1. Press and hold the power/pairing button on earphones for 3-5 seconds to turn the earphones on.
2. Once the earphones have been turned on; the LED indicator should be flashing red and blue.
3. Open the settings of your smart phone and ensure Bluetooth® is turned on.
4. Once your Bluetooth is enabled; Scan for devices and the Bluetooth name Digitech AA-2141 should appear.

Bluetooth Name: **Digitech AA-2141**

5. Press the Digitech AA-2141 on the Bluetooth device list and your smartphone should show that it is connected.

6. You will hear a beeping sound from the earphones indicating it is connected. The LED will also stop flashing. The battery status can also be shown in your Bluetooth settings.

Note: Pairing will last up to 3 minutes, if you do not finish pairing in this time; then you will need to repeat the pairing process.

Bluetooth Hands-Free:

Function	Button
Answer Incoming Call	Press the call button to answer the current incoming call
Reject Incoming Call	Press and hold the call button for up to 2 seconds to reject the current incoming call
Hang Up Call	Once a call has been received; press the call button again to hang up
Increase Volume	Press and hold the volume up button to increase the volume.
Decrease Volume	Press and hold the volume down button to decrease the volume.
Redial Last Number	Press the call button twice to dial the last number called automatically. Press the button again to cancel the call.

Music Playback:

Function	Button
Increase Volume	Press and hold the volume up button for up to 2 seconds to increase the volume.
Decrease Volume	Press and hold the volume down button for up to 2 seconds to decrease the volume.
Pause	Press the play/pause button to pause the current music track
Play	Press the play/pause button again after pausing to resume the current music track
Next Track	Press the volume up button once to skip to the next music track
Previous Track	Press the volume down button once to skip to the previous music track

LED Status Indicator:

LED	Description
Red On	Charging
Blue On	Fully Charged
Red & Blue Flashing	Bluetooth Pairing

Charging:

1. Insert the USB charging cable in a suitable 5VDC mains power adaptor (not included) or a suitable USB charging port such as a computer.
2. Insert the micro B USB plug of the USB charging cable into the USB power socket of the earphones.
3. The LED status indicator will light up red once charging has started.
4. Once fully charged; the LED status indicator will change to blue. It takes up to 2 hours for a full charge.

Note: It is suggested to turn the earphones off while charging.

Troubleshooting:

Problem:	Solution:
Battery Won't Charge Or Power On	Connect to a suitable USB charging source such as a USB mains power adaptor or USB charging port and make sure it's correctly turned on.
	Make sure the battery is fully charged up to 2 hours and make sure the LED status indicator has turned off.
No Audio	Ensure the volume is correctly turned up on your smartphone.
	Ensure the earphones are correctly paired and turned on.
	Turn the earphones off and on again, turn off the Bluetooth of your smartphone or tablet and turn back on.
	Ensure the earphones are in Bluetooth range. They will automatically connect if you come back in range within 3 minutes
No Power / LED Indicator	Ensure the USB charging cable is connected properly to a USB charging port or USB charging adaptor.
	Check to see if your USB power source is working correctly.

Safety:

1. Do not open the earphones to prevent the unit from damage.
2. Keep the earphones away from high temperatures as it may damage the device.
3. Do not expose the earphones to water or liquids to prevent the unit from damage.

Specifications:

Bluetooth® Version: 4.2+EDR

Transmission Range: Up to 10m

Frequency Response: 20Hz-20KHz

Sensitivity: 98dB±3dB

Mic Sensitivity: -42dB±3dB

Impedance: 32Ω

Driver Size: 10mm

Playback Time: 2.5-4 Hours

Talk Time: Up to 4 Hours

Standby Time: Up to 50 Hours

Charging Time: 1-2 Hours

Battery: Li-Ion 3.7V, 55mA

Power: 5VDC, 500mA (Micro B USB)

Power Consumption: 20mA (Max)

Dimensions: 550(L) x 25(W) x 22(D)mm

Distributed by:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia
Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500
www.techbrands.com