# digitech

## Rechargeable Wireless Stereo Headphones with Digital Decoding



Model: AA2166

# Instruction Manual

### CONTENTS

Before First Use	3
Warning & Safety Information	3
Box Contents	4
Operating Instructions	4
Specifications	7
Warranty Information	8

#### **BEFORE FIRST USE**

Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use.

Find a safe and convenient place to keep this instruction manual for future reference.

Unpack the product but keep all packaging materials until you have made sure your new product is undamaged and in good working order. Ensure the package contains all the accessories listed in this manual.

It is recommended to charge the headphones for 6-10 hours before first use.

#### WARNING & SAFETY INFORMATION

- Avoid exposure to high temperature and humid environments.
- When not in use for long periods of time, ensure the headphone (receiver) is charged once every 3-6 months. This will help to protect battery life.
- In order to save electricity, switch the power off on the transmitter stand when using the headphone as a wired headphone.
- If headphones are not paired to the transmitter on first operation, turn the power on the transmitter and receiver and press on the headphone switches. The light will turn red on the left side of the receiver, and the audio light will turn blue. With both hands, press the scan button on the headphone and transmitter at the same time, the signal indicator lights of the receiver and transmitter will blink until the headphones make a sound. The headphones should now be paired to the transmitter.
- Check that the headphones are not set to maximum volume before using, in order to avoid damaging your hearing.
- Pay attention to your surroundings, when using the headphones.

#### **BOX CONTENTS**

1 x Rechargeable Wireless Stereo Headphones

- 1 x Transmitter
- 1 x 3.5mm Cable

1 x 3.5mm to RCA Adaptor Cable 1 x TOSLINK Cable 1 x Power Supply

#### **OPERATING INSTRUCTIONS**

1. Connect the power adaptor plug into the relevant DC5V socket on the transmitter, then plug into the 100-240V AC power socket. When powered up, the power light on the transmitter will turn blue. The transmitter stand also functions as a charger for the headphones. The power light will be OFF, if there's no power or the transmitter is switched OFF. See below Pictures.



2. Connect one end of the 3.5mm audio cable to the audio output socket of the hi-fi audio equipment (such as TV, DVD, MP3/ MP4, PC or Mobile). Connect the other end of the audio cable to the audio-in socket on the transmitter. The audio light will turn blue if your hi-fi equipment begins to input the audio signal to the transmitter. Switch the power button switch to 'ON' position. If the receiver is turned off or there is no signal beyond the effective distance, the transmitter signal light will flash and remain on when re-connected. The audio light is blue when the transmitter is on and an audio signal is received. See below picture for reference.

3. Press the power button to switch on the receiver (headphone built-in 800mAh rechargeable Li-ion battery), and the receiver can receive the audio signal from the transmitter. If connected successfully, the audio signal will turn blue, if the receiver is turned off or there is no signal, the audio signal light will turn red. Please see the below image for reference.



- 4. To use the optical fibre cable, unplug the 3.5mm cable from your audio source first, then connect the optical fibre cable from the transmitter to your preferred audio source (with an optical socket).
- 5. If you would like to use the headphone as a wired headphone, simply connect the 3.5mm audio cable from your headphone to your preferred audio source (with a 3.5mm audio socket).



6. Adjust the volume to your preferred level by pressing the VOL+ or VOL- on the headphone



6. If the headphone battery is running low, place the headphone on the transmitter stand to start charging the built-in Li-ion rechargeable battery. The power light will turn red while charging; the power light will turn blue when the headphone (receiver) is fully charged. It is recommended to charge the headphones for 6-10 hours before first use.



### SPECIFICATIONS

Inputs	1 x 3.5mm, 1 x Optical
Power	5VDC @ 500mA
Battery	2.7A 800mAh Li-ion Rechargeable
Weight	242g (Headphones) / 226g (Transmitter)
Dimensions	200(W) x 190(H) x 74(D)mm (Headphones) 235(H) x 112(Dia.)mm (Transmitter)

#### WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by: Electus Distribution Address 46 Eastern Creek Drive, Eastern Creek NSW 2766 Ph. 1300 738 555