

Bluetooth® 5.4 TWS  
**Sports Earbuds**  
with ANC + ENC



Model:  
**AA2232**

Please read and save all instructions to ensure safe and effective use of this product.



R-NZ

# Instruction Manual

# Box Contents



CHARGING CASE



WIRELESS EARBUDS



SILICONE EARTIPS

 


USB CHARGING CABLE



USER MANUAL

## Silicone Eartips

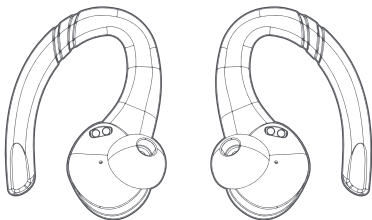

Wear the right size silicone eartips for your ears.  
Adjusting earbuds correctly achieves the best noise  
reduction performance and sound quality.



# Pairing Earbuds

## USING DUAL EARBUDS MODE

AFTER TAKING OUT EARBUDS FROM THE CHARGING CASE, BOTH L&R EARBUDS WILL TURN ON AUTOMATICALLY WITH VOICE PROMPT "POWER ON". SOON AFTER, L&R EARBUDS WILL PAIR AUTOMATICALLY.

 
## USING SINGLE EARBUD MODE

IF YOU ONLY TAKE OUT ONE EARBUD FROM THE CHARGING CASE, IT WILL TURN ON AUTOMATICALLY WITH VOICE PROMPT "POWER ON", AND THE LED INDICATOR ON THE SINGLE EARBUD WILL BLINK RED AND BLUE.

## CONNECT WITH YOUR SMART DEVICE

WHEN YOU HEAR VOICE PROMPTS "POWER ON", AFTER CONNECTED, EITHER ONE OF EARBUDS' LED INDICATOR WILL BLINK RED AND BLUE.

ACTIVATE YOUR SMART DEVICE'S BLUETOOTH AND SEARCH " ". CHOOSE AND CLICK " ", THEN YOU WILL HEAR "BLUETOOTH CONNECTED" VOICE CONFIRMATION. START TO ENJOY MUSIC AFTER YOU FINISHED THE ABOVE STEPS.

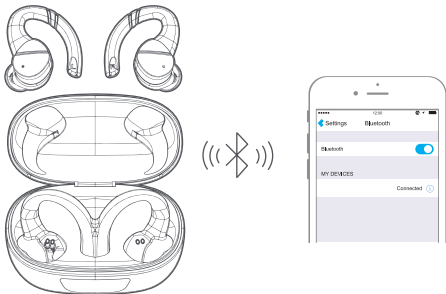

# Operating

## **POWER ON**

AS SOON AS YOU TAKE OUT THE EARBUDS FROM THE CHARGING CASE THE EARBUDS WILL TURN ON AUTOMATICALLY.

## **POWER OFF**

TOUCH AND HOLD EARBUD SENSOR BUTTON FOR 5 SECONDS OR PUT THEM INTO THE CHARGING CASE.

THE EARBUDS WILL POWER OFF AND CHARGE AUTOMATICALLY.

## **ANSWER/HANG UP/REJECT A PHONE CALL**

TO ANSWER AN INCOMING CALL, CLICK EITHER LEFT OR RIGHT EARBUD ONCE.

TO HANG UP A CALL, CLICK EITHER LEFT OR RIGHT EARBUD ONCE.

TO REJECT AN INCOMING CALL, CLICK & HOLD EITHER LEFT OR RIGHT EARBUD.

## **SIRI**

TRIPLE-CLICK THE LEFT EARBUD TO ACCESS SIRI.

## **PLAY/PAUSE MUSIC**

SINGLE-CLICK EITHER LEFT OR RIGHT EARBUD TO PLAY OR PAUSE MUSIC.

## **VOLUME UP/VOLUME DOWN**

DOUBLE-CLICK THE RIGHT EARBUD TO INCREASE VOLUME.

DOUBLE-CLICK THE LEFT EARBUD TO DECREASE VOLUME.

## **NEXT TRACK/PREVIOUS TRACK**

CLICK & HOLD THE RIGHT EARBUD TO GO TO NEXT TRACK.

CLICK & HOLD THE LEFT EARBUD TO GO TO PREVIOUS TRACK.

## **ANC MODE (ACTIVE NOISE CONTROL)**

TRIPLE-CLICK THE RIGHT EARBUD TO SWITCH BETWEEN

**NOISE CANCELLING MODE, AWARE MODE & STANDARD MODE.**

# Touch Controls

**LEFT**



**RIGHT**



**PLAY / PAUSE MUSIC**

EITHER BUTTON - CLICK ONCE

**LEFT**



**RIGHT**



**VOLUME UP +**

RIGHT BUTTON - DOUBLE CLICK

**VOLUME DOWN -**

LEFT BUTTON - DOUBLE CLICK

**LEFT**



**RIGHT**



**NEXT TRACK ►►**

RIGHT BUTTON - CLICK & HOLD

**◄◄ PREVIOUS TRACK**

LEFT BUTTON - CLICK & HOLD

**LEFT**



**RIGHT**



**ANSWER A CALL**

EITHER BUTTON - CLICK ONCE

**END A CALL**

EITHER BUTTON - CLICK ONCE

**REJECT A CALL**

EITHER BUTTON - CLICK & HOLD

**LEFT**



**SIRI**

LEFT BUTTON - TRIPLE CLICK

**RIGHT**




**SWITCH MODE**

RIGHT BUTTON - TRIPLE CLICK TO SWITCH  
BETWEEN NOISE CANCELLING MODE /  
AWARE MODE & STANDARD MODE


# Charging Earbuds & Case

 **FIG.1**

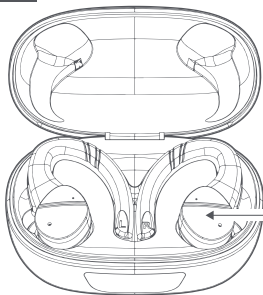

- PLACE EARBUDS INSIDE THE CHARGING CHAMBERS OF THE DOCKING CASE. EARBUDS WILL LIGHT UP TO ENSURE AN ACCURATE CHARGING CONNECTION.

 **FIG.2**



## NOTE:

The earbuds will require up to 2 hours docked in their charging case to recharge their batteries. When fully powered, the portable case will provide the earbuds with up to 5 additional charges. Using your earbuds at lower volumes will help prolong the battery life between charges.



USE TYPE-C USB CABLE TO CHARGE YOUR DOCKING CASE

## Case at full power



- 1 INSERT THE EARBUD'S INTO THEIR CORRESPONDING CHARGING CHAMBERS IN THE CASE, RESPECTIVELY MARKED L & R **[FIG 1]**.
- 2 MAGNETIC CHARGING CONNECTORS SHOULD LOCK EARBUD'S SECURELY INTO CHARGING CHAMBERS. CLOSE THE CASE.
- 3 INSERT THE INCLUDED TYPE-C USB CHARGING CABLE INTO THE BOTTOM OF THE CHARGING CASE AND CONNECT TO A POWER SOURCE (SUCH AS A POWER BANK, AC WALL ADAPTER, ETC. [AC POWER SOURCE NOT INCLUDED]) **[FIG 2]**.
- 4 THE LED DIGITAL SCREEN WILL SHOW YOU THE BATTERY LEVEL WHILE THE CHARGING DOCK IS CHARGING. WHEN COMPLETE THE DIGITAL SCREEN WILL SHOW NO.100 .
- 5 WHEN THE EARPHONES BATTERY IS FULLY CHARGED, THE RED LIGHT WILL TURN OFF.

 


## Earbuds

- ① MULTI-FUNCTION BUTTON
- ② LED INDICATOR
- ③ MICROPHONE



LED CHARGE  
INDICATOR


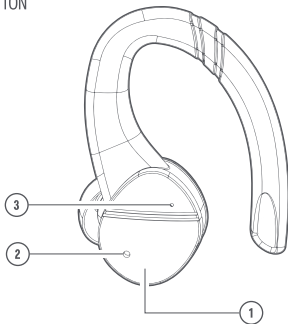


## Charging Case

- Ⓐ SMART LED SCREEN
- Ⓑ TYPE-C USB CHARGING PORT



  SMART LED SCREEN  
CHARGING INDICATOR

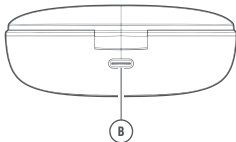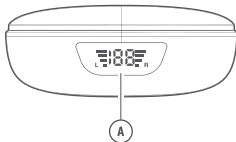

# Specifications

## GENERAL:

---

**BLUETOOTH VERSION:** 5.4

**WIRELESS DISTANCE:** UP TO 33FT / 10M

**SENSITIVITY:** 100dB±5dB at 1 KHz

**FREQUENCY RESPONSE:** 20 Hz-20 kHz

**DRIVER:** 10MM

## EARBUDS:

---

**RUNTIME:** UP TO 5 HOURS

**CHARGE TIME FOR EARPHONE :** ABOUT 2 HOURS

**EARBUD BATTERY CAPACITY:** 30 mAh

## CHARGE CASE:

---

**EXTRA RUNTIME:** UP TO 25 HOURS

**STAND-BY TIME:** UP TO 60 HOURS

**CASE BATTERY CAPACITY:** 200 mAh

**CHARGING PORT:** USB TYPE-C

**CHARGING INDICATOR:** SMART LED SCREEN

## Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure. To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555