Bluetooth® TWS Earbuds

with Solar Charging Case




Instruction Manual

Please read and save all instructions to ensure safe and effective use of this product

Instruction Manual

Left earphone Right earphone

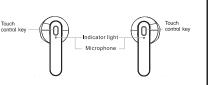

PARAMETER		
Model	AA2234	
Bluetooth version	BT 5.3	
Signal distance	12m	
Charging case battery	200 mAh	
Earphone battery	30mAh	
Playback time	Up to 5h	
Standby time	>200h	
Charging time	Up to 2h	
Charging box voltage	DC 5V	
Supported cell phone systems	IOS, Android	

KEY DEFINITION

Power on	Press and hold the touch control key for 5s or take out of the charging case	the red and blue lights flash with prompt tone of "Power on"
Power off	Press and hold the touch control key for 5s or put it into the charging case; if there is no connection for 3 minutes, it will be automatically shut down.	The red light flashes for 3 second and goes out with prompt tone of "Power off"
Answer calls	Click the key	
Hang up calls	Click the key	
Reject calls	Long press	
Cancel dialing	Click the key	
Play / Pause	Click the key	
Volume +	Double-click the button on the right headset	Prompt tone "du"
Volume -	Double-click the button on the left headset	
Previous track	Long press on the left earphone	
Next track	Long press on the right earphone	
SIRI	Three clicks	•
Last number	Four dicke	


 Incoming call: Headphones and headphones play the ringtone of the phone, and the volume synchronization function is turned on; At the end of the call, the music resumes playing, and the music pauses when the voice assistant is activated.

CHARGING MODE





*Push back and forth to open and close the cover. Putting the earphone in and out of the battery compartment

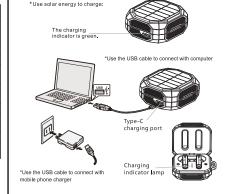

	Earphone charger mode	When the earphone is put into the charging box, it starts to charge and lights red. When fully charged, the red light will go out.
	Charging case charging	(1)LED1, LED2, LED3 and LED4 are successively turned on (white light); The four white lights are on after being fully charged, when the charging case is disconnected, the power indicator light will go out after staying on for 3s. (2)The charging indicator lights up in white when charging, and goes out when fully charged.
	Earphone low battery	When the battery voltage is lower than 3.4v, turn it off after the prompt tone "LOW Battery" is sounded for three times.


Earphone pairing and Bluetooth connection

Press and hold the Power keys of both as a

	Pairing mode	earphones for 5 seconds, or take them out from the charging case, to turn them on, and the red and blue lights of both earphones flash after turning on. Then both earphones will enter TWS pairing mode. If not paired within 3minutes, it will turn off automatically.	After the paining is successing the accessory ear no lig flashes, The red and blue lights on the main ear flash alternately Prompt tone "Pairing"
	Connecting Bluetooth devices	Search the earphone in Bluetooth settings on the cell phone and connect	Prompt tone of "Connected". After successfully connecte the lights on the earphone flash
	Disconnect Bluetooth	Connect the Bluetooth device to the headset beyond the distance or disconnect (turn off) Bluetooth; after Bluetooth is turned on again, support the automatic back connection between Bluetooth and mobile place.	Prompt tone of "Disconnect". The red and blue lights of the main headset flash quickly, No flicker of the headset

- Romarke:
- 1. Bluetooth search name "AA2234" 2. When playing music, put it in the charging box. At this time. the earphone and the mobile phone will be disconnected and the earphone will be turned off. Open the charging box again,
- take out the earphone and turn it on automatically.
- Automatically connect the mobile phone when it is turned on.

 If it cannot be automatically connected back, you can connect it
- back by pressing it briefly. 4. If the headset can't be connected to the mobile phone, please

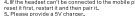











Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is

faulty; or not fit for intended purpose. This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label;

change of mind and normal wear and tear. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a

major failure. To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Flectus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766



