digitech

2-in-1 Bluetooth® 5.3 TWS Earbuds and Speakers Combo



Model: R-NZ AA2236

Please read and save all instructions to ensure safe and effective use of this product.

Instruction Manual

Left earphone Right earphone Button -Microphone

diophone	meropriorie		Answer calls	Click L/R ear function keys to listen/hang up	
		H	lang up calls	Click L/R ear function keys to listen/hang up	
		ΙF	Reject calls	Long press L/R ear function keys for 2 seconds to refuse	
5.5.	LIETED		SIRI	Long press L/R ear 2 seconds function keys	
PARAMETER		F	Play / Pause	Click L/R ear function buttons	
uetooth chipset	JL 6973D4 5.3		Previous track	Double -click L. last song	
eaker chipset	JL6965E4 5.3	1 H		Double -click R Next Song	
rphone battery	30mAh		volume"+"	Three -click R plus sound volume	
narging Case Battery	1200mAh	Ιŀ	volume"-"	Three -click L reduction	
eadphone speaker size	13mm	-			
peaker	50mm 4 ohm 5W	ΙL	BL	LUETOOTH PAIRING AND CONNEC	CTION
gnal-to-noise ratio	85db (headphones)	F	Pairing mode	After turning on, automatically enter the pairing state, and turn off without connection for 5 minutes	White lights flickered alternately
ensitivity	95±5db (headphones)	П	connect	Open the mobile phone Bluetooth and search for the "K086 Earbuds" device name, Click the pairing name	
eadphone playback time	4-5h	╽┟		connection	
eaker charging time	2-3h	П	Turn off	When the headset is connected to the mobile phone Bluetooth state, the mobile phone is turned off the	
eadphone material	ABS	П	Bluetooth	Bluetooth/canceled pairing, Shut off for 5 minutes without matching	
eaker material	ABS + cloth + silicone		Beyond	The over-distance disconnection is equivalent to Bluetooth. In the case of no connection, 5 minutes Automatically shut down, you can automatically connect to your mobile phone in these 5 minutes	Headphones white light flash

START USING

Match and connection Enter the pairing state of the headset.

Long press the function button for 5 seconds to shut down or put in the charging box headset to automatically shut down The host white Enter the TWS mode after the headset is turned on:

KEY DEFINITION

Long press the function button for 3 seconds to turn on or leave the charging warehouse

(enter the connection rangelnside, automatically

return to the phone)

light flash, Another headset extingui the lamp

3. Open the mobile phone Bluetooth, search for

"K086 Earbuds" device name, click the pairing name connection

automatically match each other and enter the TWS

2. The white lights flickered alternately:

4. Excerant the Bluetooth Bluetooth is broken. If you return to the Blue number within 5 minutes, automatically return to the Blue number. If it exceeds 5 minutes automatically shut down (the headset white light flash)

CHARGING MODE



*Open the lid up and down, put and remove the battery compartment

_-. _

Settings Bluetooth

DENKES Q

 


 
SPEAKER FUNCTION DEFINITION

	DEFINITIO	N OF SPEAKER BUTTO	NS			
Power on	Long -press function	RGB lights flash				
Power off	Long -press function ⊳ button to shut down in 5 seconds					
Pair	After turning on, automatically enter the pairing state, and turn off without connection for 5 minutes Working blue light flash					
Bluetooth model	Play / Pause	Short press ⊳ pause/play				
	Answer calls	Short press ⊳ to answer/hang up				
	Hang up calls	Long press ⊳ 2S Hang the phone				
	SIRI	Press consecutive short press ▷ 2 times				
	Up/next song	Short press - /+: Switch the previous /Next song				
	volume + / -	Long press + /-: add /sound reduction				
FM model	Search channel	Press ▷ 1 times				
	Exit the search channel	Press again ▷ once				
	Switch up/down channel	Short pressing +/-: Switching/previous channel				
	volume + / -	Long press + /-: add /sound reduction				
TF card USB Play	Up/next song	Short press - /+: Switch the previous /Next song				
	volume + / -	Long press + /-: add /sound reduction				
Function switch TF card/usb Play/Bluetooth mode/fm		Short press "M" once every time				
RGB light switch/ Turn off RGB		Long press "M" 2S				



SPEAKER CHARGING MODE















Consumer Law in relation to the goods or services to which this warranty relates.

major failure.

WARRANTY INFORMATION

defects for a period of 12 Months.

faulty; or not fit for intended purpose.

will normally have to be paid by you.

change of mind and normal wear and tear.

Our product is guaranteed to be free from manufacturing

If your product becomes defective during this period. Electus

Distribution will repair, replace, or refund where a product is

This warranty will not cover modified product; misuse or abuse

of the product contrary to user instructions or packaging label;

for any other reasonably foreseeable loss or damage. You are

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian

also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a

Our goods come with guarantees that cannot be excluded

under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation

This warranty is provided by: Electus Distribution Address 46 Eastern Creek Drive, Eastern Creek NSW 2766 Ph. 1300 738 555