

# 2-in-1 Bluetooth® 5.4 TWS Earbuds with 5000mAh Power Bank



Model:  
AA2238

Please read and save all instructions to ensure safe and effective use of this product.

Instruction Manual

digitech

## Specifications

- Bluetooth version-----V5.4
- Transmission distance-----10m
- Horn diameter-----Φ13mm
- Horn impedance-----32Ω
- sensitivity-----103±3dB
- Frequency response range-----20Hz-20kHz
- Battery capacity (charging box)-----5000mAh 3.7V
- Battery capacity (Headphones)-----25mAh 3.7V
- Charging time (Charging box)-----≈3 hours
- Playback time (headphones)-----≈4-5 hours

### Indicator guide

mode	Description	Voice prompt
Power on	The green indicator of the headset blinks three times	"Power on"
Power Off	The red indicator on the headset is on for 1S and off	"Power off"
pairing	The green and red indicators of the headset are blinking alternately	"Pairing"
join	Headphone light off	"Connected"

mode	Description	Voice prompt
disconnect	The green and red indicators of the headset are blinking alternately	"Disconnected"
Earphone low battery	The red indicator on the headset blinks rapidly	"Battery low"
Box charging	When charging compartment is charging, the single digit blinks and the full light is on	—
The charging case is low	Charging bin digital display 0 low power display, need to charge	—

## Usage Instructions

### 1. Power on


Method 1: Remove the headset from the warehouse and turn it on automatically  
Method 2: Hold down the functional touch button for 3 seconds to power on the headset.

### 2. Power Off

Method 1: Put the earphones back into the charging bin and turn off the earphones.  
Method 2: When the headset is not connected to the Bluetooth device, hold down the functional touch button for 6 seconds to power off the headset.  
Method 3: After disconnecting from the Bluetooth device for three minutes, the headset automatically shuts down.

### 3. pairing

 Step 1: Automatic pairing of Bluetooth headset on startup  
Step 2: Open the Bluetooth list of smart devices, search for "K0307" to pair, after successful connection, you will hear the "Connected" tone  
\* Beyond the distance, within 3 minutes of disconnection, return to the effective distance and automatically connect the device.

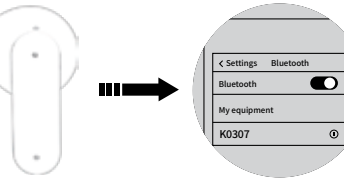

### Attention:

- \* If the product is not used for a long time, it should be fully charged and ensure that the device is turned off.
- \* After charging, remove the charging cable to avoid damage caused by prolonged charging.

## Touch key operation

### Conventional mode

- Voice assistant: Four clicks left earphone MFB
- Volume Plus: Press and hold 1.5 left earphone MFB
- Volume down: Press and hold 1.5 right earphone MFB

### Music playback mode

- Pause/Play: Double click the left/right headset MFB
- Previous: Three hits left earphone MFB
- Next: Three hits right earphone MFB

### Hands-free phone

- Answer: Click left/right earphone MFB
- Hang up: Click left/right headset MFB
- Reject: Press and hold left/right earphone MFB for 1.5 seconds

### Game mode/Music mode switch: Connected device

 
- Four hits right ear MFB enter game mode
- Four hits right ear MFB into music mode

## Factory Data Reset


Clear pairing information: Five clicks left/right MFB, TWS pairing and phone connection records

## Product specification

### Function Press key light position indicator chart

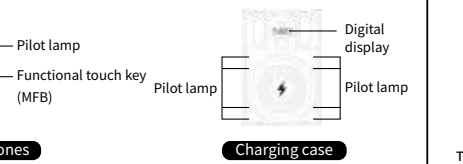


### Charging bin key guide

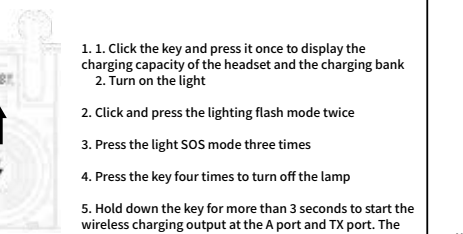 

## Charge the charging bay

 
Connect the charging bay to the 5V power adapter with the Type-C charging cable.

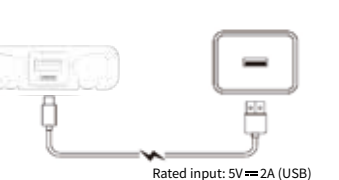

Tips: Charging bin digital display 0 low power display, need to charge.

### Charge your phone

 Connect the phone to the power bank with a Type-C charging cable.

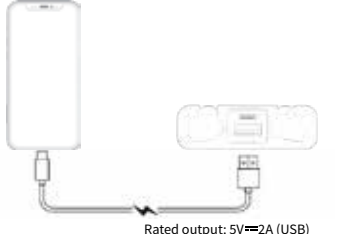

Warm tips: Pay attention to long press the button for more than 3 seconds to start the A port and TX wireless charging output, otherwise it will cause no charging.

## Magnetic wireless charging



Tips: Charging bin digital display 0 low power display, need to charge.

## Packing list

Headphones *2	Charging bay *1
Instruction manual *1	Type-C Charging cable *1

## Warnings

- After the charging box is opened, the earphone will automatically turn on, pair and connect without any button; Put the earphones in the charging case and cover them, and charge themThe case will automatically charge the headset and the headset will turn off.
- Regular cleaning, long life, if not used for a long time, it is recommended to charge once every 15 days to extend battery life, and the charging part of the headphone tail plug is oftenWipe with cotton swab alcohol, can help smooth charging, avoid bad contact, affect the use experience.
- The battery (battery pack and battery combination) shall not be exposed to lighting, baking or similar overheating environment. Do not disassemble, impact, squeeze orPut it in the fire. If severe swelling occurs, do not continue to use. Do not place in high temperature environment, do not use after soaking in water.
- Because this product adopts wireless connection mode, in the daily use process, it is affected by factors such as environment, mobile phone brand, and use behaviorin the process of playing music, there will be a brief, slight sound delay is normal.

### Warnings

- Using headphones at high volume for a long time may damage your hearing. It is recommended to listen to, talk to, and listen to music only at an appropriate volume.
- Please do not wash or immerse the product in water to avoid failure.
- Do not disassemble products and accessories by yourself, so as to avoid damage and warranty invalidation.
- Do not make the product subject to strong shock or vibration to avoid damage.
- Do not use chemical solvents or cleaning agents to clean the product.

Name of the Parts Part name	Hazardous Substances Harmful substance					
	Pb lead	Hg mercury	Cd cadmium	Cr(VI) Hexavalent chromium	PBB Think of biphenyls	PBDE Polybrominated diphenyl ethers
Housing shell	O	O	O	O	O	O
Loudspeakers Horn unit	O	O	O	O	O	O
PCBA Board assembly	X	O	O	O	O	O
Accessories Power cord, connecting cable	X	O	O	O	O	O

This table is compiled according to SJ/T 11364.  
This form is prepared in accordance with SJ/T 11364.

O: Indicates that this hazardous substance contained in all of the homogeneous materials for this part is below the limit requirementin GB/T 26572.  
O: Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirements specified in GB/T 26572 standard.  
X: Indicates that this hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.  
X: indicates that the content of the hazardous substance in at least one homogeneous material of the part exceeds the limit required by the GB/T 26572 standard.

## Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.  
If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.  
This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.  
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.  
To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.  
Any expenses relating to the return of your product to the store will normally have to be paid by you.  
The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:  
Electus Distribution  
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766  
Ph. 1300 738 555