

digitech

Bluetooth® TWS Earbuds with Powerbank



Model:
AA2246

Please read and save all instructions to ensure safe and effective use of this product.



Instruction Manual

Specifications

Bluetooth version : V5.4

Wireless distance : 10 meters

Charging time : 1-2 hours

Charging port : type-c

Usage Instructions

Power on : Take the earphones out of the charging case

Power off : Long press the multi-function button for 5S or put the earphones back into the charging case

TWS pairing : automatically paired when the product is turned on for the first time.

TWS using : 2 earphones can be used together and can be used alone

Pause/Play : Click the multi-function button

Previous song : Double-click the left multi-function button

Next song : Double-click the right multi-function button

Volume up : Triple-click the right multi-function button

Click four times on the left and right ears to switch ANC mode

Volume down : Triple-click the left multi-function button

Answer an incoming call : Click the multi-function button

Voice assistant : Long press the multi-function button for 2S

Reject calls : Double click to reject the call

Battery display : only supports ISO system devices and some Android system devices

Intelligent dormancy mode : when there is no connection, it will automatically power off in about 3 minutes.

Automatic connection : After the earphones are turned on again, Bluetooth will automatically reconnect to the phone.

Automatic power-off : Earphones will automatically power off when put back into the charging case to charge

Charging case charging: When the data cable is inserted into the seat to charge, the digital display is mobilized, and the digital display is 100 when it is full

Earphone charging: put the earphones back into the charging case to charge.

Precautions

1. Do not treat this product violently, and do not squeeze it with heavy objects, and keep it away from high temperature and high humidity environment.

2. Keep away from WIFI, routers and other high-frequency transmitting equipment, which will affect the signal reception of this machine, causing sound jamming and disconnection.

3. Please use this product in an effective environment (within 10m), and there should be no physical obstruction (such as a wall, etc.) between the Bluetooth device and the product.

4. In order to prevent charging failure due to battery hibernation, please try to keep the charging case above 20% of the power.

Note : This product can be connected with any device with Bluetooth function

Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure. To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555