

digitech

 
Bluetooth® TWS Sport Earbuds

with ANC + ENC



Model:
AA2248

Please read and save all instructions to ensure safe and effective use of this product.



Product parameters

- ◎Wireless version: V5.4
- ◎Working range: barrier-free 10 meters
- ◎Wireless frequency: 2.402-2.480GHz
- ◎Charge and discharge cycle: ≥300 times
- ◎Charging box capacity: 300mAh
- ◎Charging voltage: DC5V-1A
- ◎Charging time: 2 hours
- ◎Talk time: about 4 hours
- ◎Play music: about 5 hours
- ◎Headphone built-in battery: lithium battery 3.7V, 35mAh

Note: The specifications and parameters of this product are all laboratory test data, which will be different in different environments; the product is constantly being upgraded and improved, and the specific functions and product pictures may be slightly different from the actual product, please refer to the actual product.

【1】

Basic operation Settings on the touch screen: Double click light screen (Swipe right to unlock)

1. Previous song/play/next song
2. Volume up/down
3. Close/reduce noise/transparent
4. Equalizer (Standard, rock, pop, classic, Jazz)
5. Timer alarm clock (short timer)
6. Screen brightness adjustment
7. Multilingual switching
8. Replace the wallpaper on the lock screen
9. Find my earphones (they make a jarring sound for easy finding)
10. Time/date setting
11. Next video Like the previous video
12. Take pictures (click the phone to take pictures from a distance)
13. Light (lit at night)

14. Warehouse button function: light up/turn off the screen; Press and hold for 10 seconds to restart
Open the cover, first headset pairing: quickly press the button 3 times;
Then pair the headset with the pod: press the button three times quickly
Activate the screen: Insert the charging cable for about 3 seconds to activate the screen

15. Double click the warehouse button: the "Power off, restart, restore factory settings" interface will pop up

【2】

Earbuds operation method

- Power on: open the cover turn on
- Power off: Put the earphone into the charging box, and close the charging box cover to turn off
- Play/Pause: Touch the L/R ear once;
- Previous: Touch L/R ear three times Next: Touch L/R ear twice;
- Volume increase or decrease: Up/down to adjust the volume
- Noise reduction/off/transparent switching: Long press L ear for 2s
- Wake up Voice Assistant /siri: Long press R ear for 2 seconds;
- Ear detection is on by default, off/on: Touch the L/R ear five times in a row
- Answer/hang up: touch the L/R ear once;
- Refuse to answer the phone: Long press the L/R ear touch area for 2 seconds;
- Charging bay display display incoming call prompt: can reject/answer


basic skills

- Single ear use: Open the charging box and start up automatically. After the connection is successful, remove the single ear and cover the charging box cover to use the single ear function

【3】

- Automatic reconnection: When the phone does not delete the connected pairing name, Open the lid to automatically connect back, no need to repeat the connection

Charging panel display status

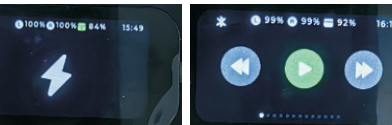

Charging: The charging symbol and power percentage ratio are displayed on the display; When full: the percentage ratio is 100%, (about 2 hours);

On the display screen of the charging case, the connection symbol between the headset and the bin is displayed, the L/R ear power percentage ratio is displayed, the bin power percentage ratio is displayed, and the time is displayed.

【4】

Universal wireless connection operation

1. Please put the wireless headset and mobile phone (or other connected devices) together;
2. Make sure the headset is powered on, open the charging box cover or remove the headset from the charging box, make sure that the left and right headsets are connected, the headset can enter the pairing mode;
3. Turn on the Wireless function of the user's mobile phone (or other Wireless device), and search or scan. At this time, the mobile phone will search for all nearby Wireless devices. Click the corresponding Wireless model name to connect. After successfully pairing and connecting, you can make a headset call, Listening to songs, etc.

Considerations when connecting wirelessly

1. Please control the distance between the wireless headset and the mobile phone (or other connected equipment) within 1 meter, the closer the better;
2. You can put the earphone in the charging box and open the charging box cover to connect;

【5】

3. When the headphones are removed from the charging box and connected, make sure that the left and right headphones are connected;
4. Do not close the charging box cover during the connection process;
5. The charging box needs to have enough power. If the headphones cannot be turned on when the cover is opened, put the headphones in the charging box, close the cover of the charging box and plug in the charger to charge for at least one hour;

Precautions

1. Never use corrosive cleaning agents to clean this product;
2. Do not allow this product to heat or come close to fire sources, such as cooking stoves;
3. Do not expose this product to direct sunlight for a long time to avoid high temperature;
4. Do not dispose of this product in fire to avoid explosion;
5. Do not try to disassemble this product to make any modifications, because it does not contain any maintenance components;
6. Do not use this product in the rain;
7. If you do not plan to use this product for a long period of time, please store it in a dry environment. And charge the headset at least once a month to extend the life and avoid extreme temperatures and dust.

【6】

Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.
If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.
This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.
Any expenses relating to the return of your product to the store will normally have to be paid by you.
The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:
Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555