

Parabolic Microphone

with Digital Audio Recorder & Headphones



Model:
AM4040

 
Please read and save all instructions to ensure safe and effective use of this product.

Instruction Manual

PRODUCT OVERVIEW



- A: Microphone
- B: Parabolic Dish
- C: 8X Power Viewer
- D: Viewer Focusing Ring
- E: On/Off Switch
- F: Record Button
- G: Playback Button
- H: Frequency Control
- I: Headphone Jack
- J: Deluxe Headphones

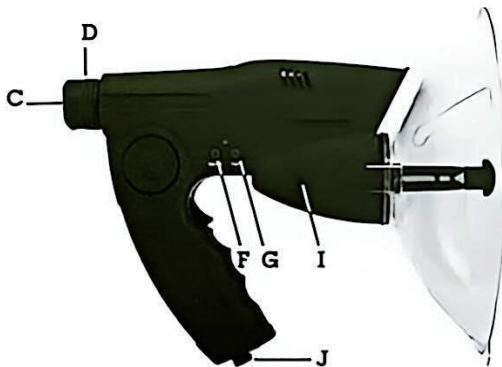

WARNING

Do not aim the product directly at the sun or bright light while looking through the viewer lens. This may cause serious irreversible damage to eyesight. Adult supervision is strongly advised while children are using this device.

INTRODUCTION

The product is a versatile device for which you will soon find a variety of uses.

It is ideal for studying birds and wildlife. The powerful viewing optice make subjects appear 8 times closer.

The sound detecting system is powerful enough to pick up a human conversation at a distance of 100 meters or more. Faint bird songs are readily detected.

Recordings can be made on the digital recording chip for playback or for transfer to a standard tape recorder.

Each record time is 12 seconds!


BATTERY INFORMATION

- This unit uses one 9 Volt battery. (not included)
- Always use a fresh battery.
- If the unit will not be used for an extended term, remove the battery.
- Do not try to recharge a non-rechargeable battery.
- Do not take a battery apart.
- Do not short circuit the terminals.
- Do not dispose of battery in fire, it may explode.

NOTE

We constantly improve and update our products. Sometimes, as a result of these improvements, what is seen on the package or in the instructions may differ somewhat in color and content from the product inside the package.

 Picture 1

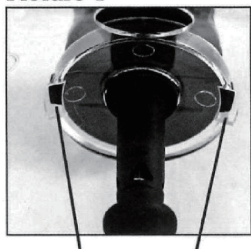


LOCKING TABS

ASSEMBLY

1. Carefully remove the components from the box.
2. The parabolic dish should be oriented so that the two support stands are on the bottom and the viewer hole is at the top of the dish.
3. The transparent parabolic dish is attached to the front of the product by squeezing gently on the two tabs at the front of the unit and pushing dish over the two locking tabs as shown in Picture 1.

 Picture 2

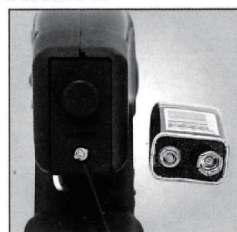

UNSCREW HERE

BATTERY INSERTION

1. This unit is powered by one 9 Volt alkaline battery. (not included)
2. Using a Phillips head (+) screwdriver, loosen the screw and open the battery compartment cover (See Picture 2).
3. Insert a fresh 9 Volt battery and snap the (+) and (-) terminals to the unit's battery clip. Do not try to reverse the terminals. The battery will only fit one way.
4. Close the battery compartment cover and tighten the retaining screw.

The unit is now ready for use.


THE VIEWFINDER

The product uses a sophisticated 8 power roof prism optical system (see Picture 3). Objects appear 8 times closer than seen by the unaided eye.

Look towards the subject you wish to observe and turn the focusing ring until you see clearly.

The viewer is equipped with a fold-down rubber eyecup. When this eyecup is rolled down eyeglass wearers will be able to see the entire viewing area.

 Picture 3

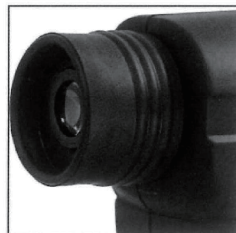

USING THE LISTENING FUNCTION

1. Plug the headphone into the head phone jack (see Picture 4).
2. Aim the unit at the desired subject.
3. Squeeze the on/off switch. You will now hear an amazing wealth of amplified sound.

Picture 4



HEADPHONE


THE FREQUENCY CONTROLLER

When you are listening to amplified sounds you may notice that unwanted background noises, such as the rumble of traffic, are annoyingly loud.

The frequency controller (see Picture 5) can reduce these unwanted sounds.

While listening, simply turn the frequency controller dial until you achieve the desired noise reduction.

 Picture 5

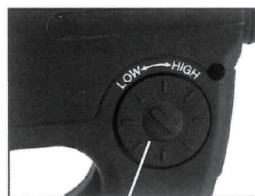

FREQUENCY
CONTROL

SOUND RECORDING


Your product is equipped with a digital recording chip that can capture approximately 12 seconds of sound.

To activate the recording function, simply push the RECORD button (Picture 6) on the right side of the unit. A red LED light stay lit while the recording is taking place.

To hear the recorded sound press the PLAY button (see Picture 6). The sound will be heard through the headphones.

When you push the RECORD button again you will lose any previously recorded sound.

 Picture 6

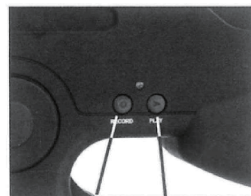

RECORD
AND PLAYBACK
BUTTONS

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555