



DIGITECH
Audio



**User Manual
Compact Megaphone
with Siren
AM-4041**

SPECIFICATIONS

Power Output:	10w
Voice Range:	0.2 km
Power Source:	4 x C Batteries
Battery Life:	8-10 hrs.
Microphone:	Unidirectional
Dimensions:	Horn Width 135mm, Depth 230mm
Weight:	0.7 kg (Excluding Batteries)

OPERATION

1. Open the Back Cover by pressing the Open Button.
2. Insert 4 x C-Size Batteries then close the back cover until it locks. Now your megaphone is ready for action.
3. To activate the megaphone, press the ON/OFF Button on the Back Cover.
4. When using the megaphone, place your lips as close as possible to the megaphone.
5. Adjust the Volume Control to the desired level without causing any howling or feedback.
6. Press Music/Siren button to play music/siren. To switch off the music/siren, press the same button again, or press the ON/OFF button.

PRECAUTIONS

- Ensure correct polarity of Cells. Insert the batteries in the correct direction by aligning the (+/-) marks on the batteries with the spring in the back cover.
- When the megaphone is not in use for a long period, remove the batteries.
- Drained batteries will not give sufficient sound volume.
- Replace batteries at regular intervals, for optimum performance.

Distributed by:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia

Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500

www.techbrands.com

Made in China