

**digitech**

# Dual Wireless UHF Microphone System



Model:  
**AM4132**

# Instruction Manual

## BEFORE FIRST USE

Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use.

Find a safe and convenient place to keep this instruction manual for future reference.

Unpack the product but keep all packaging materials until you have made sure your new product is undamaged and in good working order. Ensure you have all accessories listed in this manual.

## BOX CONTENTS

1 x Microphone Receiver  
2 x Microphone  
1 x Power Adaptor

2 x Sets of AA Batteries  
1 x Audio Cable

## PRODUCT DIAGRAM



## INSTALLATION

### Receiver

For best results, the receiver should be placed at least 1m off the ground, and should not be placed directly in front of the speaker system.

- Connect the antenna, a balanced cable AF line (not supplied) to your speaker or amplifier system, and plug in the power adapter.
- Adjust the antenna so that it is vertical.
- Switch on the power, and while it is in stand-by, turn on the power of your speaker or amplifier system.
- Ensure not to use two machines with the same frequency in the same place at the same time.

### Transmitter

- Open up the battery compartment of the microphone, insert 2 x AA batteries and close the battery compartment.
- Switch on the power and the power light will flash once.
- The signal level on the receiver will light up to indicate that an effective signal is being received.
- Adjust the channel volume and the volume on your speaker or amplifier system.
- When the AF level lights up corresponding to the volume, the system is functioning normally.

## SPECIFICATIONS

Frequency:	Channel 1: 645.9MHz Channel 2: 525.1MHz
Transmission Range:	Up to 60m
Microphone Power:	2 x AA (Each)
Pick Up:	Dynamic
Dimensions:	Microphones: 236 (L) x 52 (Dia.) mm Receiver:175 (L) x 108 (D) x 40 (H) mm

## WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555