

Portable Wireless UHF Lapel Microphone System



Model:
AM4182



Please read and save all instructions to ensure safe and effective use of this product.

Instruction Manual

WARNING

- To avoid damaging the battery, it is recommended to use our original charger.
- For better sound quality, please speak into the pickup head of the microphone.
- Do not plug or unplug the microphone plug randomly to prevent poor contact. The cable must be inserted into the correct interface.
- To extend the battery life, it is suggested to charge the battery after it runs out. Frequent charging will accelerate battery wear. If the device is not used for a long time, please charge it once every two months.
- Do not place the device near credit cards to avoid problems caused by magnetism.
- The accessories are designed according to the requirements of the device operation. If you need to replace the accessories, please use the original parts to ensure that the device is in the best operating condition.

FEATURES

This multi-functional microphone can be used in classroom teaching, as a tour guide for explanations during travels, and is suitable for indoor and outdoor scenarios. It is small and portable, with a loud and clear sound. This sound amplification system is very convenient and comfortable to use. It also has a decent-sized lithium battery built-in.

BOX CONTENTS

- 1 x Amplifier
- 1 x Shoulder strap
- 1 x Headset microphone
- 1 x Charger
- 1 x Charging cable
- 1 x User manual

USAGE INSTRUCTIONS

1. Remove the main unit and the headset microphone, adjust the shoulder strap (there are two metal pieces on the back of the device), and wear the main unit on your wrist or shoulder. You can adjust the length of the shoulder strap and also use the clip on the back of the main unit to attach it to your belt.
2. Put the headset microphone on your head, adjust it to the mouth position, and then insert the earphone plug into the microphone slot of the main unit. Turn on the power switch, the red LED indicator light will come on, and adjust the volume to the desired level. If it reaches the maximum volume, it will produce distorted noise. At this time, you need to move the main unit away a little.
3. When playing music, adjust the volume to the best state, not too high; do not play music at a high volume for a long time, as this may cause hearing problems.
4. When the battery runs out, the red indicator light will go out, and the device will stop working. Turn off the device and insert the charger into the DC input interface of the main unit. Insert the AC100 - 220V power adapter into the power socket. The indicator light will turn orange when it is fully charged, and the indicator light will return to red when the battery is completely charged.

FUNCTIONS

- When inserting a TF card or USB storage device, a short press can play/pause; when the FM radio is on, a short press can automatically search for stations, and a long press can switch modes.
- When inserting a TF card or USB storage device, a short press can play the next song, and a long press can fast forward. When the FM radio is on, this function is to select the next station.
- When inserting a TF card and USB storage device, a short press can play the previous song, and a long press can fast backward. When the FM radio is on, this function is to select the previous station.
- When inserting a TF card and USB storage device, you can choose to play songs in single track mode or loop through all songs.
- LED Indicator Light: When the device is powered on, the indicator light is red. When the indicator light turns orange, it indicates that the device is charging.

SPECIFICATIONS

Peak Output Power:	100W
Frequency Response:	180Hz - 15KHz
Output Impedance:	3 Ohms / 5W
Battery Capacity:	1200 mAh
Music Playback Battery Life:	Up to 12 hours
Charging Time:	Up to 5 hours

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555