

digitech

HD Projector and DVD Player

with HDMI, USB, SD and AV



 
Model:
AP4020

Instruction Manual

Content

PACKING LIST.....	03
FUNCTION OVERVIEW	04
REMOTE CONTROL	05
BATTERY STATEMENT AND NOTICES	06
QUICK START	07
PROJECTION DISTANCE & SIZE	08
PROJECTION MODE	08
INPUT SOURCE	09
BLUETOOTH SETTINGS	11
SPECIFICATION	12
TROUBLESHOOTING	13
ACCC STATEMENT	15

PACKING LIST



DVD Projector

 
 
 
 


Remote control



Power Adaptor

FUNCTION OVERVIEW

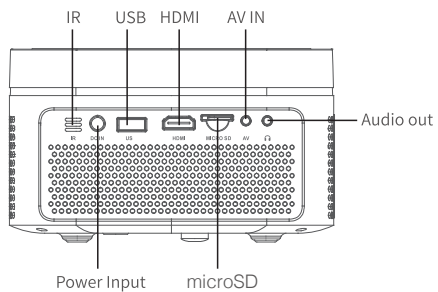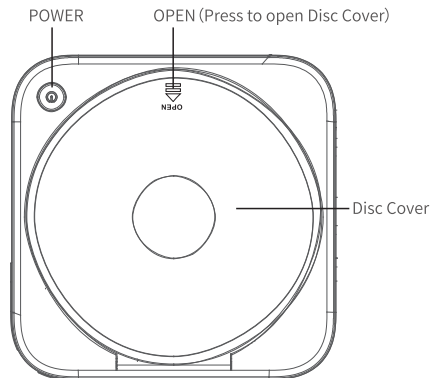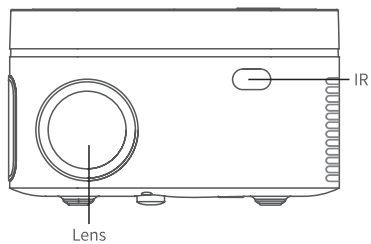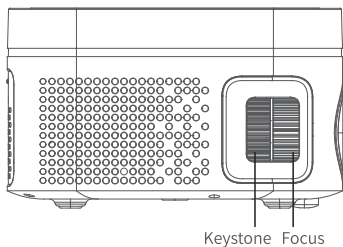

REMOTE CONTROL

Power ON/OFF (Red Power Button)

Mute/Activate Sound (Green MUTE Button)

FUNCTION KEYS:

- RANDOM:** Random Play
- OSD:** Display Current Audio/Video Information
- ANGLE:** View Other Angles
- SUBTITLE:** Change Subtitle Mode
- REPEAT:** Cycle Repeats
- PBC:** Play Back Control
- TITLE:** View the Menu Title
- DVD MENU:** View the DVD Menu
- A-B:** Create a Repeating Cycle
- PROG:** Play in a Specified Order
- SLOW:** Slow Speed Play
- SETUP:** Setup Menu in DVD Mode

Navigation and Playback:

- Fast Forward or Rewind:** (Red FF and Green RR buttons)
- Switch Forward or Backward:** (Orange and Blue buttons)

Media and Playback Controls:

- Select Media Source:** SOURCE button
- Enter the DVD Player Mode:** DVD button (Only Works in the Main Interface)
- Rotate Projection Screen:** FLIP button
- Play or Pause Playback:** Play/Pause button
- Stop Playback:** Stop button
- Adjust the Volume Up:** + VOL button
- Adjust the Volume Down:** - VOL button
- Switch the Disc Audio Channel:** AUDIO button

Navigation and Menu:

- Access Projector Settings Menu:** MENU button
- Exit the Current Menu:** EXIT button (Does not Work in DVD interface)

Other Function Keys:

 
- ZOOM:** Zoom in/out Image Size in DVD Mode
- GOTO:** Go to Specific Chapter or Track Number

BATTERIES STATEMENT AND NOTICES (Batteries not included in the package)


Remove the battery compartment cover on the back of your remote by carefully sliding to open. The battery cover can then be lifted away. Fit the correct batteries, referring to the polarity markings. Finally, replace the cover.

NOTE:


- When you receive the product and find that the batteries of the remote control is swollen or softened, please do not use it before you change it.
- Batteries shall not be exposed to excessive heat such as sunshine, fire.
- Make sure that the batteries are installed polarity correctly.
- Only same or equivalent type batteries as recommend are to be used.
- Do not dispose of batteries in fire, battery may explode or leak. Do not try to recharge a battery.
- Do not mix old and new batteries.
- Do not mix alkaline, standard(carbon-zinc), or rechargeable (ni-cad,ni-mh,etc) batteries.

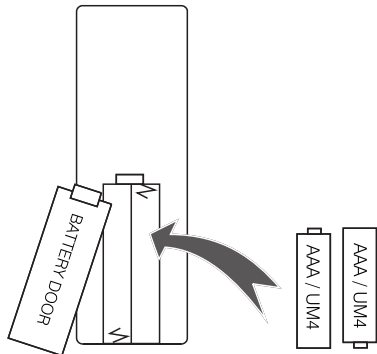


QUICK START

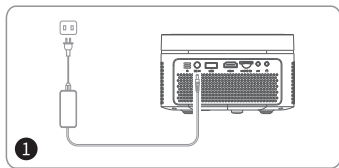 

 
1 Plug the power Adaptor into an outlet.

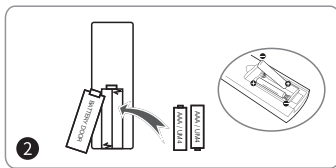

 
2 Install batteries in the remote control

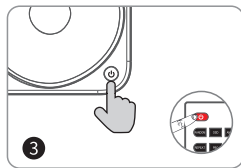

 
3 Press the **Power Button** to turn on the projector.

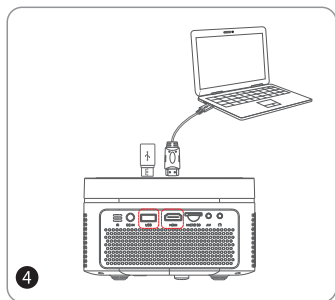

 
4 Connect your device to the projector correctly.

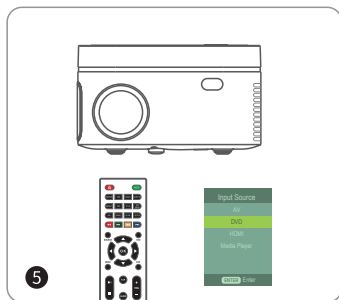

 
5 Use the remote control to select the correct input source.

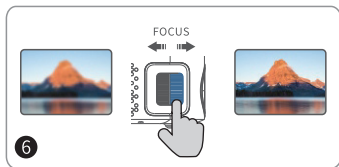

 6 Adjust the focus ring to get the best image performance.

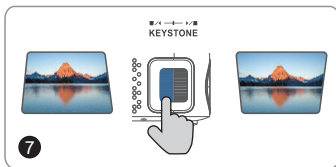

 
7 Adjust the keystone to get the suitable size

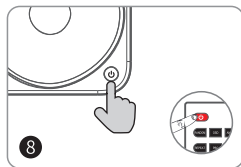

8 Press the **Power Button** to turn off the projector.

PROJECTION DISTANCE & SIZE

 The recommended projection screen is around 80 inches with a distance of around 2.96M.
Ambient darkness will improve the clarity of the projected images.

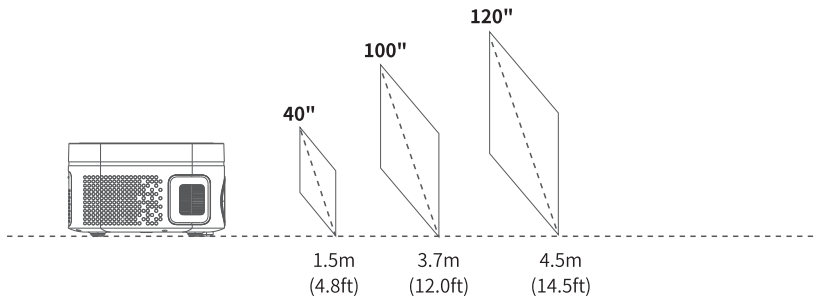


PROJECTION MODE

If you want to hang the projector to the ceiling, a projector mount will be needed.

If you want to project in different way, please select corresponding mode in the setting page.



 
FRONT TABLE

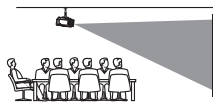

FRONT CEILING



 
REAR TABLE

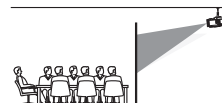


REAR CEILING


INPUT SOURCE

Press  on the remote to enter the interface of the **Input Source**.

 A. HDMI Connection

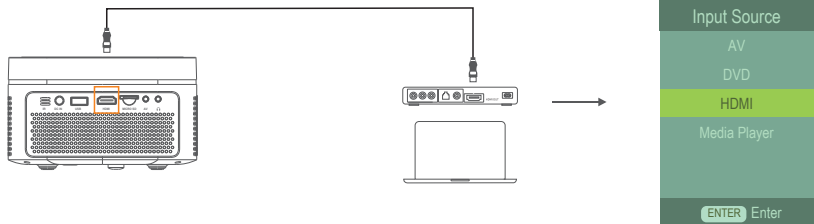

 B. AV Connection

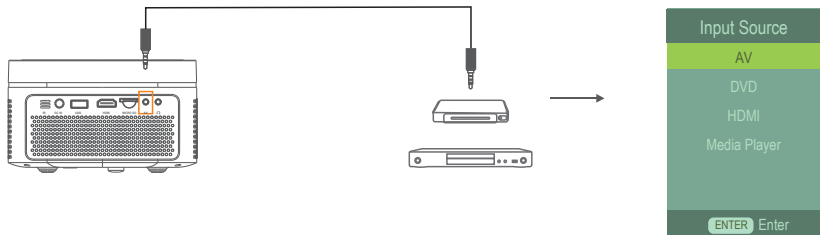


C. DVD Player Connection



Supports direct play of CD, DVD, CD-R/RW, DVD -R/+ R, DVD+ RW/-RW, VCD, SVCD

Note:

 1. Not support Blu-ray disc.
2. The DVD button on controller only works in the main interface.
3. Please through Source button to exit DVD interface.

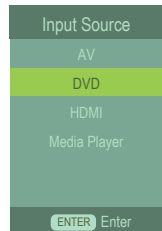

  
D. USB Connection

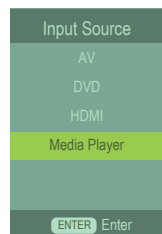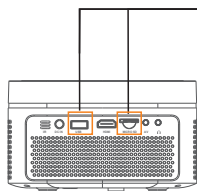

BLUETOOTH SETTING

Bluetooth Connecting

 1. Go to **Set up page** > **Option** > **Bluetooth**
2. Turn the Bluetooth function **ON** and search for nearby Bluetooth devices.
3. Choose correct Bluetooth device to connect.

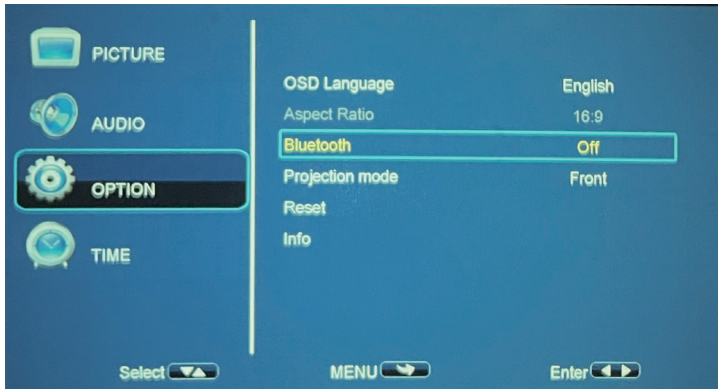

NOTE:

1. Bluetooth function is **ONLY** for audio transfer with audio devices, like Bluetooth speaker/headset/soundbar, NOT support video/audio sync with smartphone/Pad.
2. Due to compatibility issues with the Bluetooth protocol, some brands of Bluetooth speakers may not support connection to projectors.
3. Control the Bluetooth switch by the **left/ right** buttons on controller

SPECIFICATION

Display Technology	LCD	Light Source	LED
Resolution	1280 x720	Input Signal	HDMI / USB / AV / DVD/ MICRO SD
Aspect Ratio	16:9 / 4:3	Focus	Manual
Keystone	Manual \pm 15	Speaker	3W*2
Bluetooth	Version 5.0	Power Input	AC 100-240V 50/60Hz
Power Output	30.0V / 2.4A 72W	Photo Format Supported	bmp\png\jpeg
Audio Format Supported	aac\wav\wma\mp3\flac\MP2	Video Format Supported	flv\avi\asf\mov\mp4\mpg\rmvb\vob\M4V\MKV
Ports	HDMI / AV / USB / MICRO SD/ DC IN / AUDIO 3.5MM	DVD Player Format	CD) DVD) CD-R/RW) DVD-R/+R) DVD+RW/-RW) VCD) SVCD. (Not support Blu-ray discs)
Unit Dimension	160.5*160.5*95.5mm	Unit Net Weight	1KG

TROUBLESHOOTING

Q

Remote control not working?

- Make sure the batteries are effective and installed in the correct way.
- Please contact our after-sales team to get a new remote control.

A

Q

Blurry Image?

- Adjust focus ring/keystone to get the best image.
- We recommend using it on a white wall or a good quality screen. Using it on a thin white gauze or cloth screen will reduce the image quality.

A

Q

No Sound?

- Turn Dolby audio off in your device.
- The mute button on the remote was be pressed accidentally.

A

Q

Automatic shut-down?

- Overheating protection. Please use in a ventilated environment.
- It is recommended to unplug the power supply after use to prolong the service life.

A

Q

Upside down image?

--Press "Flip" button on the remote control.

--Enter "Set UP -OPTION-Projection mode" to change the Projection Mode.

ACCC STATEMENT

Our product is guaranteed to be free from quality and manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Should you not be able to provide proof of purchase with a receipt or bank statement, identification showing name, address and signature may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution
Address 46 Eastern Creek Drive,
Eastern Creek NSW 2766
Ph. 1300 738 555