



Portable Bluetooth Speaker With Microphones XS-N3113PBA



 
IMPORTANT SAFETY INSTRUCTIONS:

Please read all instructions carefully and retain for future reference. When using the unit, basic safety precautions should always be followed, including the following:

1. Keep this product and its charging cable away from direct sunlight, liquids, excessive heat or flammable materials.
2. Do not use the speaker near windows, or near heat sources like radiators, gas stoves or other apparatus that produce heat.
3. Do not place any naked flame sources such as lit candles on or near the speaker.
4. Do not operate this product if it has malfunctioned or has been damaged in any way.
5. No user-serviceable parts inside. Do not dismantle.
6. This product is intended for indoor, domestic use only. Do not use outdoors.
7. This product is not a toy. Children should be supervised to ensure that they do not play with the appliance.
8. Do not expose batteries to heat or fire as they may explode.
9. Do not dispose of batteries in your household waste. Contact your local council for information on disposal or recycling.
7. Do not expose to water, corrosive liquids or gases. Store in a cool, dry place.
8. Clean only with a soft, dry cloth. Do not use harsh or abrasive cleaning products as this may cause damage.
9. Place the unit on a flat, stable surface. Do not cover the speaker during use.
10. Do not insert foreign objects into any opening on the unit.
11. Do not play music at excessive volume levels as this can cause hearing loss or damage the unit.

Accessories List

- | | |
|----------------------------------|----------------|
| 1x XS-N3113PBA Bluetooth Speaker | 1x AUX Cable |
| 2x Wireless Microphone | 1x Carry Strap |
| 1x Remote Control | |
| 1x User Manual | |
| 1x USB Charging Cable | |




Technical Specifications

- Power supply: DC5V 1A
 Power output: 16W
 Bluetooth version: 5.1
 Bluetooth operation distance: 10m
 Battery capacity: 3600mAh lithium battery
 Playing time: 3 hours (medium volume)

1

Overview of the Speaker

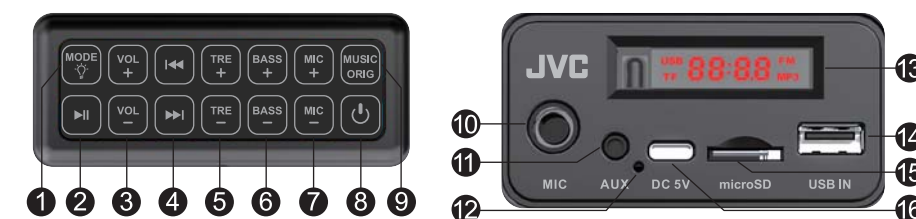

1. Mode/Lights Button: Short press to switch between available modes: BT / microSD (TF) / USB / AUX (Line In) / FM. Long press repeatedly to switch between available lighting modes and to turn the lights off.
2. Play/Pause/TWS Button: Short press to play or pause music. In FM mode, press and hold for two seconds to search for available FM channels. Press and hold for two seconds again to stop the search. Double press (short press two times) to connect two speakers in TWS mode (optional, requires two speakers).
3. Volume + / - Button: Increase or decrease the volume in USB/microSD mode.
4. Previous / Next Button: Press to play the previous or next song (or previous or next channel in FM mode).
5. Treble + / - Button: Press to increase or decrease treble.
6. Bass + / - Button: Press to increase or decrease bass.
7. Mic + / - Button: Press to increase or decrease microphone volume.
8. Power Button: Press and hold to turn on or turn off the speaker.
9. Music Original Button: For karaoke: Press this button to reduce the vocals and make the background music more prominent. Press again to restore original sound. Please note that the effect varies depending on the source audio.
10. Mic Input: 6.3mm Microphone Input to connect wired microphone.
11. AUX Input: Connect auxiliary device using 3.5mm AUX cable to play audio.
12. Charging Indicator: Red when charging, turns off when fully charged.
13. LED Display
14. USB port: Insert USB memory device to play compatible mp3 audio.
15. microSD (TF) card port: Insert microSD card to play compatible mp3 audio.
16. DC 5V: Connect the Type-C USB end of the Charging Cable here to charge the battery.

2

Remote Control

The remote control uses 2x 'AAA' batteries. Please ensure correct polarities when inserting or replacing batteries.

1. Power Button: Turn on or turn off the speaker.
2. MODE Button: Press repeatedly to switch between BT / microSD (TF) / USB / AUX (Line In) / FM modes.
3. MUTE Button: Mute or restore original sound.
4. STOP Button: Stop music in USB or microSD (TF) modes. Press Play/Pause Button to continue playing from the first song.
5. EQ Button: Press repeatedly to switch between the available EQ modes – Pop (POP), Rock (ROC), Jazz (JAZ), Classic (CLA), Country (CUT).
Note: The default is no equalising (NOR).
6. Number Buttons (0-9): Select the song or channel directly.
7. REP Button: Repeat the current song.
8. Previous Button: Select previous song in USB/microSD/BT modes, or previous channel in FM mode.
9. Next Button: Select next song in USB/microSD/BT modes, or next channel in FM mode.
10. VOL + Button: Increase the volume.
11. VOL - Button: Decrease the volume.
12. Play/Pause Button: Pause or continue playing the current song.



Functions and Operation

Charging the Battery

Charge the unit fully before using it for the first time and whenever the sound becomes weak.

3

1. Connect the Type-C USB end of the Charging Cable to the DC5V Charging Port on the unit. Connect the other end of the Charging Cable to a DC 5V 1A power adaptor to charge the unit. You can also connect it to the USB port of a computer or similar.
2. The Charging Indicator lights up red when charging and turns off when fully charged. Remove the Charging Cable promptly. Do not overcharge.
3. Charging Time: 5-6 hours
Battery Run Time: 2-3 hours

Bluetooth Connection:

1. Place the speaker close to (within 10 metres of) your Bluetooth enabled device.
2. If not in Bluetooth mode, short press Mode Button to switch to Bluetooth mode.
3. Enable Bluetooth function on your Bluetooth-enabled smartphone, tablet or media player; navigate to the Bluetooth setting menu, and search for new devices. The Bluetooth name for this speaker is 'XS-N3113'. You will hear a tone indicating that the pairing is successful.
4. Once connected, you can short press the Previous or Next Button to play the previous or next song.

Note: The speaker automatically connects to the last paired device when in Bluetooth mode.

FM Radio Playback:

Note: Connect the USB Charging Cable to the DC5V port as the FM antenna.

1. Short press the Mode Button to switch to FM Radio mode.
2. Press and hold the Play/Pause Button for two seconds to search for available FM channels automatically. Once the search is complete, the speaker will store the channels automatically.
3. Press and hold the Play/Pause Button for two seconds again to stop the search.
4. Short press the Previous or Next Button to switch between the channels.

USB/microSD/AUX Input:

Connect a USB/microSD memory device, or an AUX cable connected to your device, to the appropriate port. If the speaker doesn't start playing audio automatically, short press the Mode Button to switch to the correct mode.

Note:

- Only MP3 format is compatible.
- Maximum size of the USB/ microSD device that can be connected is 32GB.

True Wireless Stereo (TWS) Mode

(Optional, requires two speakers)

If you have two speakers (Model: XS-N3113PBA), you can use them together for a more immersive audio experience. Simply place the two speakers in the same room, in Bluetooth mode and follow the steps below to connect them, and play your Bluetooth-enabled audio source audio wirelessly, in stereo.

4

1. Make sure both speakers are within Bluetooth range of each other (both in the same room).
2. Press the Power Button on both speakers to turn them on. If not in Bluetooth mode, short press the Mode Buttons until they are in Bluetooth mode.
3. Double press the Play/Pause Button on either speaker to pair the two speakers in TWS mode.
4. Now enable Bluetooth function on your Bluetooth-enabled smartphone, tablet or media player; navigate to the Bluetooth setting menu, and search for new devices. The Bluetooth name for this speaker is 'XS-N3113'. Connect to one of the speakers, not both.
5. Once connected, you can play Bluetooth audio from your source device on the speakers wirelessly, in stereo.

Note:

- Stereo audio playback only works from a Bluetooth audio source, and only when both speakers are in Bluetooth mode.
- Ensure your audio source (e.g. smartphone) is connected to only one of the two speakers via Bluetooth. If connected to both, disconnect from one.
- If your source device is connected to both speakers via Bluetooth, you can choose to play audio via one or the other, but not both.

Using the Wireless Microphones

1. Insert 2x AA batteries into the battery compartment of each wireless microphone and turn on.
2. The microphones automatically connect to the speaker wirelessly.
Red tailcap microphone frequency range: 520.8MHz;
Blue tailcap microphone frequency range: 573.6MHz.
3. Use the MIC+ and MIC- buttons to adjust the microphone volume.

Note: There is a MIC port on the control panel where you can connect a wired microphone (not included).

Troubleshooting

Problem	Possible cause/ Solution
Speaker turns off on its own	Battery might be very low. Charge it fully before using again.
Cannot play file from USB/microSD device	<ul style="list-style-type: none"> • File may be in a different format. Only mp3 files are compatible. • File path might not be recognized; try storing the file directly in the root directory.
No sound or low sound	<ul style="list-style-type: none"> • Try increasing the volume. • Choose the correct audio source. • Battery might be low. Try charging for a few hours.
Buttons are not working	<ul style="list-style-type: none"> • Battery might be low. Try charging for a few hours. • Turn it off and turn on again after a few seconds.
Cannot pair a Bluetooth device	<ul style="list-style-type: none"> • Turn off Bluetooth temporarily on all other previously paired devices. • Make sure that the speaker is in Bluetooth mode and is within 10 metres of the source device. • Restart the pairing process.

Register your product at jvcv.com.au/warranty-registration

5