

CS-2482

USER MANUAL



INDEX

OPERATION.....1  
GENERAL USE INSTRUCTIONS.....2  
SPECIFICATIONS.....2  
CONTROLS AND CONNECTIONS.....3



• **CAUTION, TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK)**  
• **THIS PRODUCT MUST BE EARTHED**  
• **NO USER-SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL**

OPERATION


- 1. Prior to switching on, turn volume down to minimum.
- 2. Connect the audio source to the appropriate Input socket.
- 3. Another Speaker can be connected to the output socket, so that several boxes canbe daisy chained.
- 4. Connect to the mains supply.
- 5. Switch on the audio source, followed by the active speaker.
- 6. Set the volume with the applicable control.

INSTRUCTIONS

- Do not overload the box to avoid damage to the speakers
- Do not place an open fire (candles etc) close to this amplifier.
- Only connect to an earthed mains outlet of 240VAC 50Hz.
- This product is design for indoor use only.
- Unplug the unit from the mains when not in use.
- Unplug the unit from the mains before checking or replacing the fuse.
- Make sure that the box is placed on a flat and stable surface.
- Use only strong and approved mounting material.
- Only use suitable means of transportation if you want to move the box.
- Always unplug the unit during a thunderstorm or when it is not in use.
- If the unit has not been used for a long period of time, condensation can occur inside the housing. Please let the unit reach room temperature before use.
- Never try to repair the unit yourself. It does not contain any serviceable parts.
- Run the mains lead in such a way that nobody can fall over it and nothing can be put in it.
- Set the unit to the lowest volume prior to switching it on.
- Keep the unit out of reach of children.

SPECIFICATIONS

|                         |                         |
|-------------------------|-------------------------|
|                         | 8"Speaker box           |
| System                  | Active 2-way full range |
| Woofer                  | 8"                      |
| Tweeter                 | 1"                      |
| Power RMS               | 40 W                    |
| Fuse                    | 250V/2A                 |
| Frequency Range         | 65HZ-18KHZ              |
| Sensitivity             | 92dB (+/- 2dB)          |
| Connector               | XLR/6.5mm/RCA           |
| Mic Input Level         | <50 mV                  |
| Line Input/Output Level | 250mV                   |

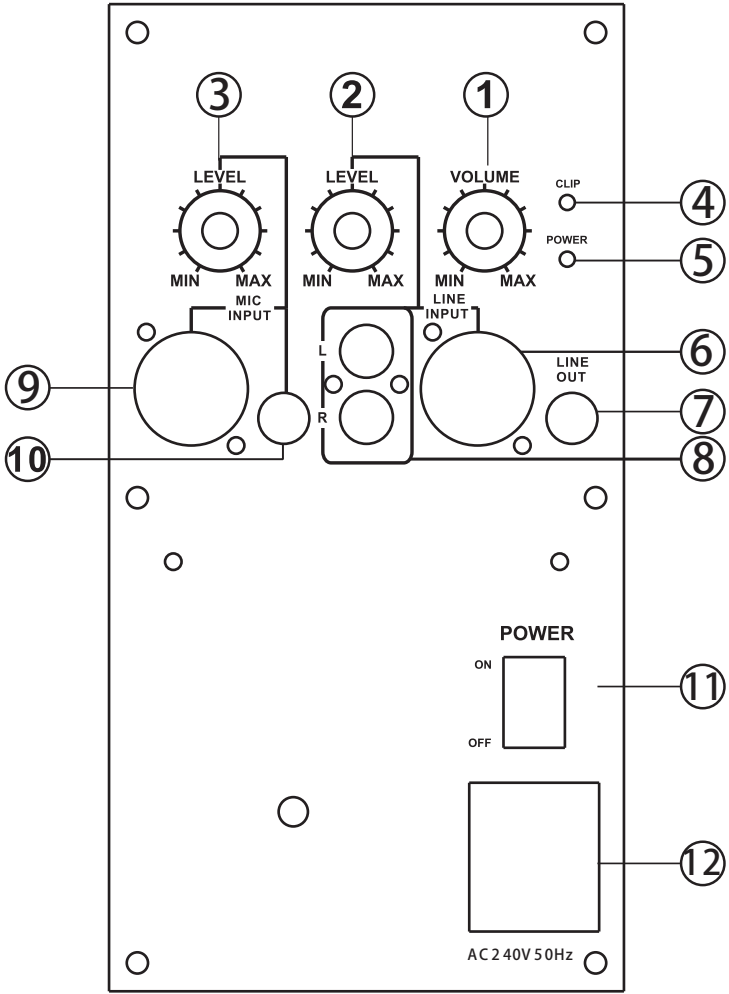

- 1. Output level control
- 2. Line input level control
- 3. Mic input level control
- 4. Clipping indication light
- 5. Power indication light
- 6. XLR line input
- 7. 6.5mm mono line output
- 8. RCA (R+L) line input
- 9. XLR microphone input
- 10. 6.5mm microphone input
- 11. Power switch
- 12. Fused mains input