

B06



Model: CS2604



Please read and save all instructions to ensure safe and effective use of this product.

Instruction Manual

WARNING

- Please store and use this product in an environment of normal temperature.
- Please do not expose this product to rain or moisture environment.
- Please do not disassemble, repair or modify this product by yourself without authorization.
- When cleaning this product, please use a soft cloth or with little water if needed, please do not use chemicals for cleaning.
- In order to have an extended product life and protect your hearing, please avoid listening to songs on maximum volume for long time.
- The product is with built-in lithium battery, to avoid dangers, please do not discard or put it in the fair.


FEATURES


- 2.2CH Superb Portable Outdoor Boombox
- Amazing Sound all around and Punchy Bass beating
- Excellent Build Quality with hard strong handle
- Three modes of RGB light activity makes perfect for disco party
- IPX6 Water Resistance, perfect for the beach, poolside and boating
- Google Assistant and Siri voice control optimized
- Multiple Link Function, multiple links of unlimited numbers achieving enhanced sound
- USB port compliance with power bank and USB disk playing function
- Dedicated with Hands-free Mic for easy picking up the call
- Line-in function, suitable for PC, MID, TV and other audio devices

PACKAGE CONTENTS

- 1x Portable Bluetooth Speaker
- 1 x Type-C Charging cable
- 1 x Audio cable
- 1 x User manual

PRODUCT OVERVIEW

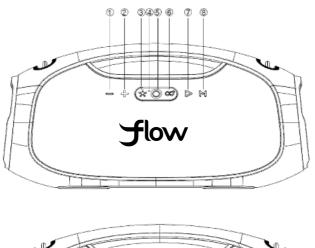

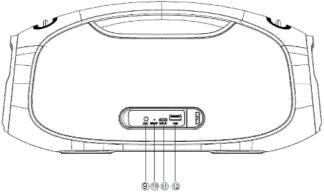

- 1. Backward/Volume Down
- 2. Forward/Volume Up
- 3. RGB Light
- 4. Built-in Mic Hole
- 5. Power On/Off
- 6. Multiple Link Button
- 7. Play/Pause

- 8. Mode Button (turn among Bluetooth, USB disk and AUX-IN)
- 9. AUX socket
- 10. Reset Jack
- 11. Type-C Charging Jack
- 12. USB socket/Power bank socket

USAGE INSTRUCTIONS

Power On/Off

Long-press the Power button to turn the speaker on and off.

Bluetooth:

- Turn the power button to "ON". The speaker enter Bluetooth mode automatically.
- Activate Bluetooth of mobile phone and search for device name "FLOW B6" then connect it.
- Play the music from your mobile phone and enjoy.
- Long-press Forward or Backward button to select songs.
- Short-press Forward or Backward button to adjust volume up and down.
- Short-press Play/Pause button to play/pause the music.
- Long-press "Multiple Link" Button to disconnect the Bluetooth connection with the mobile device.

Note: If your smartphone is disconnected from speaker due to shutdown or switching mode, the speaker will automatically reconnect your smartphone when it is turned on again or switched back to Bluetooth mode.

Playing music from USB disk:

- Turn the Power button to "ON".
- Insert USB flash disk into USB socket, the speaker will play the stored music automatically.
- Long-press Forward or Backward button to select songs you like, short-press to adjust the volume up and down.
- Short-press Play/Pause to play or pause.

Note: Under any playing mode, when you insert a USB disk to the speaker, it will switch to play the USB disk.

Power Bank Function:

- Turn the speaker on.
- Connect other device to the 5V 1A out port via a charging cable.

Multiple Link Function:

Prepare all speakers (Infinite quantity but they must be same BT paring name) you need to connect by Multiple Link, choose 1pc as master speaker and follow below steps.

	OPERATION/STATUS		POWER INDICATOR (WHITE LED)		MULTIPLE LINK INDICATOR (WHITE LED)	
1	Master Speaker	Turn on and connect to external devices (connected to smartphone / USB player /AUX player). Short-Press "Multiple Link" button to make it ready for Multiple Link connection of Slave Speakers.	Master Speaker	Lighting constantly	Master Speaker	Lighting constantly
2	Slave Speakers (Infinite quantity)	Turn on and make it in BT disconnected state. Short-Press "Multiple Link" button to search Master Speaker, it will automatically start to get connected by Multiple Link.	Slave Speaker	Blink slowly	Slave Speaker	Lighting constantly if Slave Speaker connected successfully.
			Slave Speakers	Blink slowly	Slave Speakers	Light off if if Slave Speaker fail to connect in one minute.
3	Master Speaker	Short-Press "Multiple Link" button to exit the Multiple Link state.	Master Speaker	Blink slowly(but if it was sitll connected to your smartphone, then indicator would light constantly.)	Master Speaker	Light off
			Slave Speakers	Blink slowly	Slave Speakers	Blink slowly (searching status), then light off if fail to connect to master speaker in one minute.
4	Slave Speakers	Short-Press "Multiple Link" button to exit the Multiple Link state.	Master Speaker	Lighting constantly	Master Speaker	Lighting constantly
			Slave Speakers	Blink slowly	Slave Speakers	Light off

AUX-IN:

- For other compatible music devices, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this device, then enjoy...
- Under any playing mode, when you use the audio cable to connect the device, it will auto-switch to the AUX mode.
- When using an external device, all functions can be controlled by the external device.

EQ Introduction:

This unit offers 2 kinds of sound effects, long-press Mode button to change the EQ modes.

RGB Light

The RGB light is on when speaker powered on, user can short-press the RGB Light button to turn the three different light modes and turn it off.

Activating Voice Assistant:

- Make Bluetooth connection with your mobile phone.
- Long-press Play/Pause button to activate voice assistant.

Hands-free call:

- Under Bluetooth connection status, if there is an incoming call, user can shortpress Play/Pause button to accept the call or long-press Play/Pause button to reject the call.
- During the call, user can long-press Play/Pause button to switch to talking on the phone.
- Short-press Play/Pause button or operate on mobile phone to end the call.

Reset Functionality:

If the speaker does not turn off or respond, user can short-press the Reset Jack with a small round pin to reset the speaker.

More Remarks:

- Default volume is at 50% status of max volume.
- Play time may vary depending on volume level and music style.

How to charge:

- When battery voltage low, the speaker will make prompt sound, Red LED indicator will blink. Please Recharge In Time.
- The charger is not included in the package, please charge this speaker via a rated 5V/2A charger or via a PC. Fast charger (rated 9V/3A) is supported as well.
- After inserting charging cable and start charging, the Red LED indicator will keep lighting without blinking.
- Charge time should be 4-6 hours. Once the speaker is full charged, the red Power LED indicator will switch off.
- To protect the battery, please do not use the speaker while it is charging.

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution Address 46 Eastern Creek Drive, Eastern Creek NSW 2766 Ph. 1300 738 555