

CS2640

# BLUETOOTH® KARAOKE SPEAKER & MICROPHONE

Model No: Flow K04



# **USER MANUAL**

### Important safety tips



- ♦ Please read this instruction
- ♦ Please follow this manual
- ♦ Please store and use this product at room temperature
- Do not use this product near water. Do not immerse this product in any liquid or spill any liquid drop onto this product
- Do not use this product near heat sources, such as radiators, hot air regulators, stoves or other heat generating instruments (including amplifiers)
- Do not block the opening of the stereo, and do not put objects into the vent or slot of the stereo
- ♦ Do not throw it to avoid damage to the product
- Please use the power charger with rated audio voltage for charging
- ♦ If the cable does not match your device, please contact the vendor
- Please adjust the stereo to a proper volume to avoid damage to your hearing
- No matter why the equipment is damaged, it must be repaired by professional maintenance personnel in time. Unauthorized disassembly will invalidate the warranty

## **Product Features**

- 1. Integrated handle, easy to carry.
- 2. Multiple playback modes (Bluetooth, TF card, USB flash disk, wired microphone, AUX)
- 3. Support the latest TYPE-C charging interface
- FM radio
- 5. High quality sound effect processing chip

#### The key operation method is shown in the figure

(1)



- (1) The rotary knob is in the power on mode and volume adjustment mode
- (2) The rotary knob is in wired microphone and wireless microphone reverberation adjustment mode
- (3) The rotary knob is in wired microphone and wireless microphone volume adjustment mode
- (4) In TF card mode, briefly press the previous song key to play the last audio text, briefly press the next song key to play the

next audio text, briefly press the pause/play key to pause the playing audio file, and briefly press the pause/play key again to continue playing.

- (5) In USB flash disk mode, briefly press the previous song key to play the last audio text, briefly press the next song key to play the next audio text, briefly press the pause/play key to pause the playing audio file, and briefly press the pause/play key again to continue playing.
- (6) Audio input mode: insert a machine with audio source into a 3.5 audio cable to input the product, and then it can be played
- (7) Wired microphone mode, insert a wired microphone, and you can call
- (8) Please plug 5V2A power supply into a TYPE-C charging cable for charging
- (9) Next song key. In any mode, briefly press a song to play the next audio file. Long press is the fast forward mode
- (10) Pause/play key mode: in any mode, short press is to pause/play audio files. When Bluetooth is playing, double click the pause/play key to connect the mode (long press of the play key is to select EQ function, and some models are available)
- (11) Previous song key. In any mode, briefly press the previous song to play the previous audio file. Long press is the fast forward mode

(12) M mode key, short press the mode key in turn, and you can select the mode key in (Bluetooth, USB, TF card, AUX FM) Switch between various audio input modes.

Short press can switch to any playing mode, (long press the M key to cancel the original sound, and some models are available)

- (13) EQ mode. During playback, press briefly to adjust EQ
- (14) Short press to enter the Bluetooth mode, open the Bluetooth function of the mobile phone, click the device name of the product to connect and use
- (15) M mode key, long press and hold the mode key in sequence to access (Bluetooth, USB, TF card, AUX FM)Switch between various audio input modes.

Short press to switch light mode

- (16) Pause/Play key mode. In any mode, short press to pause/play audio files, and long press the pause/play key to cancel the original sound mode.
- 二、Insert the wired microphone and turn on the brief switch to start karaoke.
- 三、Instructions for FM radio
- (1) Short press the mode key to switch to FM mode.
- (2) Short press the Up Curve key to play the last radio station.
- (3) Press the next song key briefly to play the next radio station.
- (4) Press and hold the/play key, FM will start to search the

radio station automatically. After the search, the radio station will be saved automatically and the first radio channel will be played.

四、When the power is low, you will hear the announcement prompt tone

# Interface Diagram

Wired microphone connector。
(2)Audio input

External audio input interface。
(3)TF card and USB stick insertion interface。
USB TF
(4)Charging interface。

DC5V-2A

# **Charging Operation**

The speaker will consume the power of the built-in battery during use. When the speaker gives a charging prompt, please power the speaker (specification 5V2A). There is a reading hole beside the power input hole of the speaker, you can see that a red light bulb is on, and the red light is off when the speaker is fully charged

# Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus

If your product becomes detective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product: misuse or abuse

of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by: Electus Distribution Address 46 Eastern Creek Drive, Eastern Creek NSW 2766 Ph. 1300 738 555