

flow T10

PORTABLE PARTY SPEAKER



Instruction Manual

Please read and save all instructions to ensure safe and effective use of this product.

CONTENTS

Warnings & Safety Information 3

Before First Use 3

Features 4

Box Contents 4

Product Overview 4

Operation Instructions 5

Specifications 7

Warranty Information..... 8

WARNINGS & SAFETY INFORMATION

WARNING: The manufacturer is not responsible for any potential injury from misuse

To ensure correct operation and avoid damage, please read this user manual carefully before using this product.

- Please store and use this product in an environment of normal temperature.
- Please do not expose this product to rain or moisture environment.
- Please do not disassemble, repair or modify this product by yourself without authorisation.
- When cleaning this product, please use a soft microfibre cloth without water; please do not use chemicals for cleaning.
- To extend product life and protect your hearing, please avoid listening to songs on maximum volume for extended periods.
- The product has a built-in lithium battery; please responsibly dispose of this product at its end of life
- Do not place close to or in a fire, or exposed for long periods to strong heat sources, including the sun.

BEFORE FIRST USE

Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use.

Please pay close attention to the section entitled Warnings & Safety Information. Find a safe and convenient place to keep this instruction manual for future reference.

Unpack the product but keep all packaging materials until you have made sure your new product is undamaged and in good working order. Ensure you have all accessories listed in this manual.


FEATURES

- 360° surround sound
- 100W RMS output
- IPX5 Waterproof rating
- Dynamic RGB lighting
- Emergency power bank charging

BOX CONTENTS

- 1 x Portable Bluetooth Speaker
- 1 x USB-C Charging Cable
- 1 x AUX cable
- 1 x User Manual

PRODUCT OVERVIEW

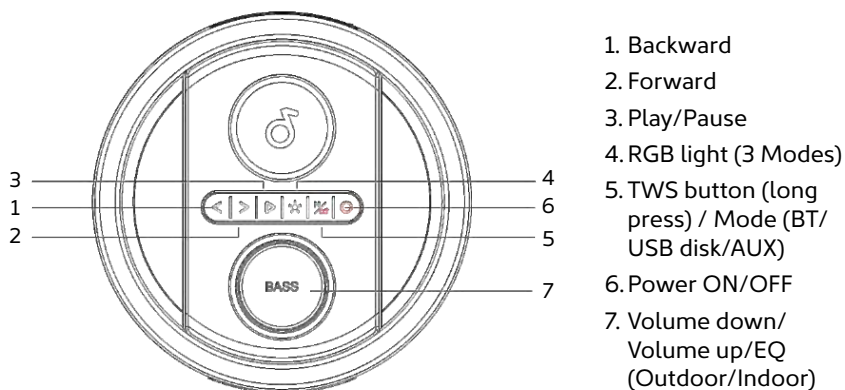

OPERATION INSTRUCTIONS

Power On/Off:

Long-press the Power button to turn the speaker on and off.

Bluetooth:

- Turn the power button to "ON"; which will turn Bluetooth mode on; the blue LED light will flash slowly if a device is not paired.
- Activate Bluetooth of your pairing device and search for device name "Flow T10" and pair.
- The blue LED light will stop blinking and remains always on when your device is connected.
- Play music and enjoy the speaker!

Controls:

- Short-press Forward or Backward button on the device or paired device cycle through songs.
- Short-press Play/Pause button to play/pause the music. Long-press for 2 seconds to disconnect Bluetooth.
- Short-press BASS to switch the EQ. The default EQ is outdoor; press BASS one time to switch to Indoor EQ, and press again back to revert back to Outdoor EQ .
- Turn the knob clockwise to turn volume up, counterclockwise to turn volume down.
- Short-press the light button to switch RGB modes, long-press for 2 seconds to turn the lights on or off.

TWS function:

- Turn on the other Flow T10 speaker you want to pair (you only need to set up one of the two units).
- Press the TWS button for 2 seconds to start pairing, a tone will be audible and the TWS indicator will flash slowly.
- When connected the TWS indicator will stop blinking and be always on; a tone will also sound to signal a successful connection.
- If a connection is not successfully created within 1 minute the TWS light will turn off, and the unit will stop attempting to pair.
- To stop attempting to pair press the TWS button for 2 seconds.

USB functionality:

- Supports a maximum of 64GB.
- Support music formats: mp3, wav, wma, flac, ape

Reverb functionality:

- Double-click the LED button quickly to activate the reverb function
- Whilst within the reverb function you can use the volume knob to adjust the microphone's volume.
- Double-click the LED button to exit this function.

Remarks:

- The default volume is 50% of max.
- Play time may vary depending on volume level and music style.
- Your Flow T10 will turn off automatically in 10 minutes if:
 1. There is no active Bluetooth connection.
 2. The device is not playing or utilizing a speaker function.
 3. It is paused while in USB play mode.
 4. It is paused while in AUX mode.

Reset functionality:

- If the speaker is not responsive, please use a small round pin to short-press the button inside the AUX port; this will reset the speaker.
- If you need to clear all Bluetooth connection memory, long-press the Backward ("<") button for 5 seconds to restart the speaker and power off.

How to charge:

- The charger is not included in the package. Please use a suitably rated charger (5V/1-2A or 9V/2A or 20V/1.5A) to charge this device. The standard charging cable supports 5V/2A only.
- Charge time will be 4-10 hours, depending on the charger used.
- When the battery is running low, the speaker will prompt once at 20% and 10%; the battery indicator will also turn red and flash. After 2 prompts, the speaker will turn itself off to protect the battery.
- To protect the battery, please do not use the speaker while it is charging.

SPECIFICATIONS

Model	Flow T10
Bluetooth version	V5.3
Speaker Size	4 x 2.5 inch
Subwoofer Size	1 x 5.25 inch
RMS power	100W
Peak power	200W
Battery Capacity	21700 11.1V, 7000mAh
Play time	3 hours at maximum volume & 11 hours at 50% volume (Light off)
Frequency Response	40Hz-20kHz
Product size	206(L) x 206(W) x 385 (H) mm
Product weight	4.75kg

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555