digitech

# Portable Bluetooth® Wireless Speaker

with RGB



Model: CS2648

∕⊗ R-NZ

Please read and save all instructions to ensure safe and effective use of this product.

# Instruction Manual

#### **FEATURES**

- · Wireless Bluetooth Playback
- · USB / TF Card Music Playback
- · FM Radio
- Voice Prompts
- · TWS Pairing (Dual Stereo Mode)
- · Hands-Free Voice Calls

## **USAGE INSTRUCTIONS**

#### Connecting the Headset

- Power On Long press the power button until you hear a voice prompt or see the LED indicator.
- 2. Pairing Mode The headset will automatically enter pairing mode the first time it is turned on. (If not, long press the TWS/Pair button until the light flashes.)
- 3. Enable Bluetooth on your phone or device and search for available devices.
- 4. Select the headset name (shown as [Wireless Name]).
- 5. Once connected, you will hear a prompt or see a steady indicator light.

#### TWS Mode (Pairing two headsets):

- · Power on both headsets.
- Long press the TWS button on one headset until they connect to each other.
- · Then pair with your phone/device as usual.

## **BUTTON FUNCTIONS**



**Track Forward**: Short press **Volume Up**: Long press



Track Back: Short press Volume Down: Long press



Power On/Off: Long press Mode Selection: Short press



TWS Connect/Disconnect: Long press

Light Mode: Short press



Play/Pause: Short press

**FM Mode**: Long press to auto-scan radio stations (charging cable acts as antenna)

#### Calls (Wireless Mode):

Short press: Answer/End call Double press: Redial last number

Long press: Reject call

3

#### **WARRANTY INFORMATION**

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution Address 46 Eastern Creek Drive, Eastern Creek NSW 2766 Ph. 1300 738 555