digitech

6-in-1

Alarm Clock

with Bluetooth® Speaker, Wireless Charging, RGB Night Light and Temperature Display



Model: CS2650



Please read and save all instructions to ensure safe and effective use of this product.

Instruction Manual

BEFORE FIRST USE

Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use.

Find a safe and convenient place to keep this instruction manual for future reference.

Unpack the product but keep all packaging materials until you have made sure your new product is undamaged and in good working order. Ensure you have all accessories listed in this manual.

OPERATING INSTRUCTIONS

Powering On

- Plug the USB end of the charging cable into the power adapter and the Type-C port into the product.
- 2. The red charging indicator light will turn on.
- 3. The product enters the normal working state and enters the standby state after all the indicator lights light up. The default is 06:00.
- 4. The temperature detection starts to work and the temperature value is displayed.

Wireless Charging

- Output power: 15W
- Indicator light display mode: Wireless charging indicator light: power on: blue light flashes, unplug power: no light;
- Charging indicator light: Charging: red light is always on; Fully charged: no light is on;

Bluetooth Speaker, Clock, Year And Date Settings

- On/Off function: Long press for more than 2 seconds to turn on/off.
- Bluetooth settings: Short press $^{\odot}$, the Bluetooth indicator light flashes, enter Bluetooth mode, press and hold \triangle/∇ Add and subtract sounds, short press \triangle/∇ Go up and down. In Bluetooth mode, it will automatically shut down after 3 minutes if not paired.

- Time setting: Short press (1), enter date/alarm/time settings, Cycle, Automatically exit
 and save if no operation is performed within 10 seconds;
 - Time setting: Press (Enter in turn: Years (Default 2021) > date (Month Day, Default 01, 01) > Time (hour > minute) > Alarm clock (hour > minute) > Cycle, The two seconds in the middle and the related setting numbers flash at the same time. Press △/▽ Add or subtract time values, Automatically exit and save if no operation is performed within 10 seconds;
 - 2. Long press more than 2 seconds, turn on and off the alarm clock;
 - 3. Alarm clock sound: sounds for 1 minute and turns off the sound.
 - 4. When the alarm sounds, short press any key to turn off the alarm.
 - 5. When the alarm clock sounds, the alarm indicator light also flashes at the same time.

Format Switching:

- Time format switching: Short press the

 key to switch between 12H and 24H formats. The clock interface displays 24H&12H, and the displayed time is 1 second. The default is 24H format;
- Temperature format: only displays in degrees Celsius (° C).

Turn On And Switch The Ambient Light:

- Ambient light: double click@ Switch and switch the light brightness, in order: high brightness (100%), medium brightness (75%), low brightness (25%);
- The default light is, highlight.

SPECIFICATIONS

Input	5V/3A 9V/ 3A
Wireless charging output power	5W (MAX)
Speaker power	52MM 5W
LED	5050 Colorful 26pcs
Charging efficiency	75%
Wireless charging transmission distance	<5mm
Power Adapter	QC3. 0

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution Address 46 Eastern Creek Drive, Eastern Creek NSW 2766 Ph. 1300 738 555