

CD Personal Music Player

User Manual

GE-4085



Please read this manual thoroughly before use and retain for future reference.

Safety information & Warnings

A triangle with a lightning symbol draws the user's attention to "dangerous voltage" without insulation in the cabinet which may be high enough to entail a risk of electric shock.



WARNING

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PART INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

A triangle with an exclamation mark draws the user's attention to important instructions for use and maintenance in the accompanying manual, which should be studied.



FURTHER INFORMATION



Beware of small pieces and batteries, do not swallow them. It may be hazardous to your health and lead into suffocation. Please, Make sure to keep small devices and batteries out of the reach of children.

Important advice regarding hearing protection



Caution:

You care for your hearing, and so do we. Therefore, use caution while using this appliance.

Our recommendation: **Avoid high volumes.**

Children should be supervised while using headphones; make sure that the appliance is not set to high volume.

Caution!

High volumes may cause irreparable damage to children's ears.



NEVER let allow anyone, especially children, to put object into the holes, slots or openings on this device. The device must only be opened by a qualified personnel.



Only use the appliance for its intended purpose.

This device may only be used in housings and business premises.

Please keep this instruction manual for further reference.



Do not obstruct the ventilation of the device. Make sure, that no curtains, newspaper, furniture or any other type of object are blocking the ventilation system of the apparatus. The ventilation system must be

clear of objects at all times! Overheating may lead into serious damage of the device and reduce its performance and lifespan.



Heat and warmth

Do not expose the appliance to direct sunlight. Make sure that the appliance is not subject to direct heat sources such as heaters or open fire. Make sure that the

ventilation slots of the appliance are not covered.



Moisture and cleaning

This appliance is not waterproof! Do not immerse player in water. Do not allow player to come in contact with water. If water gets inside the player it may cause serious

damage. Do not use cleaning agents that contain alcohol, ammoniac, benzene or abrasives as these could damage the player. For cleaning, use a soft, moistened cloth.



Professional recycling

Batteries and packaging should not be disposed off in the trash. Batteries must be handed over to a collection centre for used batteries. Separating disposable packaging

materials is ecologically friendly.

Traffic Safety :

Never listening to music when you cross a road or driving car.

Important Safety Instructions

1. **Read Instructions** – All the safety and operating instructions should be read before the unit is operated.
2. **Retain Instructions** – The safety and operating instruction should be retained for future reference.
3. **HEED Warnings** – All warnings on the unit and in the operating instructions should be adhered to.
4. **FOLLOW Instructions** – All operating instructions should be followed.
5. **Water & Moisture** – The appliance should not be used near water, for example, near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
6. **Ventilation** – Openings in the device serve its proper ventilation, are necessary for the operation and prevent overheating. The unit should be situated so that its location or position does not interfere with its proper ventilation. Do not place on bed, sofa, rug or similar surface that may block the ventilation openings, in a

built-in installation, such as bookcase or cabinet that may impede the flow of air through the ventilation openings.

7. **Heat** – The unit should be situated away from heat sources such as radiators, stoves, or other appliances (including amplifiers) that produce heat.
8. **Power Source** – The unit should be connected to power supply only of the type described in the operating instructions or as marked on the unit.
9. **Power cord protection** – If external adaptor (not included) for power supply is used, wire should be routed so they are not likely to be walked on or pinched by items placed upon or against them.
10. **Non-use** – During longer period of non-use please disconnect from adaptor or remove batteries, to avoid damage by leaking batteries.
11. **Object and liquid entry** – Care should be taken so that objects do not fall and liquids are not spilled into the unit or enclosure through openings.
12. **Damage requiring service** – The unit should be serviced by qualified service personal when:
 - a. Objects have fallen into, or liquid has been spilled into the unit enclosure.
 - b. The units has been exposed to rain or moisture.

- c. The appliance has been dropped , or the enclosure damaged. Only use control and adjustments as specified in the manual.
 - d. The unit does not appear to operate normally
 - e. The device displays serious changes in its performance.
13. **Servicing** – The user should not attempt to service the unit beyond that described in the user operating instructions. All other servicing should be referred to qualified service personnel.
14. **Cleaning** – Disconnect from mains power supply before cleaning. Do not use liquid or spray cleaners, only use a damp cloth. Follow the care and the maintenance instructions in this manual.
15. **Safety Check** – After servicing the unit ask the customer service for a safety check.
16. **Overload** – To avoid fire and electric shock do not overload wall outlets and convenience receptacle.
17. **Electrostatic discharge** – Disconnect from main power supply and remove batteries of unit malfunctions.
- Reconnect after a short time.

Note about this instruction manual

1. This instruction manual is published by the manufacturer without any warranty. Corrections and changes of this instruction manual for the removal of typographic mistakes and editorial inaccuracies as well as due to (technical) improvements (changes) of the devices can be done by the manufacturer at any time without announcement. Change of this kind are considered in future versions of this user manual. All rights reserved.
2. All figures are only for illustration and do not always show the exact representation of the product.
3. This unit is not intended for use by persons (including children) with reduced physical, sensory, or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the unit.

Setting a safe volume level

If you continually listen to loud music, your hearing gradually adapts to it and gives you the impression that the volume is lower. To protect yourself from this, set the volume to a low level and increase the volume slowly. Damage to your hearing can be extensive and cannot be reversed. If you notice a hearing problem, please consult a doctor.

Condensation

Condensation may occur when moving the device from a cold to a warm environment. If there is moisture inside the player, it may not operate properly. Don't turn on the device and wait about one hour for the moisture to evaporate.

Saving energy

When the unit is not used, it is advised to remove the batteries.

Unpacking

Carefully remove the unit from the packing. Please keep the packing for further use.

Operation

1. CD Door
2. LCD Track Number Display
3. On/Play/Pause button
4. Stop/Off button
5. Mode button
6. Program button
7. Rewind button
8. Fast Forward button
9. CD Door Open button
10. Battery compartment
11. Digital volume control
12. Earphone Jack (3.5mm)
13. DC Jack (DC 4.5V)



Battery

1. Open the battery compartment lid on the bottom of the unit. Remove the battery cover and insert 2 batteries (AA size). Please observe correct polarities when inserting the batteries.
2. Close the battery compartment by pushing in the two tabs of the lid into the corresponding recesses and flap it towards the device, until the brackets audibly snap in.

Important:

If the device is operated exclusively or kept non-use for more than one month, please remove the batteries in order to avoid any damage by leaking batteries.

Replace the batteries if the volume of the device becomes lower or the sound becomes distorted.

Battery Safety Precautions

Follow the battery manufacturer's safety, usage and disposal instructions.

Only use batteries of the same type and size

Insert the batteries observing the polarity (+/-). Failure to properly align the battery polarity can cause personal injury and/or property damage.

Do not mix battery types (e.g. alkaline, zinc/carbon, rechargeable batteries) or exhausted and new batteries. To avoid fire and explosion do not recharge normal batteries. Keep batteries away from children and pets. We recommend the use of alkaline batteries for a longer lifetime of the batteries.

Power Supply AC Adaptor Operation

The device is designed for power supply AC adaptor (DC 4.5V,600mA) optional but not included. Do not connect the device to any other power supply to avoid damage that is not covered by your warranty.

1. Connect the smaller plug to the DC jack at the left side of the device. Make sure that the plug is completely inserted.
2. Insert the adaptor to a wall outlet.
3. Disconnect the power supply from the CD Player when in not use.

Insert CD

Press the CD Door Open button to open the CD door insert the CD, then close the CD door.

Play/Pause

Press the Play/Pause button to switch the CD player on, start or pauses CD play. Before unit start playing CD, the display will show the total number of tracks and playing time.

Stop

Press the stop button to stop a CD during play. Press again to switch off the unit.

Off

In stop mode, press the stop button and hold 3 seconds to switch the player off.

Mode Function

Press the mode button to repeat a single track or an entire CD, play tracks in a random order, or play the CD in intro mode. **Press the mode button one time to repeat the current track.** (1) During CD playback,press SKIP FORWARD button / SKIP BACKWARD button to select a track you wish to repeat.

(2) Press the **MODE** button a first time, unit will play the desired track repeatedly. (3)During CD playback,press **MODE** button a second time, the unit will play all the tracks on the disc repeatedly.

Program Function

Press to program a loaded CD to play track in a specified order. (1) Follow the instructions for loading a CD and playing a CD. (2) Press the STOP button to stop the CD during play. (3) Press the PROG button. "01" will begin to blink on the Display. (4) Press the SKIP/SEARCH buttons to select the track you wish to program. (5) Press the PROG button to save the selected track to the program. (6) Repeat step 4 and 5 to program up to 20 track to play in the order they are programmed. (7) Press the PLAY/PAUSE button to begin playing the programmed tracks.

Rewind

Press the Rewind button to skip and searched CD tracks backwards.

Fast Forward

Press the Fast Forward button to skip and searched CD tracks forwards.

Digital Volume Control

Press the volume+/-button to increase or decrease the volume(volume+ / volume-).

Earphone Jack / Line Out

3.5mm earphone/headphone socket.

DC Jack

DC 4.5V,600mA socket (dia.3.5mm) for external AC adaptor supply(not included).


CLEANING & MAINTENANCE

- Please observe also the safety advices.
- Before cleaning always disconnect the power plug.
- Clean the housing with a soft and moist cloth and a mild detergent.
- Never use abrasive detergents or sharp utensils.

LCD DISPLAY INFORMATION

88 : Track number

88:88 : Playing time

 : Repeat 1 track

 : Repeat all track

 : Battery empty

RND: Shuffle all track

INTRO: Browse all track

PROG: Track memory

ESP: Anti-shock protection

Troubleshooting

If a fault occurs, first check the points listed below before taking the unit for repair. If you are unable to solve a problem by following these tips, consult your dealer or authorized service center. **WARNING:** Never open the device. Always refer service or maintenance or authorized customer service personnel.

PROBLEM	PROBABLE CAUSE	RESOLUTION
No sound	<ul style="list-style-type: none">– The volume is set too low.– The headphone is not securely inserted into the product.– The CD is paused or stopped.	<ul style="list-style-type: none">– Increase the volume using the volume dial.– Ensure the headphone is securely inserted.– Resume play of the CD.
Not Operation properly	<ul style="list-style-type: none">– The battery power is low.– The batteries are incorrectly installed in the battery compartment.– Condensation has formed on the internal parts of the laser	<ul style="list-style-type: none">– Replace the batteries as instructed by the “Battery installation” subsection.– Verify that the battery polarities are correctly inserted in the battery

	<p>pickup, which may occur when the product is moved to a location with a different temperature or humidity level.</p>	<p>compartment and adjust if necessary.</p> <ul style="list-style-type: none"> – Wait 2 hours before operating the product to allow internal parts adjust to temperature surround.
<p>Distorted sound</p>	<ul style="list-style-type: none"> – The volume level is too high. – The CD is distorted. – There is dust/dirt on the pickup lens or the CD. 	<ul style="list-style-type: none"> – Decrease the volume using the volume dial. – Skip to another track or replace the CD. – Clean the lens per section “Care & Maintenance”.

 
Specifications

Compact Disc Format: CD / CD-R /CD-RW

Battery Operation: 2x1.5V("AA"/LR6/R6/UM-3)

Power Supply: DC 4.5V, 600mA

Anti-Shock: 50 seconds



Box Contents

User Manual x 1

Earphones x 1

DISTRIBUTED BY:

TechBrands by Electus Distribution Pty. Ltd.

320 Victoria Rd, Rydalmere

NSW 2116 Australia

Ph: 1300 738 555

Int'l: +61 2 8832 3200

Fax: 1300 738 500

www.techbrands.com

Made in China