




GH1250

Portable Personal Rechargeable Fan

Instruction Manual

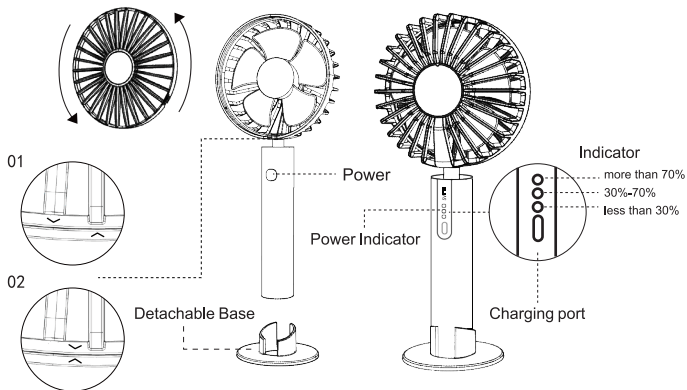

HOW TO CLEAR FAN COVER

01. Rotate the cover counterclockwise to take it apart.
02. Rotate the cover clockwise to put it back.
03. Wind direction regulation: Fan head can be adjusted forward and backward to regulate the wind direction.

SPECIFICATION

Product Size: 97×41×222mm
Package Measurement: 101×45×237mm
Accessories: USB cable + manual
Rated Power: 5.5W
Rated Voltage: 5V $\overline{\text{---}}$ 0.6A
Charging Time: 2-4 hours
Working Time: 2-6 hours
(depending on fan speed setting)

POWER

Three adjustable speed level—low-medium-high speed level.
Press the button to change fan speed; turn off power by pressing the button when the fan is in high speed level.
Indicator light will be off when power off.

GOOD TO KNOW

1. For first time usage, please charge with the USB cable provided for up 6 hours for better performance.
2. Do not put this product in a wet or high temperature place.
3. Product comes with battery charge protection.
4. Do not put the finger or hard thing into the fan to block the blade rotation when the fan is running.
5. This product is not a toy. Children must be accompanied by their parents to use it.
6. Do not use the fan without the cover.
7. Do not impact or throw the product in case any internal fault.
8. Do not take apart the product without permission.
9. Please use the adapter with 5V and 1A to charge the product.



Warning: Please do not take apart, impact, squeeze the product or put it in the fire.
Please put it far away from children in order to avoid any accidents.



Distributed by: Electus Distribution Pty Ltd, 46 Eastern Creek Dr, Eastern Creek NSW 2766 Australia
1300 738 555 | electusdistribution.com.au