

digitech

6" Rechargeable Desktop Fan




User Manual
GH-1296

Box Contents:

1 x 6" Rechargeable Desktop Fan
1 x USB Charging Cable

Product Diagram:

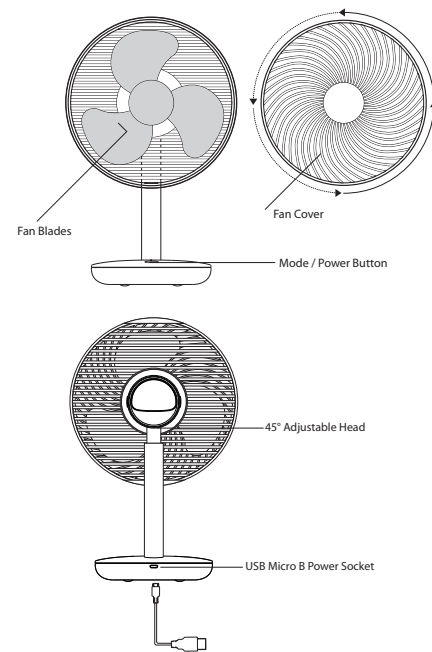

Operation:


1. It is recommended to charge the unit before use; plug in the USB micro B cable provided to the power socket of the desktop fan.
2. Plug the opposite end of the USB cable to a USB charging source such as a computer or USB mains adaptor.
3. Press the mode/power button once to turn the unit on low speed, 2 times for medium speed, 3 times for high speed and 4 times for wind mode. Wind mode will cycle between low and high fan speeds to emulate the wind.
4. Press the mode/power button 5 times from when you turn it on for the fan to turn off. There will no LED's lit when the fan is turned off.

Note: When cleaning the fan, you can take off the front fan cover by rotating it counter clockwise and then clockwise when attaching it back on.

Fan LED Indicator:

Button	LED	Fan Speed
Press 1 Time	☀ ○ ○ ○	Low
Press 2 Times	☀ ☀ ○ ○	Medium
Press 3 Times	☀ ☀ ☀ ○	High
Press 4 Times	☀ ☀ ☀ ☀	Wind Mode
Press 5 Times	○ ○ ○ ○	Power Off

LED Battery Indicator:

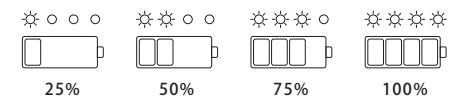

Note: The battery LED Indicator will be flashing when it is low battery.

Safety:

1. Do not pull apart the casing of the fan or touch the fan blades while turned on to avoid damage and injury.
2. Keep the fan away from high temperatures as it may cause damage to the unit and battery.
3. Do not expose the fan to water, moisture or liquids.

Specifications:

RPM: 1600 (Low)
2100 (Medium)
2500 (High)
1600-2500 (Wind)
Run Time: 1.5-6.5 Hours
Charge Time: 2-3 Hours
Battery: 3.7V Li-ion, 2400mAh (18650 x 2)
Power: 5VDC, 1A (Micro B USB)
Dimensions: 266(H) x 169(W) x 118(D)mm

Distributed by:
Electus Distribution Pty. Ltd.
320 Victoria Road, Rydalmere
NSW 2116 Australia
Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500
www.techbrands.com