

digitech

Rechargeable Handheld Massage Gun



Model:
GH1768



Please read and save all instructions to ensure safe and effective use of this product.

Instruction Manual

WARNINGS & SAFETY INFORMATION

WARNING: The manufacturer is not responsible for any potential injury from misuse

- For adults only
- It can only be used on dry, clean skin surfaces of the body, and cannot be used through clothes. Press and move it gently on the skin. The duration on each part is about 60 seconds.
- Use this device only on soft tissues of the body without causing pain or discomfort. Do not use it on head or any hard or boned part of the body.
- Only use the vibrating head that can produce the best results.
- Bruise may be caused whether under moderate pressure or normal pressure. Please always check the area that receives physiotherapy.
- Stop using it immediately once there is any sign of pain or discomfort.
- Keep fingers, hair or other parts of the body away from the shaft and back of the vibrating head, because they might be pinched
- Do not place any object in the vent of the device.
- Do not immerse it in water or allow water to enter the vent of the device.
- Do not drop the device or use it improperly.
- Charge the device charger with only 5 VDC.
- Carefully check the device and battery before each use.
- Do not change or modify the device in any way.
- Never operate or charge the device in an unattended way.

BOX CONTENTS

1 x Message Gun

4 x Attachment Heads

1 x User Manual

USAGE INSTRUCTIONS

1. Long press the touch display to power on or off
2. Use the touch panel to adjust the speed
3. The massage head is detachable and replaceable. To disassemble, pull it out with steady force.
4. Please select 5V charging equipment for charging
5. For the first time, please charge for 3 hours. Connect the USB-C cable to a suitable adapter for charging.
6. While charging, the LED display shows the battery level; during operation, it displays the current speed level.

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555