 


GH2102



20L

PORTABLE FRIDGE/FREEZER

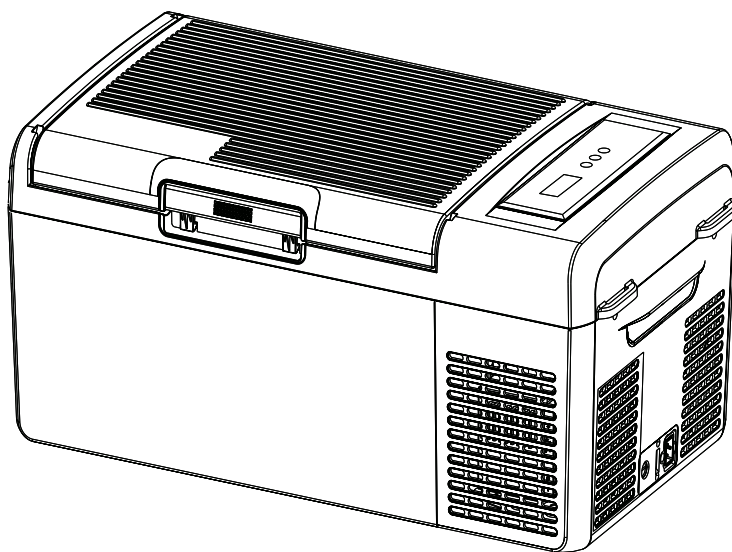

INSTRUCTION MANUAL

CONTENTS

Warnings & Safety Information	3
Before First Use	5
Box Contents	6
Product Diagram	6
Using The Refrigerator in a Vehicle	7
Getting Started	7
Operation	8
Error Code & Solutions	9
Specifications	10
Warranty Information	12

WARNINGS & SAFETY INFORMATION

WARNING: The manufacturer is not responsible for any potential injury from misuse

NOTICE

- By ignoring the safety instructions, the manufacturer cannot be held responsible for the damage.
- The use of accessories that are not recommended by manufacturer can cause injuries and will invalidate any warranty that you may have.
- The appliance shall not be exposed to moderate/heavy rain.
- Place the refrigerator on a dry, secure surface, with adequate ventilation.
- Do not leave the refrigerator unattended in uncovered, outdoor areas exposed to the elements.
- Do not use this appliance near direct heat sources, such as an open flame or radiator.
- Do not place open containers of liquid inside the fridge.
- Please don't put hot/warm food into the fridge directly without letting it cooling off. Place/arrange the content of your fridge securely when using the refrigerator inside a moving vehicle.
- To maximize energy savings, please make sure the lid is closed and secure, and only open the fridge when you need to.
- The power cable must only be replaced by qualified technical personnel and by an assistant body authorized by the manufacturer.
- Before carrying out any maintenance operations on the refrigerator, disconnect all power sources from the fridge.
- Further information is provided on the technical data label inside the product.

CAUTION

- Please keep the fridge in a well ventilated area.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use electrical devices inside the food storage compartments of the appliance, unless approved/recommended by the manufacturer.
- The appliance is only to be used with the power supply unit provided with the appliance.
- It must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
- To avoid contamination of food, please respect the following instructions:
 - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.

- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- Food needs to be packed in bags before putting into the refrigerator, and liquids need to be packed in bottles or capped containers to avoid the problem that the product design structure is not easy to clean.

WARNING

- Do not store explosive items, such as aerosol cans with a flammable propellant in this appliance.
- Risk of fire and electrical shock.
- Do not let hot items touch the plastic parts of the appliance.
- Do not put flammable products or items in, near or on the appliance.
- Do not touch the compressor or the condenser when the fridge is operating. They may be very hot.
- When setting up the appliance, ensure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

INTENDED TO USE

- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses and by clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments;
 - Catering and similar non-retail applications.

CORRECT DISPOSAL OF THIS PRODUCT

- To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the recovery systems or contact the retailer that they can take this product for environmental safe recycling.
- Risk of child entrapment.
- Before you throw away your old refrigerator or freezer:
 - Take off the doors.
 - Leave the shelves in place so that children may not easily climb inside.
- The insulation of the cooling device contains flammable cyclopentane and requires special disposal procedures. Deliver the cooling device at the end of its life-cycle to an appropriate recycling center.

 
BEFORE FIRST USE

Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use. Please pay close attention to the section entitled Warnings & Safety Information. Find a safe and convenient place to keep this instruction manual for future reference. Unpack the product but retain all packaging materials until you are satisfied that your new product is undamaged and in working order. Ensure you have all accessories listed in this manual.

BOX CONTENTS

- 1 x 20L Portable Fridge
- 1 x 12/24V DC Power Cable

PRODUCT DIAGRAM

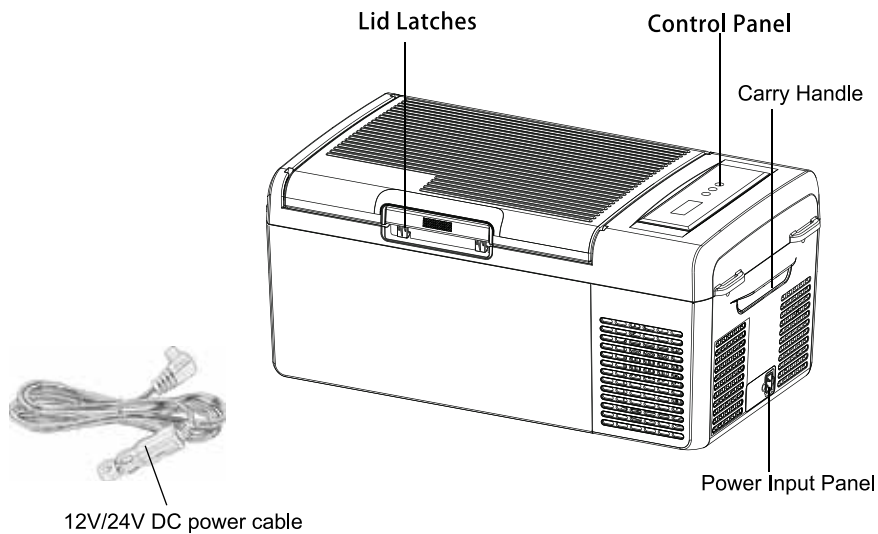


USING THE REFRIGERATOR IN A VEHICLE

CONNECTING WITH 12V OR 24V

Connect the feeding cable to a direct current 24V DC power source.

 
- Make sure the polarity is right.
- If connected to an existing cigarette plug, please carefully check up that power supply is sufficient.
- If the supplied power cable is not used, please see the table containing the information related to the cable section. (The Fridge/Freezer is designed to operate on DC voltage inputs.)

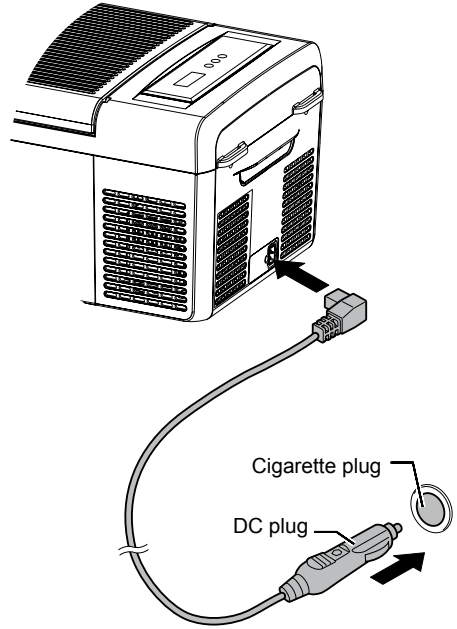



GETTING STARTED

- If the device was not placed in the upright position after transit and delivery, please keep it upright for 24 hours to make sure that the compressor can work properly.
- If the device can't turn on or you encounter other problems for first time use, please contact us for help.
- Pre-cool the empty unit before using it to enhance system efficiency.

  OPERATION

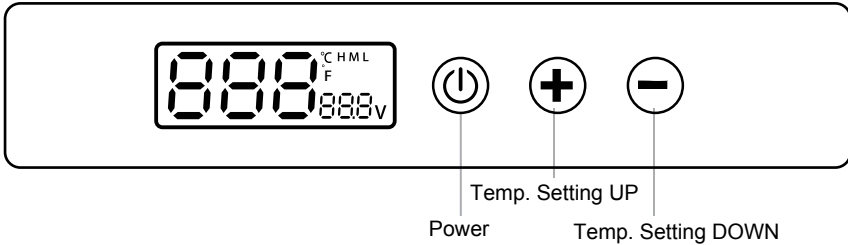


Connect the fridge to a power source and short press “” to turn on the fridge. Short press “” to power off.

ADJUSTING THE TEMPERATURE

With the appliance on, short press “+” button to increase the temperature and the “-” to decrease the temperature. The highest temp is 20°C the lowest -20°C.

NOTE: Hold down the “+” or “-” button to fast scroll.

SWAPPING BETWEEN FAHRENHEIT (°F) & CELSIUS (°C) AND BATTERY PROTECTION SETTINGS

- To swap between C or F on the display you must have the fridge plugged in and turned off, long press “+” and “-” buttons at the same time for 3 seconds to enter the advanced settings.
- When the advanced settings appears, short press “” button to cycle into PR (protection settings), or F/C function (Fahrenheit/Celsius switch mode).
- With F/C showing on screen, short press “+” or “-” can convert Celsius to Fahrenheit. F refers to Fahrenheit, C refers to Celsius.
- With PR showing on screen (protection settings), short press “+” or “-” to set the below voltage protection levels.

BATTERY PROTECTION LEVEL

Protection Level Power Source	M Level is the Default Setting					
	H		M		L	
	Start-up	Cut-off	Start-up	Cut-off	Start-up	Cut-off
12V	12.4V	11.1V	11.7V	10.4V	10.9V	9.6V
24V	25.7V	24.3V	24.2V	22.8V	22.7V	21.3V

ERROR CODE & SOLUTIONS

When there is error for the fridge, there will be code on the display. The possible error for each code would be as follows:

CODE	DESCRIPTION
E1	The DC voltage is under the protection setting and the battery protection mode is activated.
E2	The cooling fan overloads.
E3	Motor start error The motor of compressor is blocked or the pressure difference in the refrigeration system is too high.
E4	Minimum motor speed error The compressor overloads and the motor can not maintain its minimum speed.
E5	Thermal cut-out of electronic unit Thermal cut-out error If the refrigeration system overloads, or the ambient temperature is too high, the thermal sensor is overheated.
E6	NTC failure (Open circuit or short circuit).

- If this error code appears when the fridge is operating on 12V DC, please try to lower the battery protection setting and see if the error is resolved. The battery protection mode may be triggered prematurely on certain vehicles due to small wiring imperfections, contributing to a measured DC voltage drop at compressor start-up. Lowering the battery protection setting may resolve this issue.
- Please also care about the reading of your battery voltage to make sure it is not depleted/discharged
- Please contact us directly if the error persists.

SPECIFICATIONS

Capacity	20L
Net Weight	10.9kg
Dimensions (LxWxH)	615x332x330 mm
Temperature Range	-20°C to 20°C
Rated Power	55W
Refrigerant	R134a

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 3 years. If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.