 


JVC

LED TV Users Guide

AV-J323135A 32" TRAVEL SMART LED TV

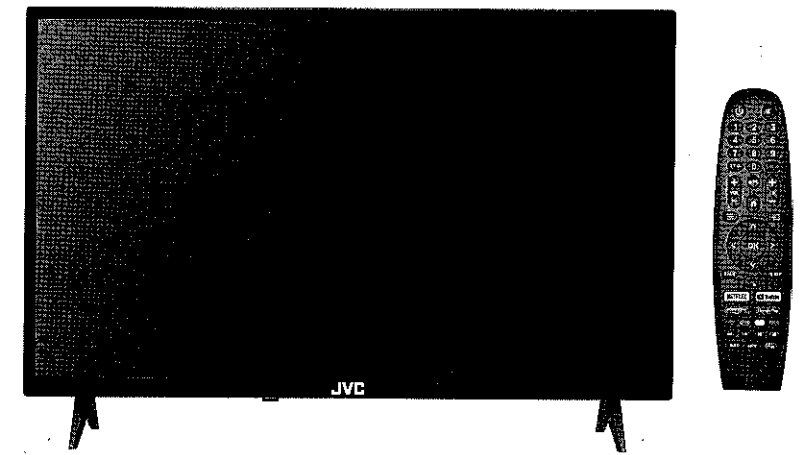


HDMI[®]
HIGH-DEFINITION MULTIMEDIA INTERFACE

Contents

Warnings and Precautions	2
Important Safety Instructions	3
TV Install And Connect	5
TV Stand Installation Instructions	5
Wall Mount Specifications	6
TV Buttons And Terminal Interface	7
Remote control	8
OSD	10
1. Initial Setup	10
2. HOME	19
3. Settings	20
4. TVSource setting	24
5. Google Play	26
6. Multi-Media Player	28
Help	30
Specifications	31

 WARNINGS AND PRECAUTIONS

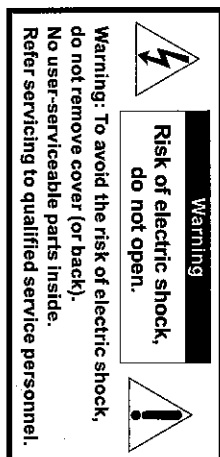

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

CAUTION: TO ENSURE PERSONAL SAFETY, OBSERVE THE FOLLOWING RULES REGARDING THE USE OF THIS UNIT.

1. Operate only from the power source specified on the unit.
 2. Avoid damaging the AC plug.
 3. Avoid improper installation and never position the unit where good ventilation is unattainable.
 4. Do not allow objects or liquid to fall into the cabinet openings.
 5. In the event of mechanical damage, unplug the unit and call a service technician. Do not attempt to repair it yourself or remove the rear cover.
- Changes or modifications not approved by JVC could void the warranty.
- * When you don't use this TV set for a long period of time, be sure to disconnect both the adaptor from the AC outlet and antenna for your safety.
 - * To prevent electric shock do not use this power plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

Do not attempt to service the product yourself

Caution

To prevent electrical shock, do not open the TV casing. There are no user serviceable parts inside. Please refer to qualified service personnel for repairs.

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this unit near water.
- 6) Clean only with a dry cloth.
- 7) Do not block any ventilation openings. Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains etc. There must be a minimum distance of 5cm clear space around the unit at all times to ensure proper ventilation.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat. No naked flame sources such as lit candles, should be placed on or near the unit.
- 9) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the unit.
- 10) Only use attachments/accessories specified by the manufacturer.
- 11) Use only with a cart, stand, tripod, bracket or table specified by the manufacturer or sold with the unit. When a cart is used, use caution when moving the cart/unit combination to avoid injury from tip-over.
- 12) Unplug this unit during lightning storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally or has been dropped.
- 14) The unit should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the unit.
- 15) Place the television on a stable, flat surface. Failure to do so can result in the television falling, causing injury.
- 16) Do not allow young children to play around or on the television. Do not hang from the unit. Failure to do so can result in the television falling, causing injury.
- 17) Do not allow young children to play with the plastic bag that came with the television when you unpacked it. Failure to do so can result in suffocation, which may lead to death.
- 18) Avoid improper installation and never position the unit where good ventilation is impossible. When installing this unit, distance recommendations must be maintained between the set and the wall, as well as inside a tightly enclosed area or piece of furniture. Keep to the minimum distance guidelines shown for safe operation.
- 19) **Cautions for installation**
 - Do not tilt the unit left, right or towards the back.
 - Ensure the power cord is out of the path of foot traffic.
 - The unit will generate a slight amount of heat during operation. Ensure that sufficient space is available around the unit to allow satisfactory cooling.
 - Have two people remove the unit from the box with the screen facing away from you. It's possible your clothing (such as a belt buckle or button) may scratch the front of the unit. Do the same when moving the unit to another location.



IMPORTANT SAFETY INSTRUCTIONS

- 20) Make enough room for inserting and removing the power plug. Place the unit as close to the outlet as possible. The main power supply for this unit is controlled by inserting or removing the power plug. Physically disconnecting the power plug is the only way to completely disconnect the unit from the mains power source.
- 21) Batteries must not be exposed to excessive heat such as sunshine, fire or the like.
- 22) When this unit is connected to the wall outlet, it is always on standby even when all the LED lamps are not lit. To shut down the unit, unplug the unit from the wall outlet.
- 23) If the supply cord is damaged, it must be replaced before further use by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- 24) Always place the TV on furniture that can safely support the TV. Make sure the ends of the TV do not hang over the edge of the supporting furniture.
- 25) Do not place the TV on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the TV to a wall or other suitably strong support.
- 26) Do not stand the TV on cloth or other materials placed between the TV and the supporting furniture.
- 27) Where the mains adaptor is used as the disconnect device, the disconnect device shall remain readily operable.

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

 
If your existing television set is being retained and relocated, the same considerations as above should be applied.

Contents of Box:


- 1 x TV Unit
- 2 x Legs
- 4 x Leg Screws
- 1 x Remote Control with 2x AAA batteries
- 1x Mains Adaptor
- 1x Car Adaptor

TV Stand Installation Instructions

1. Open the box and take out the TV and accessories.
2. Lay the TV face down on a soft cloth or a towel on a flat surface like a table.
3. Align each Leg to the holes on the bottom of the TV, then use the provided 2x Screws to attach the Leg to the TV. Repeat for the other Leg.

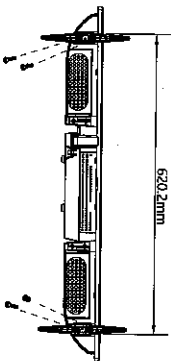

Screws: 4x(BA4x18mm)

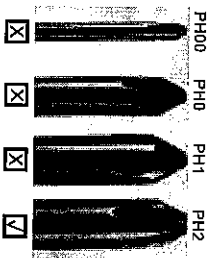 

Note: Use a PH2 type screwdriver to prevent scratches and for best results.

TV Install And Connect

Position your TV

- Choose a suitable location for your TV.
- It should bear the weight of the TV and the TV should have sufficient ventilation.
 - Light shouldn't shine onto the screen.
 - Soft lighting is recommended.
 - Do not locate in a damp or hot environment.
 - Keep away from water.

Connect antenna and power

Connect the antenna cable to the antenna socket on the back of the TV. We recommend connecting to a good quality outdoor antenna.

This TV can be powered in two ways.

 
1. From mains supply via a DC 12V Mains Adaptor included.
2. From 12 V supply via the 12V Car Adaptor included.

Remote control

Open the battery compartment on the back of the remote control and insert 2x AAA batteries ensuring correct polarities as marked.

Turn on the TV

Once the TV is powered, it is in standby mode. Now press the power button on the TV or the remote control to turn on the TV.

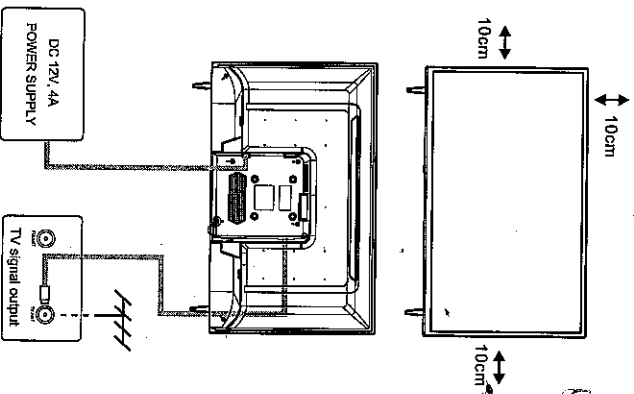


Wall Mount Specifications

Model No. AV-J323135A

Compatible wall-mount size	Screw size for connecting the TV to the wall mount
VESA 100*100mm	M6x10(mm)*

 * The length of the screw specified is only a recommendation; actual length required can vary depending on the type of wall mount used.

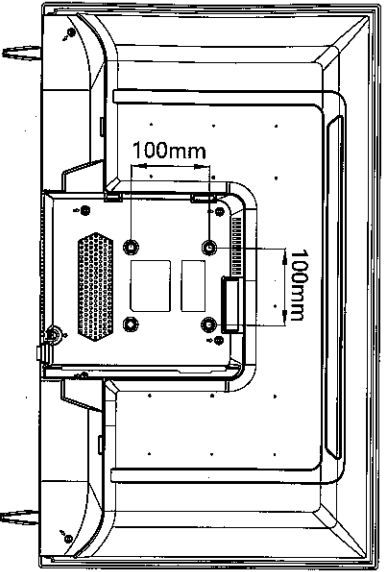


Note:

1. A wall mount is not included with the TV; it needs to be purchased separately.
2. Use only VESA-compatible wall mounts according to the specifications recommended for this model. Use of other wall mounts, or inappropriate installation may cause personal injuries or damage to the TV.
3. Please follow all instructions from the user manual of your chosen wall mount.

TV Buttons And Terminal Interface


TV Buttons

 Standby Button:

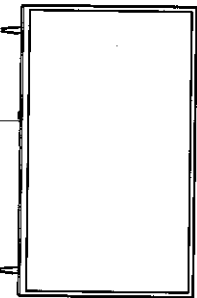


Press to turn on the TV or switch it to standby mode.

 Terminal Interface

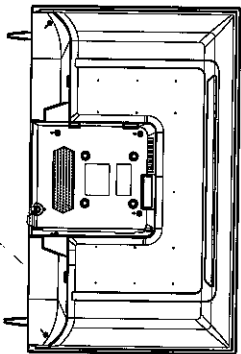


REAR AV CONNECTIONS(SIDE)

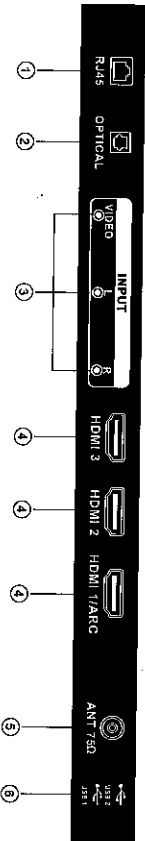 


1. **RJ45:** Connect to the Internet.
2. **OPTICAL:** Digital Audio Output.
3. **AV Input:** External AV Signal Input and Right/Left Audio Inputs.
4. **HDMI Input:** Connect to the HDMI output jack of up to 3 external video sources (eg. DVD player/ Blu-ray player / games console).
5. **ANT 75Ω/RF Connection:** Connect to the antenna/cable TV output of your device or wall plate.
6. **USB Input:** Connect to your USB device for PVR recording or to play compatible multimedia files stored in it.

 External Device Connection

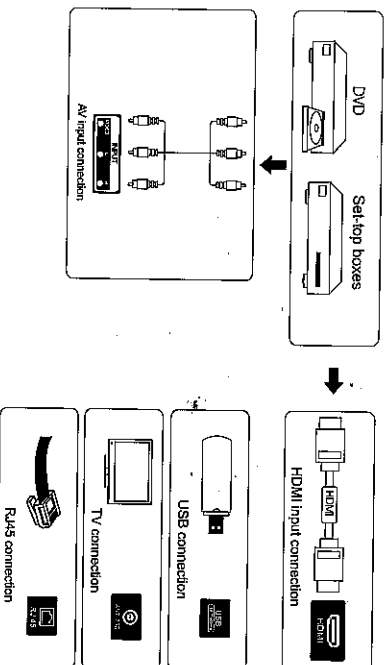

Remote control

 
The remote control uses 2 x 'AAA' batteries. Please ensure correct polarities when inserting batteries. Note: This is a Bluetooth remote control. In order to use all its features including voice control, please pair it with the TV as explained in 'Initial Setup' in the following pages.

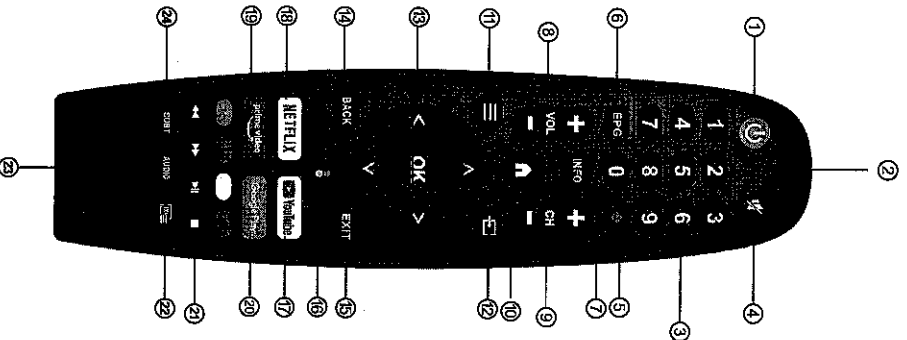

- 1 Switches the TV between on and standby mode.
- 2 Indicator light.
- 3 Number Buttons:Direct access to desired TV channels.
- 4 Mute or restore your TV sound.
- 5 PVR:Record Live TV programme.
A USB memory device must be connected.
- 6 Displays the EPG Electronic Programme Guide.
- 7 INFO:Displays the present channel information such as the current time and channel name.
- 8 Volume +/-: Increase or decrease TV volume.
- 9 Channel +/-: Next or previous TV channel.
- 10 HOME: Opens the Android TV home page.
- 11 Menu:Displays the OSD (On Screen Display) menu.
- 12 Inputs:Display/Select signal source options.
- 13 Navigation buttons:Cursor UP/LEFT/RIGHT/DOWN.
OK: Click to confirm your selection.
- 14 Back:Press to move back through menus.
- 15 Exit:Exit the OSD menu.

*Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.

 Remote control

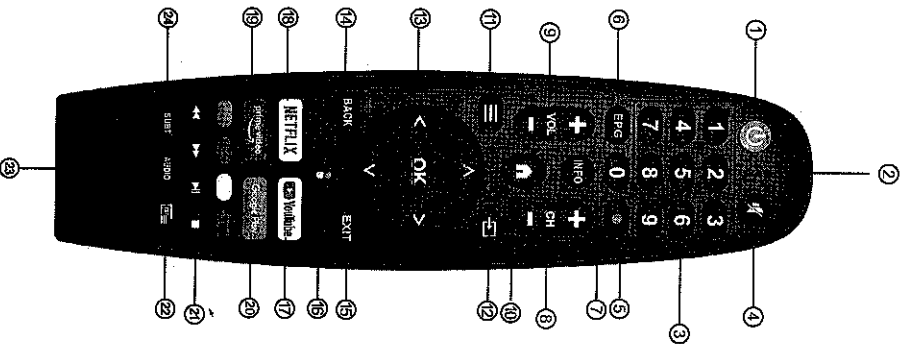

- 16 Google Assistant:
Talk to Google to control your TV using your voice.
See Initial Setup in the following pages.
- 17 YouTube:
Connects to YouTube (Internet connection required).
- 18 NETFLIX:
Connects to NETFLIX for viewing online TV shows and films (Internet connection required).
- 19 Prime video:
Connects to Prime video (Internet connection required).
- 20 Google Play :Connects to Google Play (Internet connection required).
- 21 Media control buttons:
◀◀ Fast Back
▶▶ Fast Forward
⏸ HI Play/Pause
■ Stop program
- 22 TXT: Press to enter Teletext when playing program.
Note: Teletext functions are not available in Australia.
- 23 Audio:Displays the Audio Language list and select an audio language or audio format if available (only applicable when the TV programme has this feature).
- 24 SUBT: Open or close subtitles when a program has subtitles.

Initial Setup

1. Initial Setup

For the first initial setup, on-screen setup wizard will guide you through setting up your TV. Please follow the guide to setup your TV correctly.

1.1 Language select

Use A/V buttons to select system languages, then press **[OK]** to confirm.

1.2 Quickly set up your TV with your Android™ phone? (Continue/skip)

To connect your Android Smartphone to your TV, Select "Continue".

 
1. On your Android Phone, open the Pre-installed app "Google".

2. Type or say, "Ok Google, set up my device".

3. Tap the model name on the list.

Note: Press "BACK" to cancel

If you just want to use your TV normally, please select "Skip"

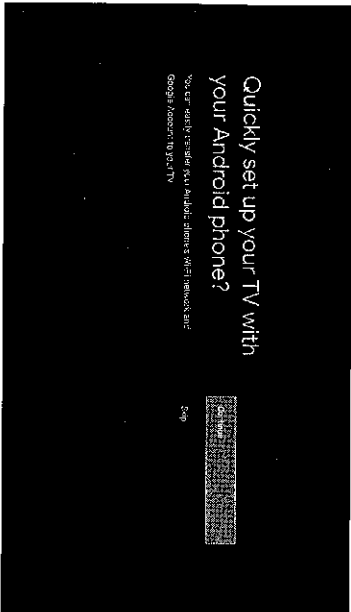

1.3 Configure the network

Press A/V buttons to select Wi-Fi you wish to connect to, enter the password and then confirm to connect. If you select "Skip", it could be performed in homepage or settings menu. If using the Ethernet connection, you can skip this step.

1.4 Google Account Sign in

Sign in to get new apps, recommendations, movies, and more from Google.

 
Initial Setup

Use your remote:

Use the remote to enter your Google Account and password to sign in to your Google Account.


1.5 Terms of Service

Accept the Google Terms of Service to improve the product experience, Select "Accept" to proceed with this condition.

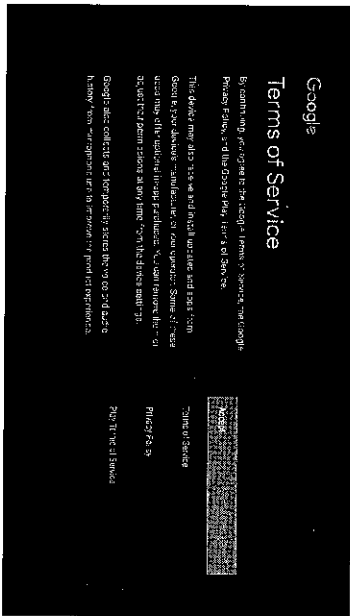

1.6 Google Services

 Select "Accept" to confirm if you want your location identified on your Android TV and agree to automatically send diagnostic information to Google to help improve your Google experience.

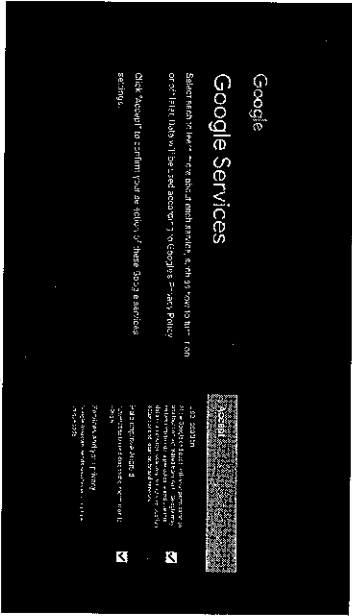


1.7 Play Auto Installs


Select install or un-install the recommended apps and Google Play apps by using this process. Select "Continue" to the next page.

Google Assistant Press Google Assistant button on your remote control. Use your voice to search for shows, control devices, and more.


 
Initial Setup

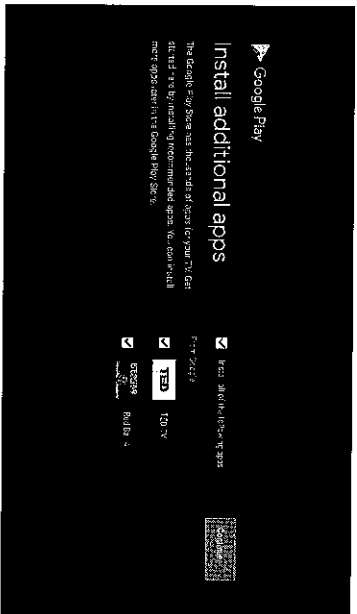

 
Information screens will now appear. You can scroll through steps by pressing "RIGHT" directional button to continue.

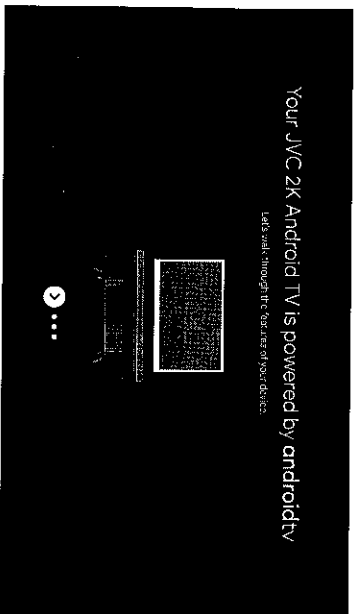

Initial Setup

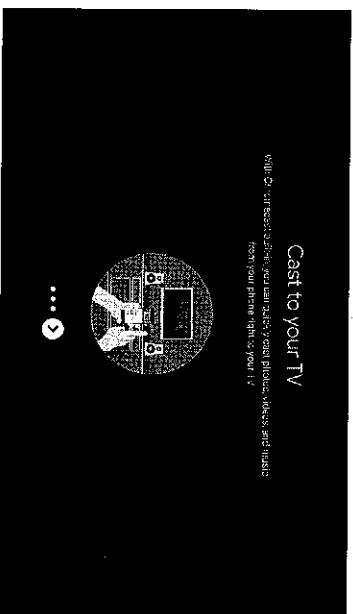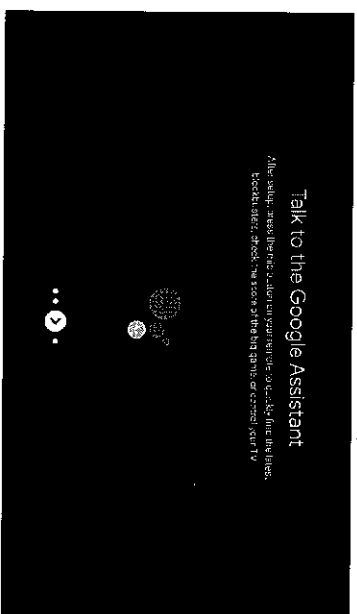  


 1.8 Pairing Bluetooth Remote
1. Press 'BACK' and 'VOL-' simultaneously on remote control to enter the Bluetooth pairing mode. The Indicator light on remote control will flash when starting the pairing mode. When both buttons are pressed, the pairing process will start.

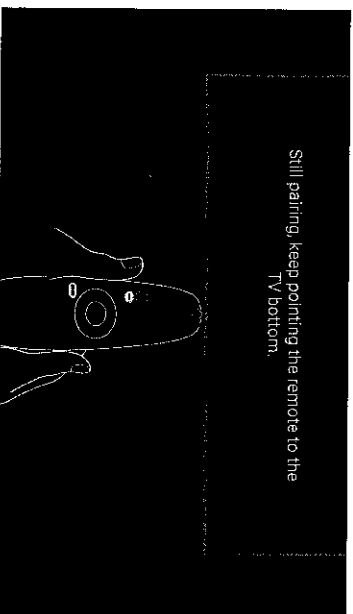


Initial Setup

 If pairing is successful, you will see the below image on screen.

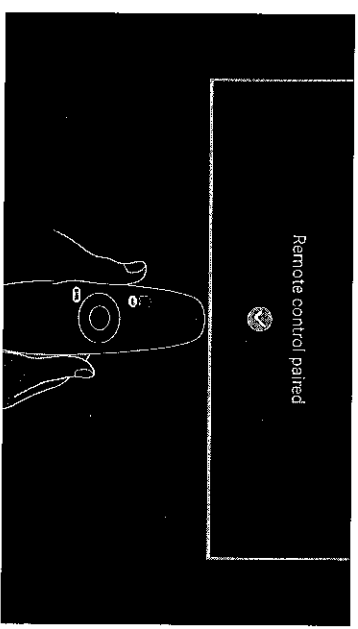


 If pairing failed, the TV will prompt you to repeat the pairing process as below.

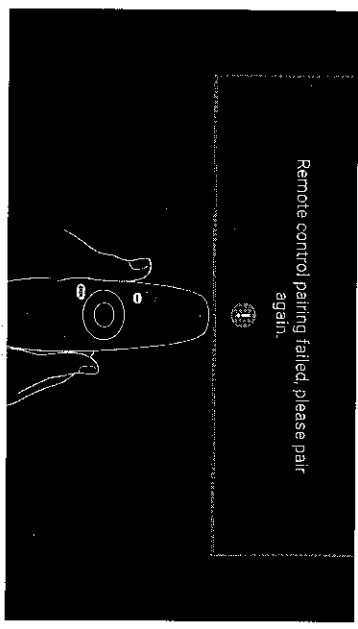

Initial Setup

 2. Press "OK" to skip the pairing mode.

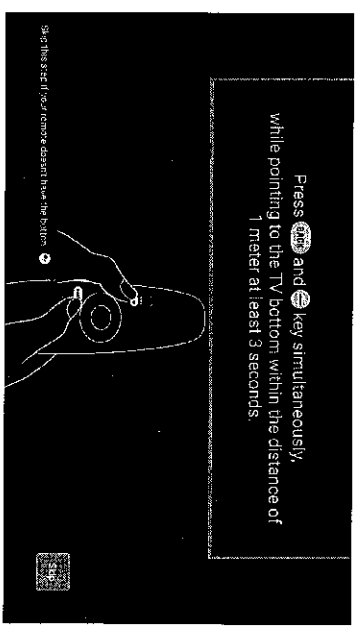


Important: The remote control pairing process can be initiated at any time by pressing the "Google Assistant" button on the remote control.

1.9 Select Region/Country


Select the country you are using the device in with the **▲/▼** directional buttons, then press **[OK]** to confirm.

 Password: Please set password. "0000" is invalid.

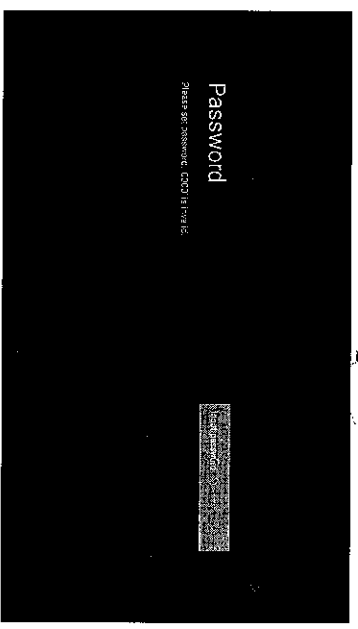

Initial Setup

 Time Zone: please choose the time zone as you need.

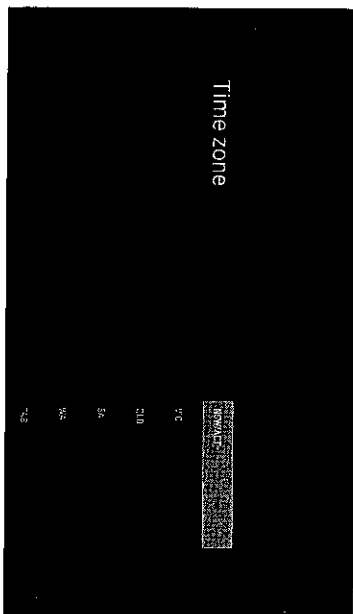

- 1.10 Select TV mode(Home/Retail)
Select "Home" if you are using this TV for use at home. Make sure to confirm once you have selected "Home".

Initial Setup

 
- 1.11 Chromecast Built-In always available
Select On/Off to make Chromecast built-in available.





- 1.12 TV Channel Setting (This is Channel scan during start up)
You may select Channel Scan type as below image.
If you select "Skip", the channel scan could be skipped.



Initial Setup

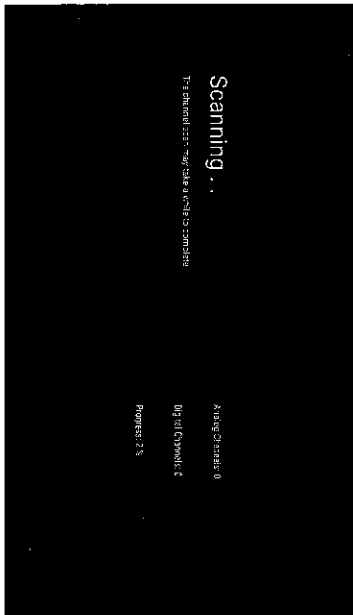

  
1.13 Setup completed and Disclaimer Terms

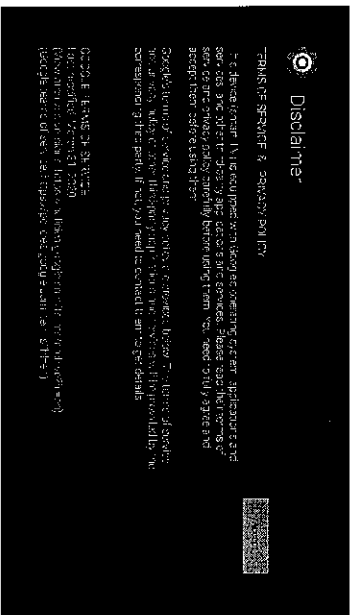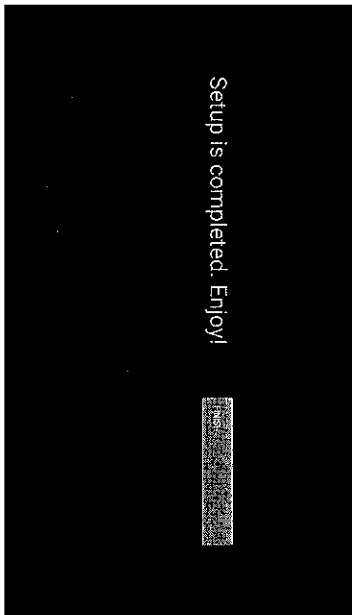

HOME

2. HOME

 Once you have completed initial setup, you will now enter the home screen or press **HOME** button to display the homepage.

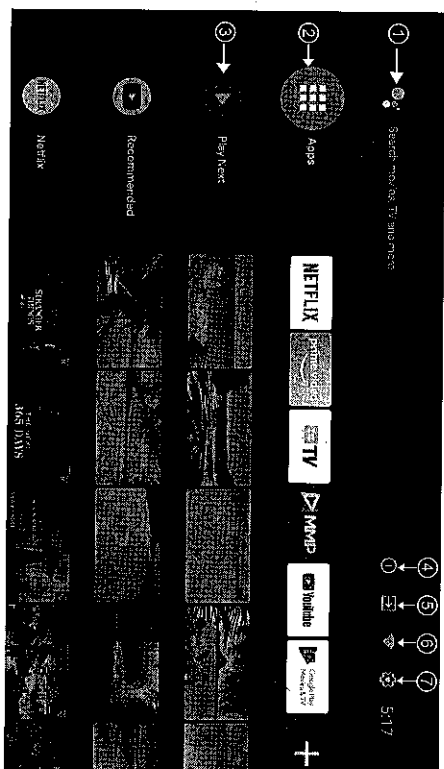

* Image for illustration only, actual screen may vary.

① Google Assistant

Use your voice to jump to shows, control devices, and more—just ask Google.

② Apps

Select "Apps" to have access to all your applications. Pre-installed applications are available for you in this row, select "Google Play" if you wish to search and download additional apps.

③ Play Next

Each row past this point will display recommended content from the apps you already have installed.

④ Notifications

Display all notifications relating to anything on your Android TV.

⑤ Inputs

Select this if you want to adjust your TV input. Example: TV, HDMI 1, HDMI 2.

⑥ Network

Displays the network connectivity, Wi-Fi or Ethernet.

⑦ Settings

 
Manage apps and TV controls, change preferences, sounds, and account.

Settings

3. Settings

Adjust various settings of your TV.

1. Press </> button to select "Settings" which is in the upper right corner of the screen.
2. Press A/V button to select the option which you want to adjust in the Settings menu.
3. Press [OK] to enter.

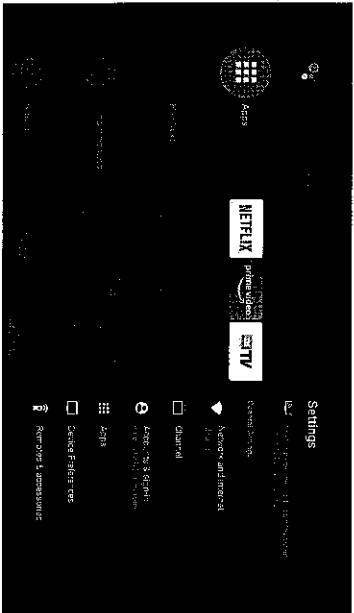

3.1 Network & Internet

Adjust network settings and check connection if you have connection problems.

 
1. Press A/V button to select "Network & Internet" in the settings menu.
2. Press A/V button to select: Wi-Fi/Add new network/Scanning always available/Proxy settings/IP settings.

Settings

3.2 Channel


Display the scan sub-menu based on different channel installation modes.

1. Press A/V button to select "Channel Source" & Channel installation Mode & Parent Control.
2. Press [OK] to enter "Parental Controls", then press A/V or use the number buttons on remote control to enter the default password "1234".
3. Press A/V button to select Channels Blocked, Program Restrictions, Inputs Blocked and Change PIN.

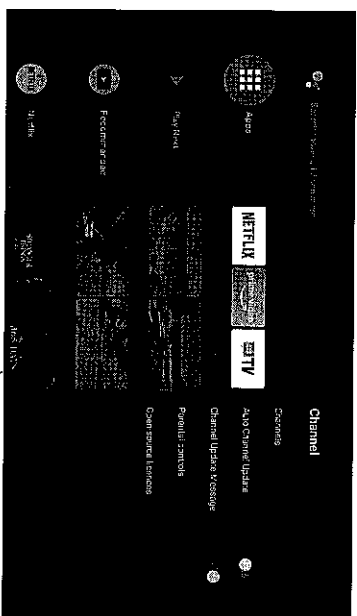

Auto Channel Scan

 
Choose Settings --> Channel --> Channels --> Channel Scan. This will start a channel scan, wait for the scan to finish (100%).

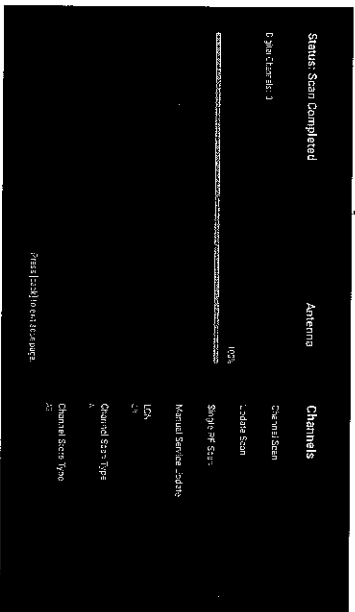

Settings


3.3 Device Preferences

 1. Press **A/V** button to select the options of About, Date & Time, Timer, Language, Inputs, Picture, Sound, Google Assistant, Reset and others.
2. Press **[OK]** to jump to the corresponding sub-option.

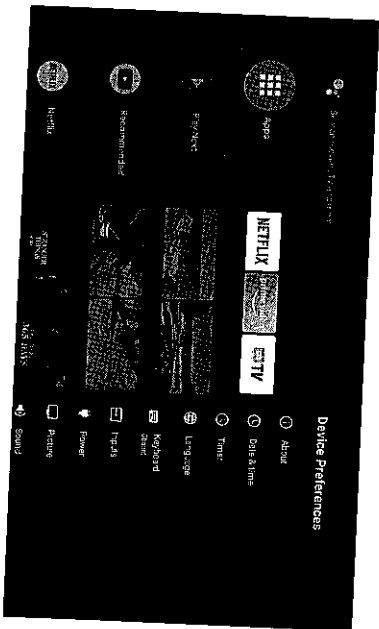

3.4 About

 1. Press **A/V** button to check additional information such as System update, Device name, Restart, Status, and more.
2. Press **[Back]** button to return to the previous menu.


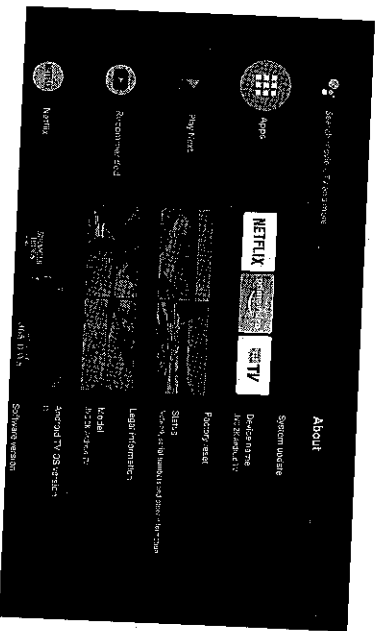


Settings

3.5 Factory reset

Choose **Settings** --> **Device Preferences** --> **Factory Reset** --> **Delete everything** to do a factory reset on your TV.

  If **Factory reset** is selected, it will erase all data from your device's internal storage, including: your **Google Account**, **system** and **app data** and **settings**, and **downloaded apps**.

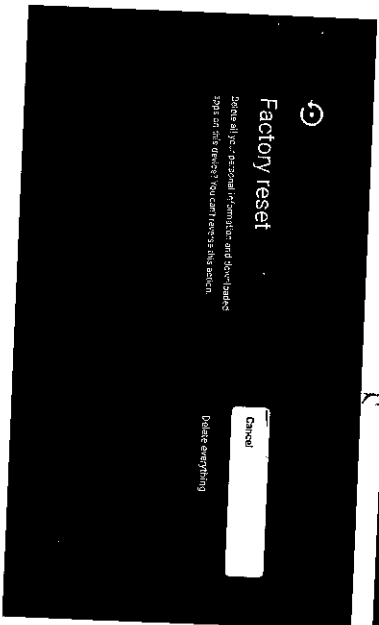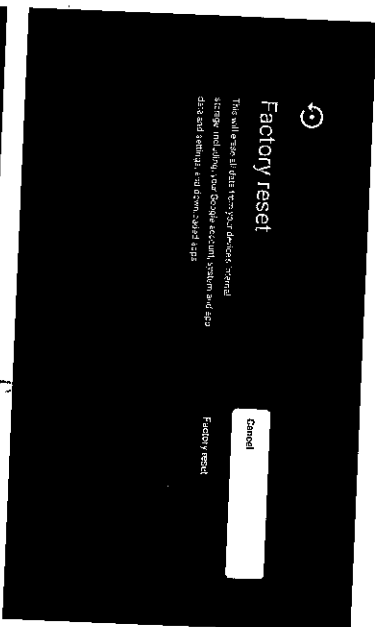


TV Source setting

4. TV Source setting

To enter TV source in Homepage:

 1. Press "Live TV" button or Select "Live TV" on Homepage.

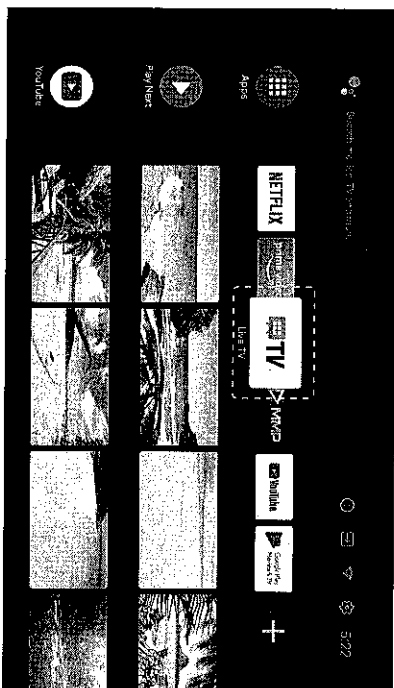


Important: You will need to perform a Channel Scan every time you use the TV in a new location. Choose Settings -> Channel -> Channels -> Channel Scan to scan for available channels.

2. Press "Channel Scan" button, then select "Channels" and select "Channel Scan" to enter.

3. How to add Favorite channel list

 - 1) Press the OK button on the remote control to enter Channel List.
- 2) Scroll down to the desired channel and press the blue button on the remote control to add the channel to the favourites list.

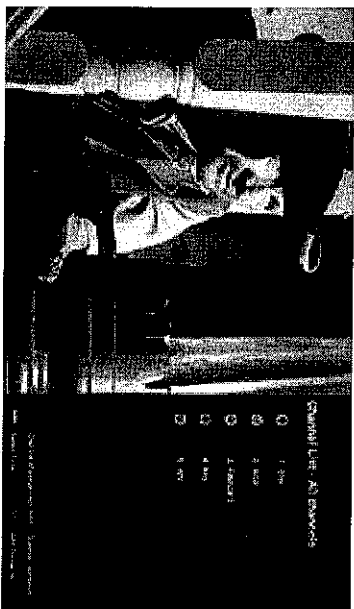

TV Source setting

 
- 3) Choose a position (Favourites 1, 2 etc.) for the chosen channel.




Google Play

5. Google Play

To have access and to download applications from Google Play, you must sign in with a Google Account.

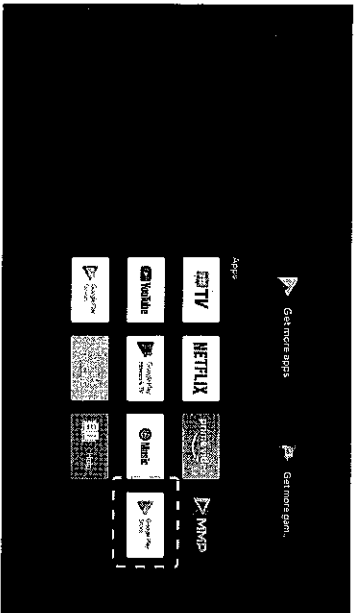


 Once you open Google Play, you will be prompted to sign in or create a new account.

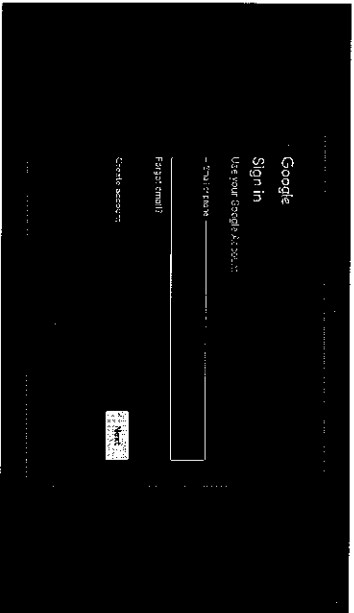

Google Play

 Once you have signed in, you will be brought to the below page, scroll through the list of applications available for download or press the Google Assistant button on your remote to talk to Google. You may also click "Search" on top right of screen to start search.

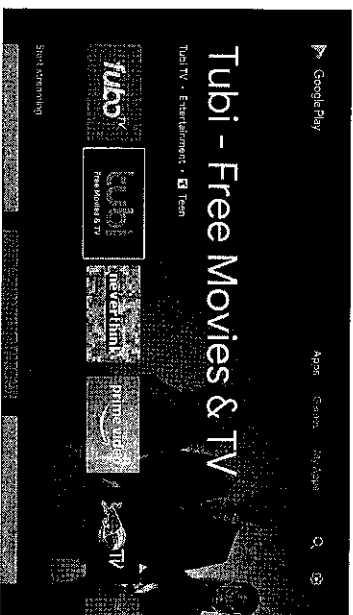

Multi-Media Player

EPG Function

EPG is an on-screen guide available for digital channels ONLY. EPG allows you to view a list of digital programs being broadcast.

To enter the EPG, press **EPG** on the remote control and the program guide menu will appear. You can use **A/V/V/</>** on the remote control to navigate through the different programs. Use the related color buttons shown at the bottom of the screen to view EPG.

NOTE : When you go through the programs, the background channel changes according to the programs viewed.

RED	Red button (Previous Day) : Display the programs of previous day.
Green	Green button (Next day) : Display the programs of the next day.
Yellow	Yellow button (View Detail) : Display the detailed information of programs in multiple pages.
Blue	Blue button (Type Filter) : Display the type list of the program. You can navigate through the different types and available subtypes using A/V/V/</> on the remote control. Select one or more types and then press OK . After filtering, all your desired digital TV programs will be highlighted.

PVR Function

Note: Connect FAT32 format USB to your TV to start recording.

To access recording menu:

1. Press "Menu" Button on your remote control while watching live tv.
2. 'TV Options' will appear on screen, scroll down (Down Button) and choose 'Record' to go into record menu.
3. Press the PVR button (one with the red dot) on the remote control to start recording.
4. To stop recording, press the Stop Button on the remote control.
5. Select 'Record List' to view previous recordings.
6. Select 'Schedule List' to see programs you have scheduled for recording.

 
 
USB Function

Connect FAT32 format USB to your TV to start PVR recording, Timeshift or Multimedia playback function. You may choose "MMF" App from Home Screen to access your USB.

The built-in multimedia player app (MMF) is best suited for playing files recorded on this TV.

If you experience compatibility issues when playing other media files, we recommend that you use a third-party app like VLC or similar.

Multi-Media Player

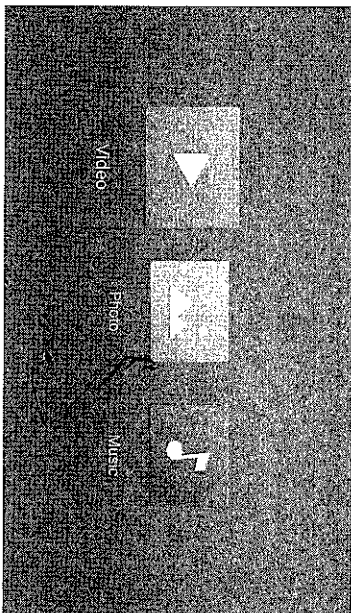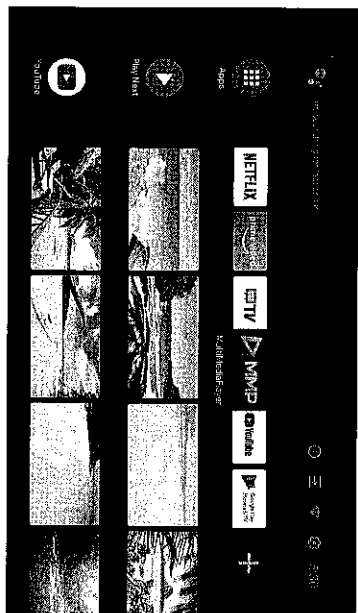

Multimedia Format

Photo Format	JPEG, JPG, PNG, BMP, GIF
Movie Format	MKV, MP4, MOV, VOB, DAT, MPG, WMV, TP1, RP, 3GP, TS
Music Format	MP3, AC3, AAC, WAV, FLAC, M4A

For DTV PVR

USB Stick: Format: FAT32, max 64G

HDD: Format: FAT32, max 2T

For media playback

Format: FAT32, max 2T

Help

Problem	Possible Cause/Solution
No power	<ul style="list-style-type: none"> Is the TV plugged into mains supply or through a 12V DC power supply? Check the connection.
Audio and video quality is poor	<ul style="list-style-type: none"> Check the antenna connection. TV must be connected to a good quality outdoor antenna.
Audio is fine, but video is discoloured	<ul style="list-style-type: none"> Try adjusting the contrast and brightness from Home Page--Settings (gear icon on top right corner) → Device Preferences → Picture
Video appears but no audio	<ul style="list-style-type: none"> Try increasing the volume. Check if the TV is on mute.
No picture	<ul style="list-style-type: none"> Check the antenna connection. TV must be connected to a good quality outdoor antenna. Try switching to another channel.
Distortion or broken lines on screen	<ul style="list-style-type: none"> Electrical appliances like hair dryers or vacuum cleaners may cause interference. Turn these off and try again.
Remote control does not work properly	<ul style="list-style-type: none"> Use the remote control close to the TV and remove any obstacles in the way. Try replacing the batteries. Has the remote control been paired to the TV to use the Bluetooth functions?
How to pair the remote control to the TV / Using the Google Assistant or voice functions of the remote control	<ul style="list-style-type: none"> Has the remote control been paired to the TV to use the Bluetooth functions? To pair, press BACK and VOL – Buttons on the remote control simultaneously. The indicator on the remote control will flash and start pairing. Follow the on-screen instructions. See Initial Setup – Pairing Bluetooth Remote section in the manual for more details.
How to tune channels / Not getting channels when TV is in a new location	<ul style="list-style-type: none"> TV will need to be re-tuned to get all available channels. Select Home Page--Settings (gear icon on top right corner) → Channel → Channels → Channel Scan to do a channel scan.
How to do a factory reset on your TV	<ul style="list-style-type: none"> Select Home Page--Settings (gear icon on top right corner) → Device Preferences → Factory Reset. Please note that this will erase all current system data including app data.
How to connect to Wi-Fi	<ul style="list-style-type: none"> Select Home Page--Settings (gear icon on top right corner) → Network and Internet → Wi-Fi and select / add your network.

Specifications

Viewing Picture Size (Diagonal)	32"
Resolution	1366x768
Aspect Ratio	16:9
Brightness	220cd/m ²
Contrast Ratio	3000:1
Refresh Rate	60Hz
TV System	PAL-B/G, I, D/K SECAM-B/G, D/K, L DVB-T, DVB-T2
Memory+Storage	1G DDR +8G EMMC
WiFi	2.4GHz / 5GHz IEEE802.11a/b/g/n/ac
Input Power Voltage	DC 12V
Power Consumption	48W
Audio Output Power (THD≤7%)	2x8W
Signal Input	High-Definition Multimedia Interface (HDMI) x 3 AV IN x 1 USB x 2 ANT x 1 RJ45 x 1
Signal Output	OPTICAL x 1
Unit Size	732x180x483.1mm
Unit Size (Without Stand)	732x74.8x434mm
Net Weight	3.6KG



Manufactured under license from Dolby Laboratories.
Dolby, Dolby Audio, and the double-D symbol are
trademarks of Dolby Laboratories Licensing Corporation.



HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Google, Google Play, YouTube, Android TV and Chromecast built-in are trademarks of Google LLC.

JVC

Register your product at jvctv.com.au/warranty-registration