

RC FIRE ENGINE TRUCK WITH WATER SPRAY

 


User Manual




R-NZ


Box Contents:

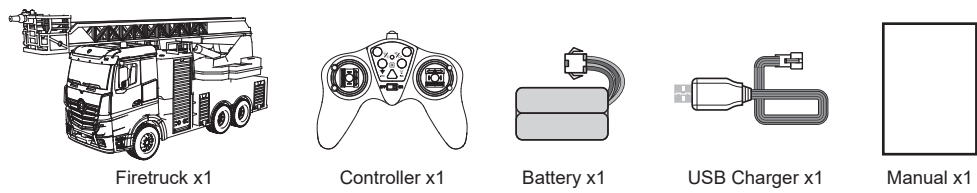

Product Diagram:

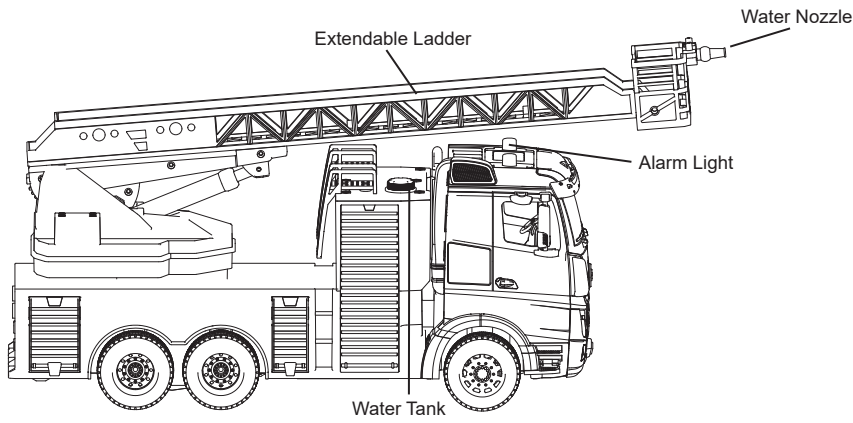 


Remote Control Diagram:

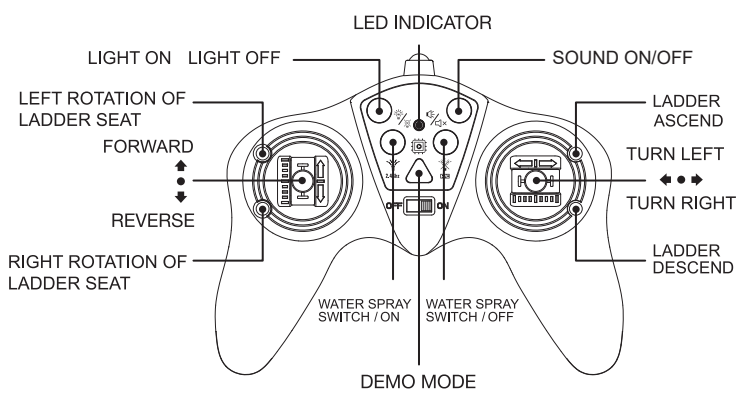 


Battery Installation:

 
-Install battery into controller

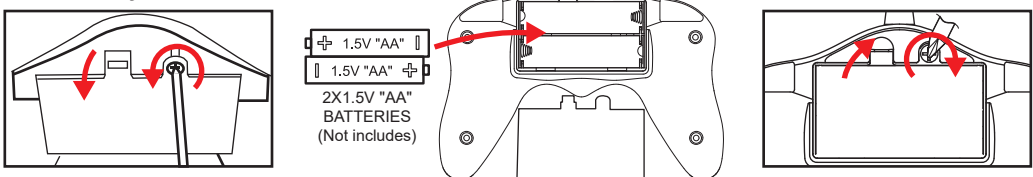

 
-Connect the rechargeable battery with firetruck

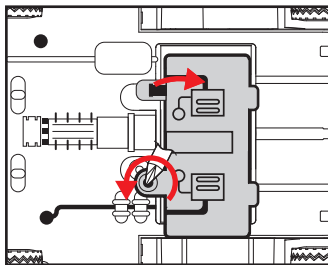

 1. Unscrew the battery cover of firetruck

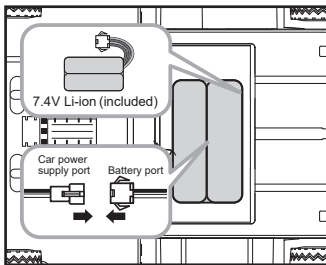


 2. Connect the rechargeable battery with firetruck


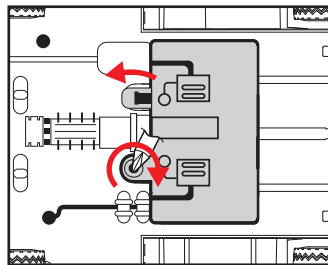


3. Close the cover and tighten the screw

 
-Charging

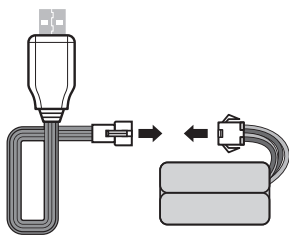

  1. Connect the battery with USB charging cable
2. connect the USB cable with USB charging port
3. Indicator light of USB is red when it is charging, indicator light of USB goes out after it is fully charged. Then please pull it out from power supply.

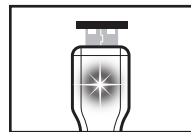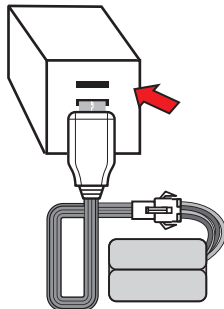


Charging(red)

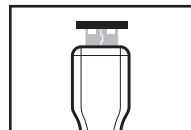 


Fully charged

 
-Fill up with water

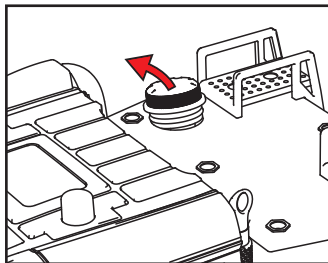

 1. Open lid of water tank

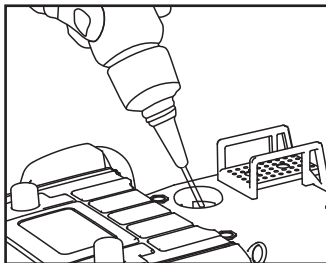

 
2. Filled with water by dropper bottle

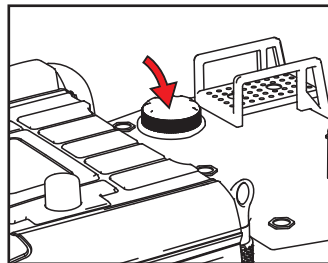


3. close the lid

Operation:

 
-Pairing

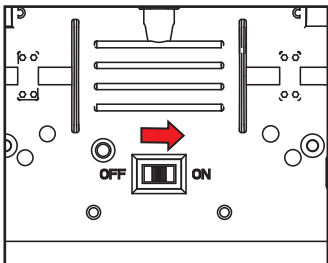

 1. Turn on the firetruck firstly

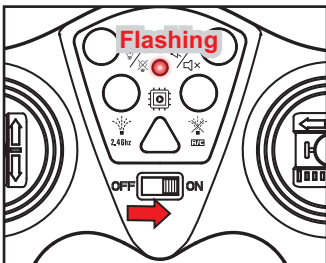


 
2. Turn on the controller

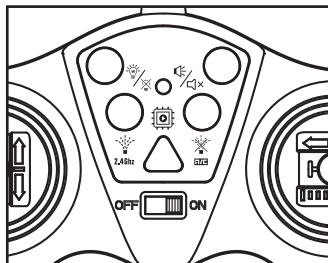

3. The indicator light turned off after it paired successfully.



-Move Forward

  Push the left joystick, and the firetruck will move forward.

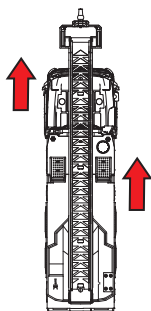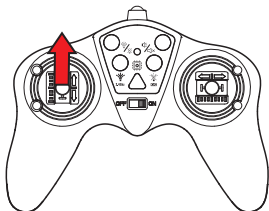



-Move Backward

  Push back the left joystick, and the firetruck will move backward

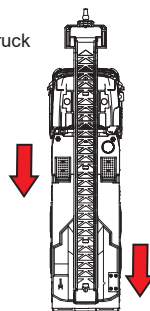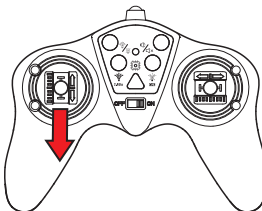



-Turn Left

  Push up the left joystick and hold the right joystick to the left, firetruck will turn left.

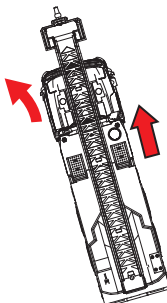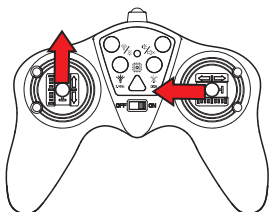



-Turn Right

  Push up the left joystick and hold the right joystick to the right, firetruck will turn right.

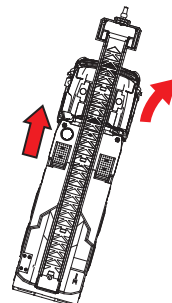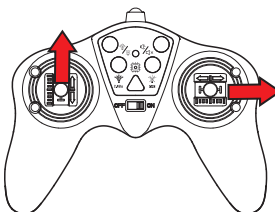



-Backward Left

  Push down the left joystick and hold the right joystick to the left, firetruck will move backward left.

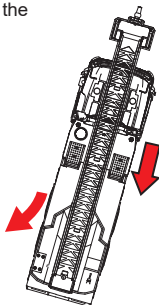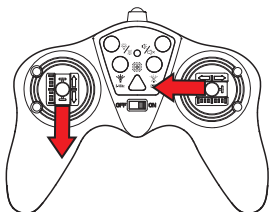



-Backward Right

  Push down the left joystick and hold the right joystick to the right, firetruck will move backward right.

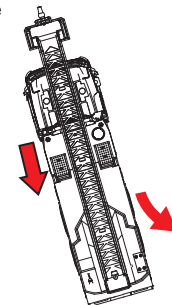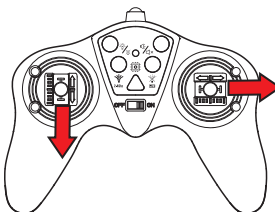



-Turn Left The Ladder

  Press button#, the ladder will turn left

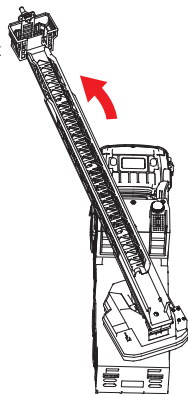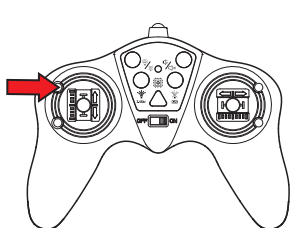



-Turn Right The Ladder

  Press button#, the ladder will turn right

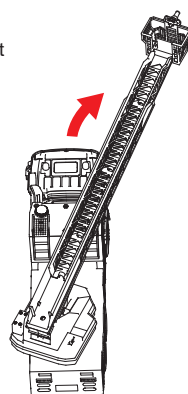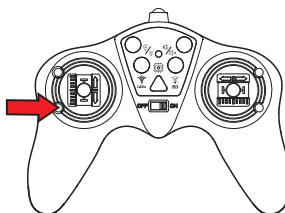



-Ladder Ascending

  Press button#, the ladder will rise

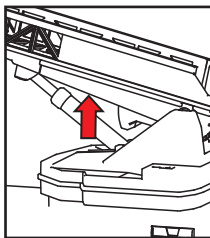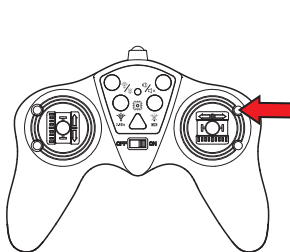



-Ladder Descent

  Press button#, the ladder will go down

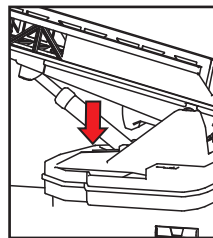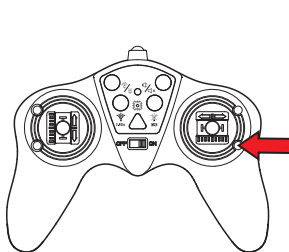



-Light On/Off

  Press button# to turn on the light / to turn off the light.

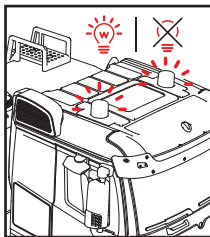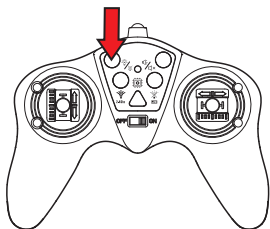



-Sound On/Off

  Press button# to turn on the sound / to turn off the sound.

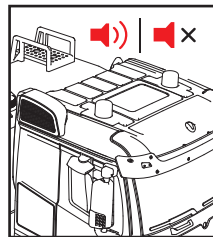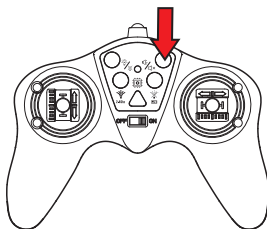



-Spray Water

  Press button# to spray water.

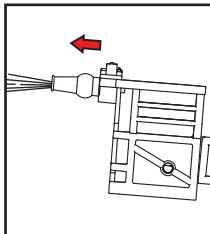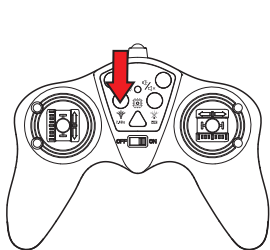


-Spray Water

  Press button# to off spray water.

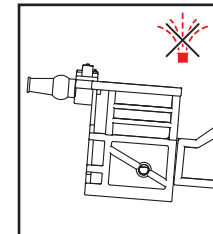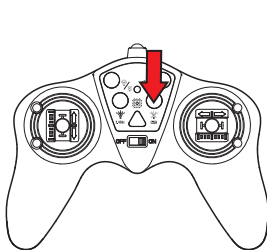

-Manually extend the ladder

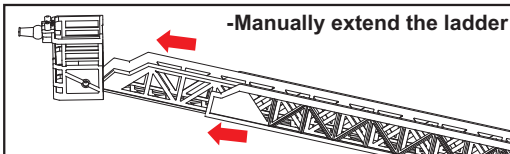 

WARNINGS

Do not aim the water cannon at the eyes or face.

Not suitable for children under 3 years, small parts may present a choking hazard.

Recommended for children aged 8 years and over.

Adult supervision is required during operation and charging.

Remove all packaging materials before giving the toy to a child and dispose of the materials safely.

Do not modify or attempt to repair the fire engine truck.

Do not use the fire engine truck if any component is damaged or loose.

Keep the fire engine truck away from water, heat or excessive moisture.

Operation & Storage:

Only operate the fire engine truck indoors or in a suitable open area away from obstacles.
Switch off the fire engine truck and remote control when not in use.
Securely close the battery compartment before use.
Store the product in a cool, dry location away from direct sunlight.
Clean the product using a soft, dry cloth.
Do not use water, solvents or abrasive cleaners.
Do not immerse any part of the product in water.

Battery Charging & Safety:

The rechargeable battery must only be charged by an adult or under direct adult supervision.
Only use the supplied USB charging cable.
Connect the charging cable to a suitable 5V USB power source.
Do not use a damaged charging cable, battery or USB power source.
Charge the product indoors in a dry, well-ventilated location.
Place the product on a hard, flat and non-flammable surface while charging.
Do not leave the product unattended while charging.
Do not charge the product overnight.
Disconnect the charging cable when charging is complete.
Do not operate the fire engine truck while it is charging.
Allow the battery to cool before charging.
Do not cover the fire engine truck or charging cable during charging.
Keep the product away from fire, direct sunlight and excessive heat.
Do not crush, puncture, bend, open, short-circuit or incinerate the battery.
Do not expose the battery to water or other liquids.
Do not attempt to remove or replace the internal battery unless the product is specifically designed for user replacement.
Stop charging immediately if the battery becomes hot, leaks or shows any sign of damage.
Insert batteries according to the polarity markings inside the battery compartment.
Do not mix old and new batteries.
Do not mix alkaline, standard carbon-zinc or rechargeable batteries.
Do not mix batteries of different brands or capacities.
Do not attempt to recharge non-rechargeable batteries.
Rechargeable batteries must be removed from the remote control before charging.
Rechargeable batteries must only be charged under adult supervision.
Remove exhausted batteries immediately.
Remove the batteries if the remote control will not be used for an extended period.
Do not short-circuit the battery terminals.
Do not dispose of batteries in fire.
Keep new and used batteries away from young children.

Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.
If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.
This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.
To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.
Any expenses relating to the return of your product to the store will normally have to be paid by you.
The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:
Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555

Distributed by:
Electus Distribution Pty Ltd
46 Eastern Creek Dr,
Eastern Creek NSW 2766 Australia
Ph 1300 738 555
Int'l +61 2 8832 3200
Fax 1300 738 500

www.electusdistribution.com.au