
 


## 1. REMOTE CONTROL FUNCTION KEY

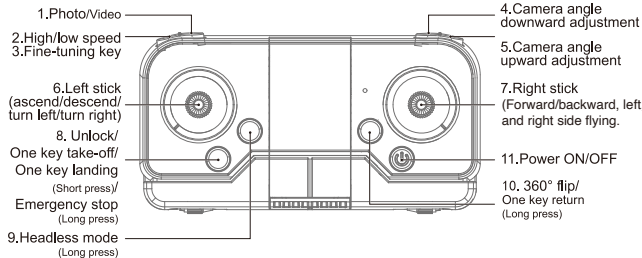

## 2.REMOTE CONTROL BATTERY INSTALLATION

- 2.1 Remove the battery cover from the back of controller (Fig. A)
- 2.2 Install 3 "AAA" batteries into the controller, make sure to install batteries to their correct polarity, (Fig. B)  
Do not mix old batteries with new ones, or mix different types of batteries.
- 2.3 Replace the battery cover

 


## 3.DRONE LITHIUM BATTERY CHARGING INSTRUCTIONS

- 3.1 Press the rear battery module of the drone, then pull the lithium battery module out from the battery compartment. (Fig.C)
- 3.2 Plug the USB charging cable into the USB power socket. Then, connect the other end to the charging socket of the Li-ion battery module. During charging, the LED light will be red. When charging is complete, the LED light will turn off automatically. The charging time is approximately 120 minutes.
- 3.3 After charging is complete, insert the lithium battery module into the battery slot as shown below.(Fig.E)

⚠ **Special note:** Please fully charge the battery before flying.


⚠ **Low-pressure warning tips:** When the drone enters the low-pressure zone, the body light will flash slowly. This indicates that the drone's battery is running low and it needs to return to the base immediately



## 4.PREPARATION BEFORE FLIGHT

### 4.1 Drone frequency

 - 1.Install the aircraft battery and the remote controller's battery. Turn on the aircraft power switch and place the fuselage light on the horizontal ground after it finishes flashing.
2. Turn on the power switch of the remote control, the body light will turn on normally, and the remote control has successfully matched the frequency.(Important note: the frequency alignment of the product must be performed according to the specified steps, otherwise poor connection and control may occur.)



### 4.2 Calibration of gyroscope operation

After the drone and the remote control have successfully matched the frequency, the drone can be corrected, and the throttle lever and the direction control lever are simultaneously hit to the lower right corner. At this time, the indicator light of the drone flashes rapidly, and the indicator light is always on, and all the buttons of the remote controller are released. The calibration is complete.

 


⚠ **Note:** Correction should be done at the horizontal level.

⚠ **Special Tips:** If the drone takes off and flies, it can also be corrected by correcting the gyroscope.



### 4.3 Drone unlock

Aircraft needs to unlock before flying, press the "unlock" function button of the remote control (Fig. 1), turn the left and right joysticks of remote controller outward simultaneously and then return. At this time, the four propellers are at the same time. Speed rotation indicates successful unlocking. When unlocking is completed, the drone can operate normally (Fig.2).



### 4.4 One key take off and landing

 
When the unlocking is completed, press the function button of the remote control (Fig. 3) again, the drone will automatically rise to a height of about 1 meter to keep the altitude flying smoothly; When the button is used for the takeoff/landing icon, the drone will automatically land slowly.

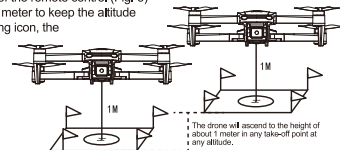

⚠ **Note:** One key landing must land on a horizontal plane, because a fixed-height function landing on a horizontal surface will cause the drone to fly and fly.

## 5.MAIN BLADE INSTALLATION

Please take off the screw and replace the fan blades as shown in the picture below. Make sure all the propellers are in the right position; if they are not installed correctly, the aircraft will not be able to fly normally.

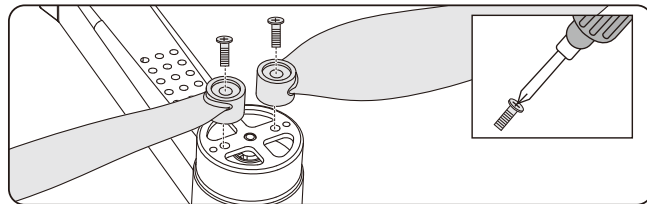

## FLY PLUS QUICK START GUIDE




Fly Plus App

Scan the QR Code to download  
Supports iOS 10.0, Android 6.0 or above

## Basic Interface



## Joystick

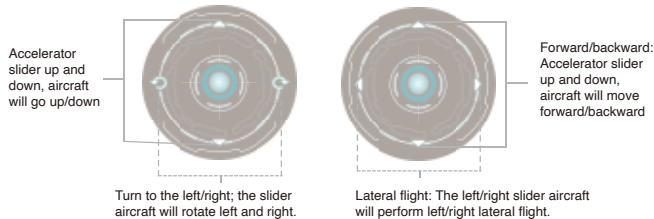

## WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months. If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose. This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure. To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Any expenses relating to the return of your product to the store will normally have to be paid by you. The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by: Electus Distribution  
46 Eastern Creek Drive, Eastern Creek NSW 2766 Ph. 1300 738 555