 


14+

# GT4143

## Quick Start Guide

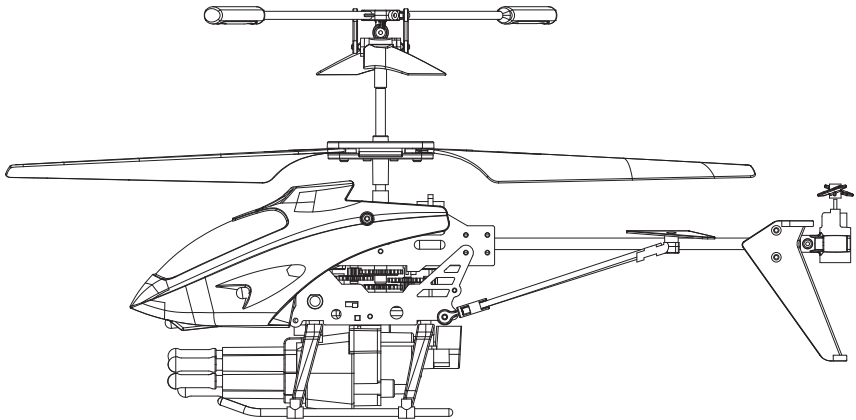

R-NZ

# SAFETY INFORMATION

Read these safety instructions carefully before using the product. Keep this manual for future reference.

## WARNINGS

- Do not aim the missiles at the eyes or face.
- Not suitable for children under 3 years, small parts may present a choking hazard.
- Recommended for children aged 14 years and over.
- Adult supervision is required during operation and charging.
- Do not touch the rotor blades while in use as it may cause injury.
- Remove all packaging materials before giving the toy to a child and dispose of the materials safely.
- Do not modify or attempt to repair the helicopter.
- Do not use the helicopter if any component is damaged or loose.
- Keep the helicopter away from water, heat or excessive moisture.

 
## Operation & Care:

- Only operate the helicopter indoors or in a suitable open area away from obstacles.
- Do not operate near roads, vehicles, trees, or people.
- Do not fly near airports or restricted airspace.
- Maintain a safe distance from the helicopter while it is flying.
- Always place the helicopter on a flat surface before flying.
- Do not touch the helicopter while it is flying.
- Do not fly the helicopter in the rain or strong winds as it may damage the helicopter.
- Switch off the helicopter and remote control when not in use.
- Store the product in a cool, dry location away from direct sunlight.
- Clean the product using a soft, dry cloth.
- Do not use water, solvents or abrasive cleaners.
- Do not immerse any part of the product in water.


## Battery Charging & Safety:

- The rechargeable battery must only be charged by an adult or under direct adult supervision.
- Only use the supplied USB charging cable.
- Connect the charging cable to a suitable 5V USB power source.
- Do not use a damaged charging cable, battery or USB power source.
- Charge the product indoors in a dry, well-ventilated location.
- Place the product on a hard, flat and non-flammable surface while charging.
- Do not leave the product unattended while charging.
- Do not charge the product overnight.
- Disconnect the charging cable when charging is complete.
- Do not operate the helicopter while it is charging.
- Allow the battery to cool before charging.
- Do not cover the helicopter or charging cable during charging.
- Keep the product away from fire, direct sunlight and excessive heat.
- Do not attempt to remove or replace the internal battery unless the product is specifically designed for user replacement.
- Stop charging immediately if the battery becomes hot, leaks or shows any sign of damage.
- Insert batteries according to the polarity markings inside the battery compartment.
- Do not mix old and new batteries.
- Do not mix alkaline, standard carbon-zinc or rechargeable batteries.
- Do not mix batteries of different brands or capacities.
- Do not attempt to recharge non-rechargeable batteries.
- Rechargeable batteries must be removed from the remote control before charging.
- Rechargeable batteries must only be charged under adult supervision.
- Remove exhausted batteries immediately.
- Remove the batteries if the remote control will not be used for an extended period.
- Do not short-circuit the battery terminals.
- Do not dispose of batteries in fire.
- Keep new and used batteries away from young children.

# PRODUCT DIAGRAM

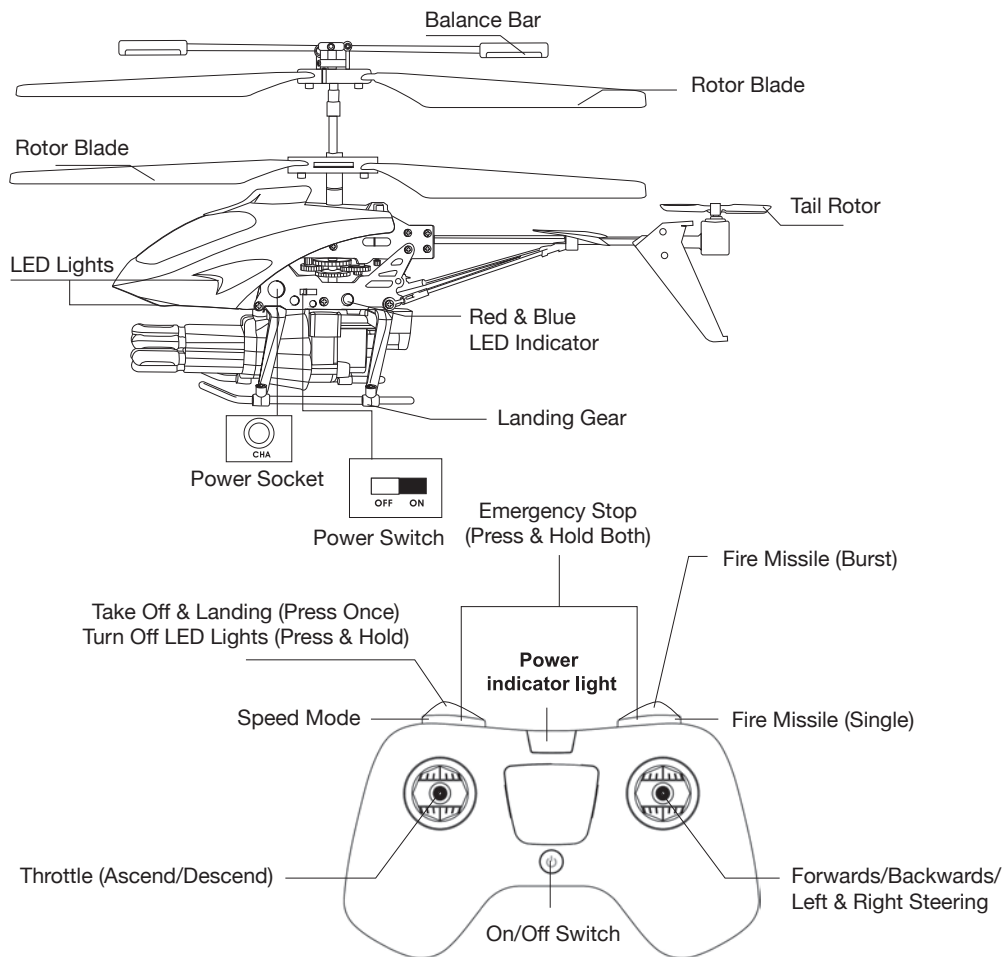


## BATTERY INSTALLATION

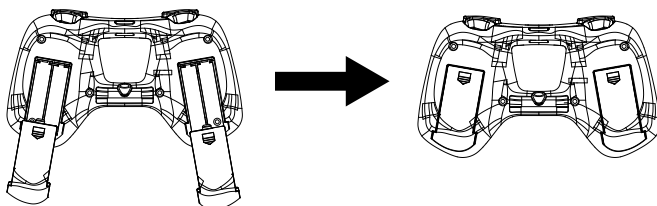 

Open both battery covers on the rear side of the remote control and insert 4 x AAA batteries (not included).

## Charging

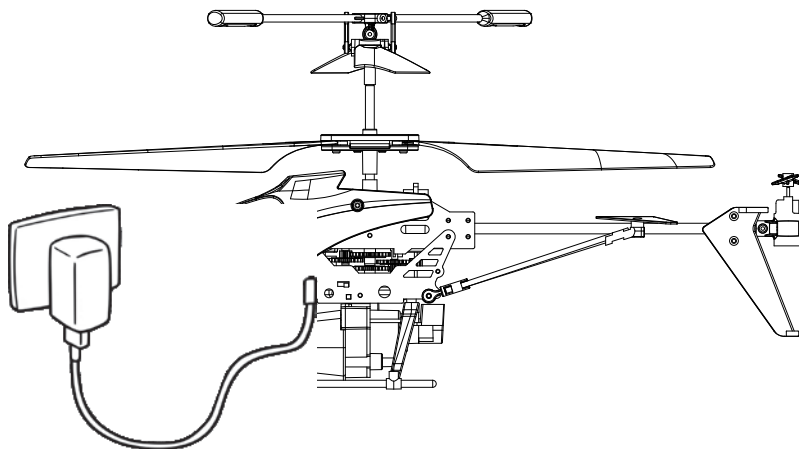 

Insert the USB charging cable into the USB port of a mains power adaptor, power bank or a USB port of a computer. The LED indicator on the charging cable will turn green.


Insert the USB charging cable into the charging socket of the helicopter. The LED indicator on the charging cable will light up red indicating that it has started charging. The charging time will take up to 70 minutes and the indicator will remain green once charging is complete.

## OPERATION

 1. Turn on the power switch of the helicopter, the LED indicators will start flashing.
2. Turn on the power switch of the remote control.
3. Press the left joystick up to the maximum distance and then move it to the down position. After this, move it back to the middle position and you the remote should beep indicating it has been paired successfully. Repeat the procedure if the remote has not successfully paired.
4. Ensure the helicopter is placed on a stable surface and push the throttle button to take off or press the take off and landing button to start flying.


## Ascend/Descend

When the helicopter is flying steadily, you can push up the throttle lever to make the helicopter fly higher, or pull down the throttle lever to make the helicopter fly lower. Smooth flight only requires a small change in throttle lever position.

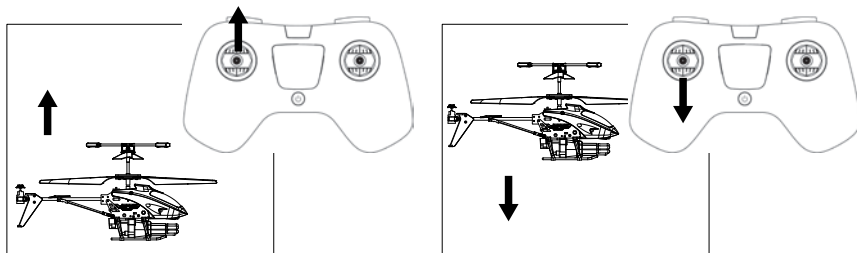


## Turn Left & Right

 Ascend the helicopter above the ground. Push the rudder stick toward left to turn counter clockwise, and push rudder stick toward right to turn clockwise.

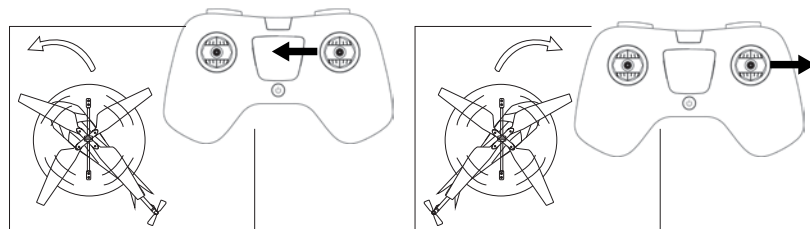


## Forward

 When you push up the right control lever (steering rudder), the nose inclines to down, the helicopter is moving to forward.

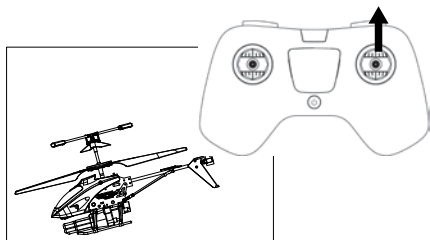


## Backward

 When you pull back the control lever (rudder), the nose tilts upwards and the helicopter moves backwards.

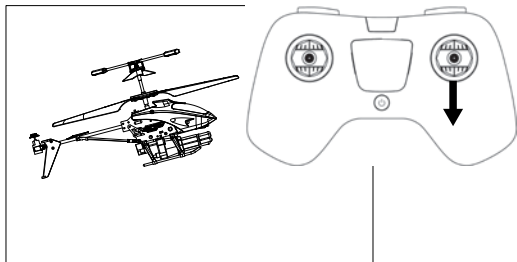


## Firing Missiles

 Press the top right button to fire in burst mode shooting 6 missiles continuously. Press the button below it to fire single missiles.

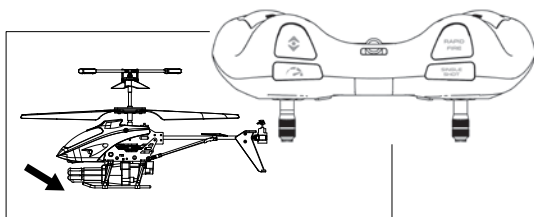

## Reloading Missiles

 Insert each missile into the missile chamber on the helicopter until it clicks into place.

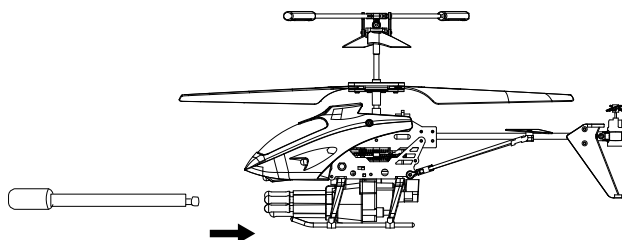

## **SPECIFICATIONS**

Frequency: 2.4GHz

Remote Control Range: Up to 25m

Play Time: Up to 12 Minutes

Charge Time: Up to 70 Minutes

Batteries:

Helicopter: 3.7V Li-po, 400mA

Remote Control: 4 × AAA (Not Included)

Weight: 58g

Dimensions: 220(L) × 45(W) × 110(H)mm

## **WARRANTY INFORMATION**

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months. If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555