


R/C EXCAVATOR

Instruction Manual

**2.4
GHz**

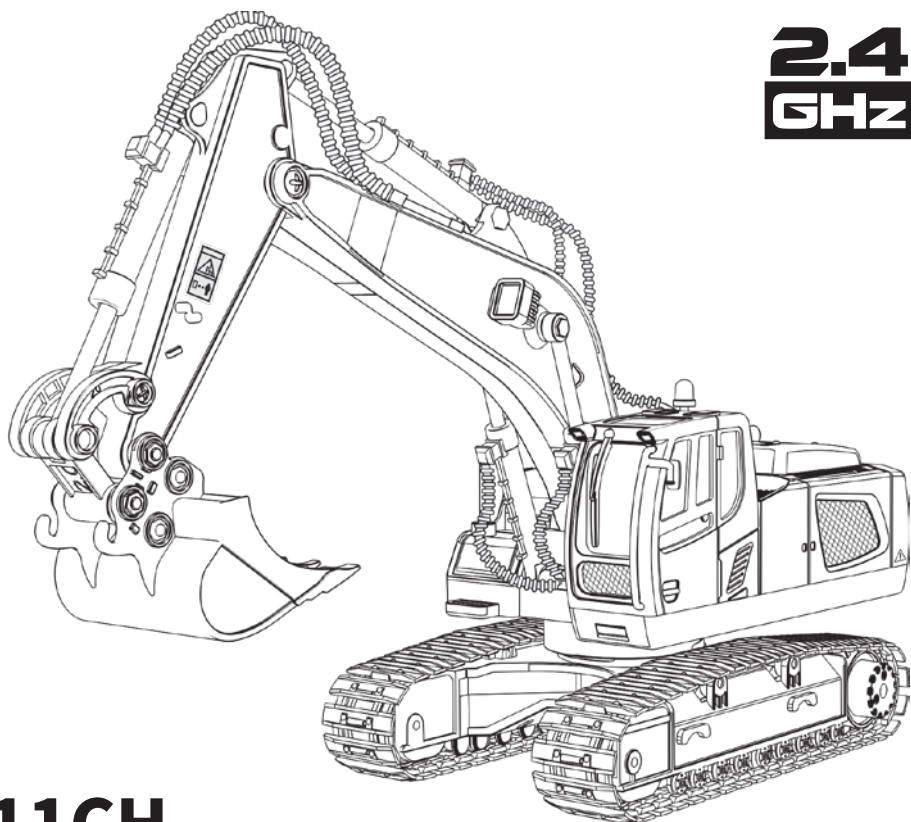

11CH

Remote Control



Multi-directional
Remote Control



680°
Rotation



Digging
Function



Unloading
Function



One-Click
Demo



Sound
Function



Front
Headlight

This manual contains important information, please keep it properly.

Preface

- Thank you for purchasing our product. Please read this manual carefully before use and retain it for future reference.

Product Configuration



 
Excavator x1



Remote controller x1




3.7V rechargeable
batteryx1



USB charging
cable x1

Major Parts Of The EXCAVATOR

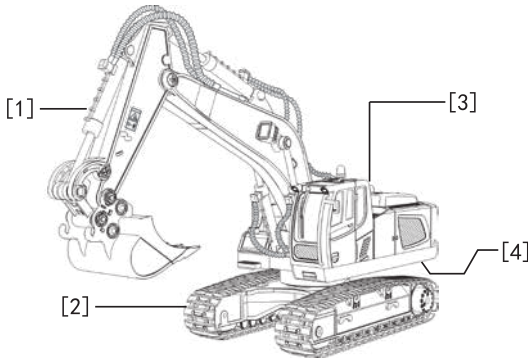

[1] Excavators arm

[2] Track-Type Wheels


[3] Simulation Control Deck

[4] Battery compartment

Battery Installation And Use


Remote Control Battery Installation

Unscrew counter clockwise to open the battery compartment cover, install 2X1.5"AA" batteries (batteries not included) into the battery compartment according to the given polarity, screw clockwise to close the battery compartment.

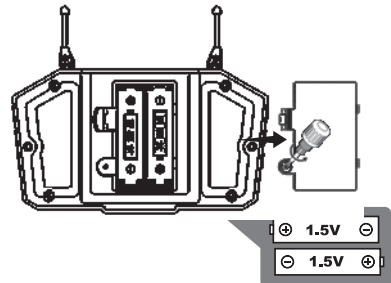

Excavator Battery Installation

Making sure that the power switch is in the OFF position, remove the screw from the battery cover and remove the battery compartment cover. Insert the power connector of the 3.7V rechargeable battery into the power connector of the excavator battery compartment, screw clockwise to close the battery compartment.

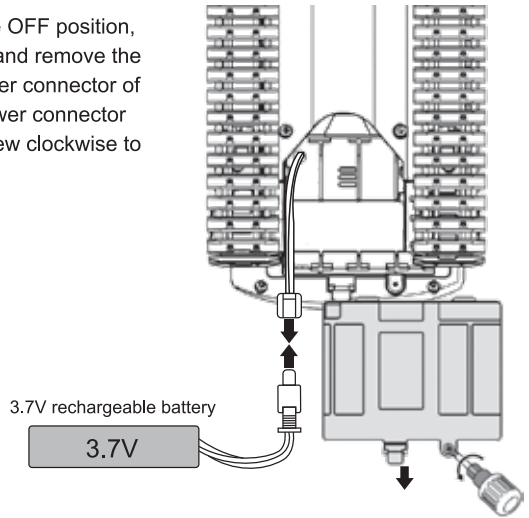


WARNING:

Remove the battery if the Excavator is not going to be used for a long time


Excavator Battery Charging

Insert the power connector of the battery into the USB charging cable, and then connect the USB charging cable to the adapter or the USB port on the computer. When charging is peoceeding, the red light keeps solid on, when charging is finished, the red light is off. The charging time is about 3-4 hours.

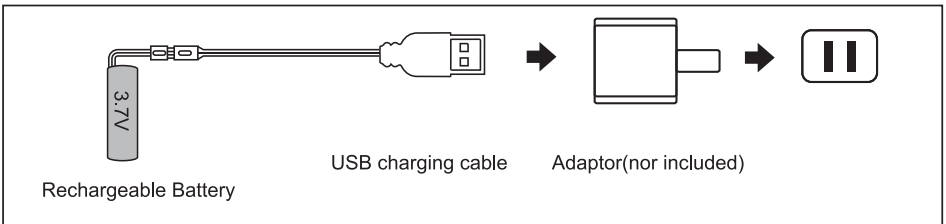


- ⚠ Please check whether the adaptor input voltage is consistent with the current voltage before charging;
- The output voltage of the adaptor should be consistent with the battery voltage;
- When charging, it must be done under adult supervision;
- Keep away from flammable materials when charging, and have an adult watch over when charging.



Operation Demonstration




Remote control ① ,The excavator moves forward;
Remote control ② ,The excavator moves backward.

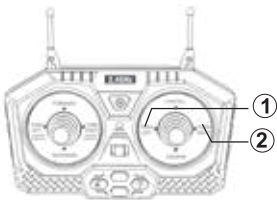


Remote control ① ,The excavator turn left;
Remote control ② ,The excavator turn right.

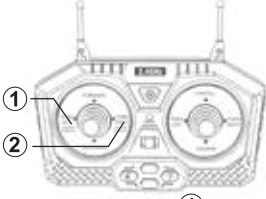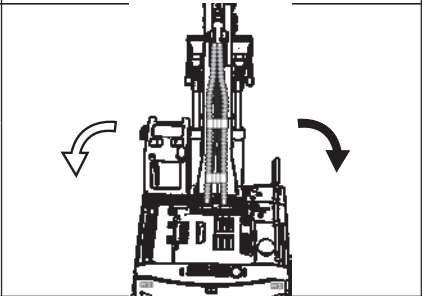


Remote control ① ,The excavator control deck 680 ° to the left;
Remote control ② ,The excavator control deck 680 ° to the right.





Press the remote control button (As shown in the picture), the excavator will automatically demonstrate.


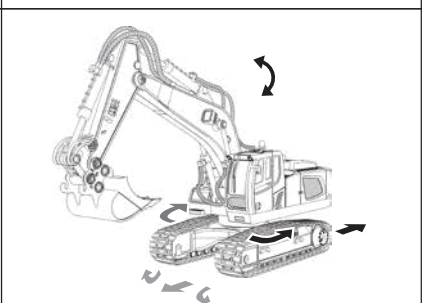


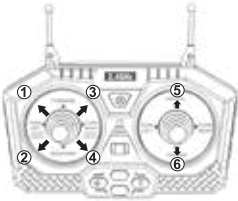


Remote controller is pushed to ① or ②, and pushed to ⑤ or ⑥. The excavator arm push back or digging, the excavator control deck rotates to the left while walking.
 Remote controller is pushed to ③ or ④, and pushed to ⑤ or ⑥. The excavator arm push back or digging, the excavator control deck rotates to the left while walking.

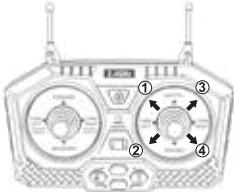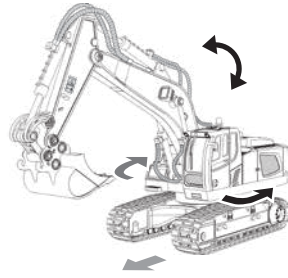


Remote controller is pushed to ① or ②. While the excavator arms push back or digging, the excavator rotates 360° to the left.
 Remote controller is pushed to ③ or ④. While the excavator arms push back or digging, the excavator rotates 360° to the right.

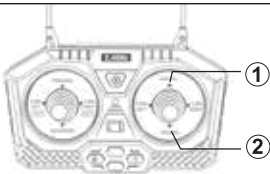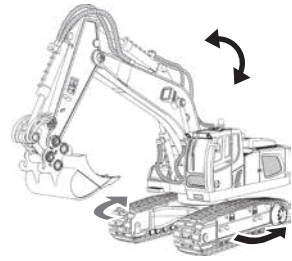

Remote control ①, The excavator arm push back;
 Remote control ②, The excavator arm digging.

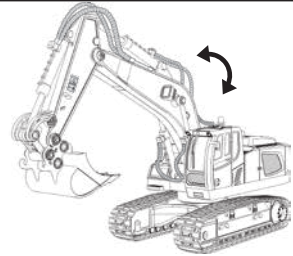

Remote control ①, Turn on the Sound;
 Remote control ②, Turn on the Light.

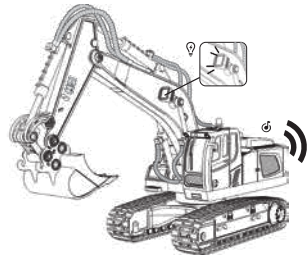

After using the product, please wipe the surface stains with a dry cloth to avoid damage to the components and prolong the service life of the product.

Battery Precautions

- Toys use battery type: Excavator uses 1X3.7V rechargeable battery; remote control uses 2X1.5V "AA" non-rechargeable batteries (batteries not included);
- Non rechargeable batteries are not to be charged;
- Rechargeable batteries can only be charged under adult supervision;
- Rechargeable batteries are to be removed from the toys before being charged;
- Take out and put in the battery according to the label on the toy battery room;
- Only batteries of the same or equivalent type as recommended are to be used;
- Don't mix old and new batteries;
- Don't mix alkaline, standard (carbon zinc), or rechargeable (nickel cadmium) batteries;
- Exhausted batteries are to be removed from the toy. If it is not used for a long time, please take out the battery in the toy;
- The supply terminals are not to be short-circuited;
- This product can only be charged with the delivered USB charging cable, and it is not allowed to use USB charging cable that are not recommended. USB charging cable is not toys;
- The USB charging cable to be used with the product should be regularly examined for potential hazard, such as damage to the cable or cord, plug, enclosure of other parts and that in the event of such damage, the product must not be used until that damage had been properly removed.

Flight Safety Guidelines

- Keep the small accessories away from kids to avoid accident, not suitable for children under 3 years.
- Don't play in dangerous places such as public roads, select a safe place for operating to avoid dangerous.
- Don't use this product on elevated places such as tables or counters, and avoid falling or heavy falls.
- Don't place this product in direct sunlight or high temperature places to avoid deformation or even damage caused by sun exposure and high temperature.
- Don't play on rainy days or water (mud) pits. Prevent being wetted by water, so as not to cause malfunction, if you accidentally get wet, please use a cloth with good water absorption to absorb the water.
- Be careful not to touch the wheels with fingers, hair, clothes, etc., to avoid injury.
- When the battery of the r/c car or the remote control is low, the speed of the remote control car will slow down significantly. Please replace the battery or charge it in time.
- Please do not violently move the excavator digging arm by hand to avoid damage to the excavator.
- Don't break the remote control antenna to prevent injury.
- Maintenance: wipe the surface stains with a dry cloth.

NOTE

The hydraulic rods and crawlers of this product are easy to damage and fall off. If the parts are damaged or lost, you can purchase the same model parts from the manufacturer or dealer, and replace and install them yourself to ensure the complete structure of the product. Do not use parts of different models or different brands for installation to ensure the structural safety of the product.

Important Notices

Note! The products are manufactured by batches after performances have been strictly demonstrated and practically tested to verify meeting safety standards. For any use of remote-controlled model, the manufacturer or dealer won't bear any responsibility for accidents resulted from abnormal parts usage and wearing, improper assembling or operation under unsafe environment. Please be sure to operate this product under safe environment.

Troubleshooting

Product Problem	The Solution
Excavator cannot start	<ol style="list-style-type: none">1. The power switch is off, please turn it on.2. The battery is not installed correctly, please check the positive and negative poles of the battery to ensure that the battery is installed correctly.3. The battery is exhausted, please charge the battery or replace with a new battery.
The remote control cannot be used	<ol style="list-style-type: none">1. The remote control battery is exhausted, please replace it with a new one.2. The Excavator is not in the control range of the remote control, please keep it in the controllable range.3. There is electromagnetic interference around, please take the toy to a spacious place for use.

Note: The surrounding electromagnetic wave interference may cause the Excavator to malfunction, you can restart the remote control car to operate again.

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555



R-NZ

