

GT4257

TRUCK

14+
AGES



2.4GHz
READY TO RACE

1:12
SCALE

RTR
READY TO RUN

36+
HIGH SPEED

2WD
TWO-WHEEL DRIVE

⚠ Caution

- (1). Small parts. Keep out of reach of small children.
- (2). Please operate in an open field without any wave interference.
- (3). When transmitter is low in power, please stop and change batteries immediately.
- (4). On backout after the removal, please do not place discarded to avoid contamination sanitation.
- (5). Please store the car and the transmitter in a dry and cool environment.
- (6). Keep away from fire, hot or humid environment.
- (7). If car battery is wet, be sure to wipe and dry it completely to avoid any damage.

Product Configuration



Monster Truck



Transmitter



User Manual



 
USB Charger



Lithium-iron Battery Pack




Hex Wrench



Pin X 4


1. Remove The Truck Body

Pull out the pins and remove the body

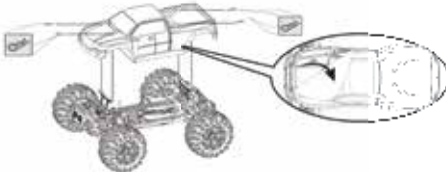

Make sure all accessories are properly attached, remove the protection film from the body before turning on the truck.

2. Install LED wire

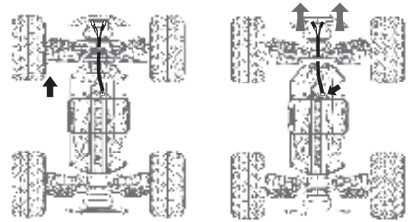

(1). Make the LED wire pass through the body bracket.

 
(2). Plug the LED into the front bumper block, then connect the LED wire to the connector on the ESC.

3. Install Transmitter Batteries


1. Remove the battery cover on the bottom of the transmitter (figure 1)
2. Install 3*1.5V AA batteries (not included) in correct polarities (Figure 2)
3. Close the battery cover (Figure 3)

⚠ Notice:


1. When installing batteries, please be sure to match the polarities labeled on the battery holder.
2. Do not mix old and new batteries.
3. Do not mix different type of batteries.



(Figure1)

 


(Figure2)

 


(Figure3)

4. Charge and Install Rechargeable Battery Pack


- (1)a) Insert the USB charger into the outlet (figure 4) note the power light turns red .
- b) Connect the battery pack to the USB charger (figure 5) note the green light flashes.
- c) When charging is completed , green light turns solid.

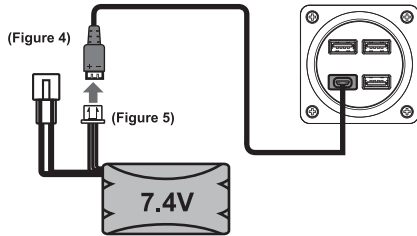


- (3). Place your fully charged battery in the battery slot, connect the battery connector. Don't force it, it only goes one way! (Figure 7)

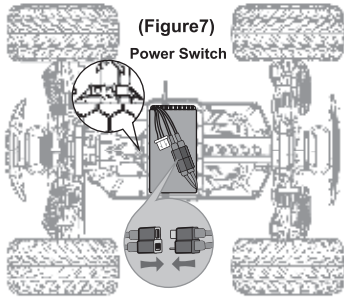

- (2) Loosen the latch of the battery cover on the chassis then remove it (Figure 6).

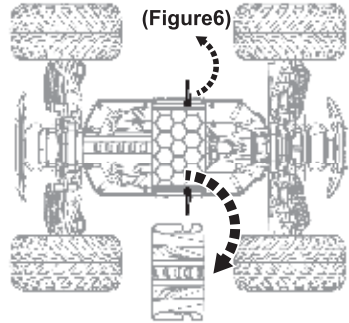


- (4). Replace the battery cover , tighten the latch (Figure 8)

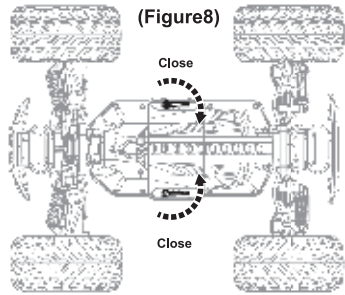


5. USB Charger Precautions

CAUTION


- (1). The USB charger does not apply the input current higher than 4A
- (2). When input current is higher than 4A, the USB charger will enter into the protection mode , all the lights will turn off.

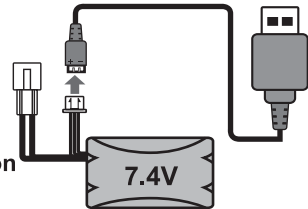



6. Transmitter instructions

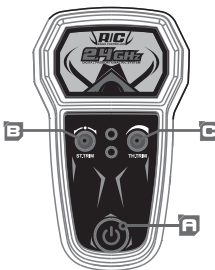

- A. Power Switch
- B. Steering Trim
- C: Throttle trim (low speed to high speed)

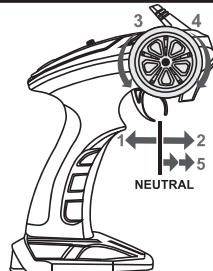

- 1. Forward
- 2. Brake
- 3. Left
- 4. Right
- 5. Backward

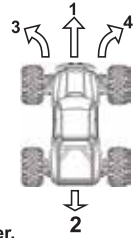
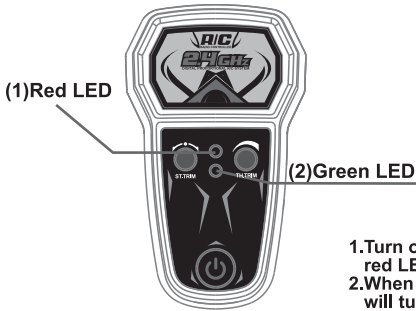


1. Turn on the power switch on the transmitter, red LED will turn solid and green LED will flash.
2. When pairing successful with the car, green LED will turn solid.

Green LED will flash when power is low on the transmitter, please replace the batteries before continuing



7. Transmitter switch instructions

A. Power Switch

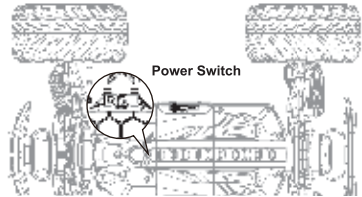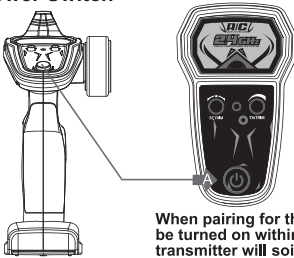



When pairing for the first time, both the car and the transmitter have to be turned on within 3 seconds to pair the frequency. Green LED on the transmitter will solid when pairing successful, at the same time LED on the car will turn solid.

B. Steering Trim

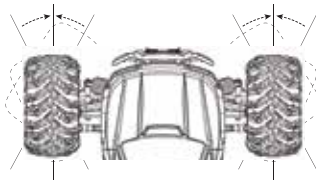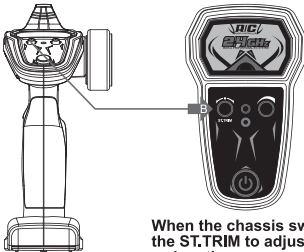

When the chassis switch is turned on and the front tires are not straight, use the ST.TRIM to adjust the position.
 • when the car oversteers to the left, ST.TRIM should be adjusted clockwise.
 • when the car oversteers to the right, ST.TRIM should be adjusted anticlockwise.


C. Throttle trim

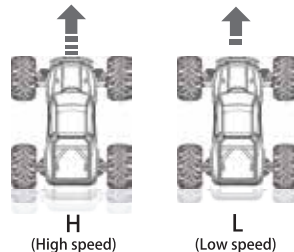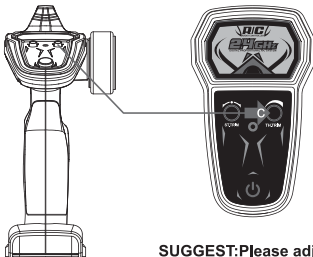


SUGGEST: Please adjust the TH.Trim to the low speed when you play with the car for the first time to avoid damaging the car!

OPERATION

1. ALWAYS turn on your transmitter before you turn on the receiver in the vehicle. Always power off the receiver before turning your transmitter off.

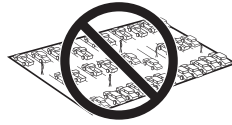



2. ALWAYS operate your vehicle in a wide open area. Operating the vehicle on slippery floor or indoors may crash because of the high speed.

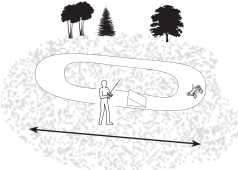

3. WARNING: X9115, X9116 and X9120 waterproof feature, please be cautious that the water level should be lower than the bottom of the truck. If excessive amount of water gets into the body of the truck and cause damage or other related problems, We will not be responsible for such damages. Customers will be responsible for any replacements and additional accessories if needed.



4. ALWAYS start with low speed, or the vehicle may slip or run on curves. (as shown on Pic 1) NEVER operate your vehicle in max speed. Operating the vehicle in highest speed may hurt yourself and damage your vehicle.

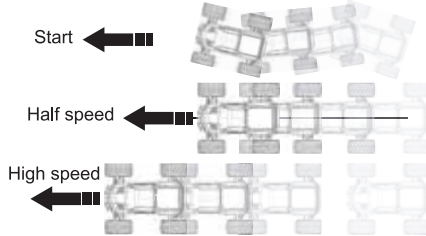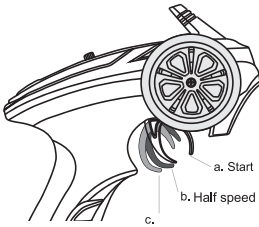

MOTOR CARE

- Seat the motor brushes by driving smoothly on a flat surface during use of the first battery charge. Failing to do so can greatly reduce motor performance and functional life.
- Prolong motor life by preventing overheating conditions. Undue motor wear results from frequent turns, stops and starts, pushing objects, driving in deep water and tall grass, and driving continuously up hill.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Short run time	<ul style="list-style-type: none"> • Battery damaged/not charged • Motor dirty or brushes worn 	<ul style="list-style-type: none"> • Check/change battery • Check/clean/replace
Sluggish action	<ul style="list-style-type: none"> • Motor dirty or brushes worn • Bind in drivetrain • Vehicle battery is not charged 	<ul style="list-style-type: none"> • Check/clean/replace • Clean/adjust • Replace/recharge
Do not operate	<ul style="list-style-type: none"> • Transmitter batteries low • Transmitter powered off • Vehicle battery is not charged 	<ul style="list-style-type: none"> • Replace/recharge • Power On • Replace/recharge
Poor range	<ul style="list-style-type: none"> • Low transmitter batteries • Receiver antenna damaged 	<ul style="list-style-type: none"> • Replace/recharge • Check/repair/replace
The system will not Connect	<ul style="list-style-type: none"> • Transmitter and receiver too near each other • Transmitter and receiver too near large metal objects (vehicles, etc.) • Receiver accidentally put in bind mode so receiver is no longer bound 	<ul style="list-style-type: none"> • Move transmitter 8–12 feet (2.4–3.6m) from receiver • Move away from large metal objects (vehicles, etc.) • Rebind transmitter and receiver
The receiver quits responding During operation	<ul style="list-style-type: none"> • Low battery voltage 	<ul style="list-style-type: none"> • Completely recharge battery
Receiver loses its bind	<ul style="list-style-type: none"> • Transmitter accidentally put in bind mode, ending bind to receiver 	<ul style="list-style-type: none"> • Bind transmitter to receiver

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555