

6+


2-In-1 Rock Crawler with Water & Rocket Launcher




2.4G
CONTROLLER



OPERATING INSTRUCTIONS

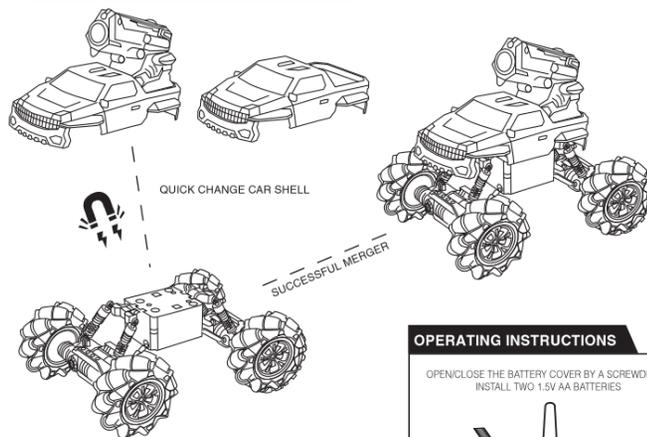


OPERATING INSTRUCTIONS

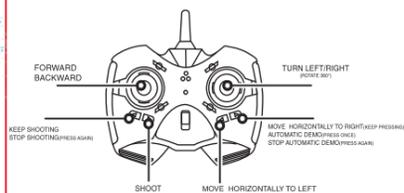

OPERATING INSTRUCTIONS

OPEN/CLOSE THE BATTERY COVER BY A SCREWDRIVER
INSTALL TWO 1.5V AA BATTERIES

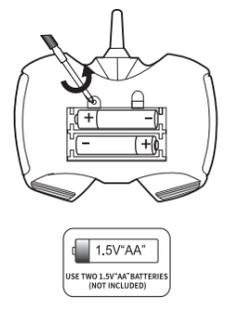


NOTICE

WHEN THE REMOTE CONTROL DOESN'T WORK ON THE R/C CAR
1. CHECK IF THE REMOTE CONTROL BATTERY HAS POWER;
2. REMOVE BATTERY FROM THE REMOTE CONTROL AND REINSTALL IT,
THEN RESTART THE POWER OF R/C CAR TO MATCH THE FREQUENCY
WITH REMOTE CONTROL.

BATTERY INSTRUCTIONS

OPEN AND CLOSE THE BATTERY COVER BY A SCREWDRIVER

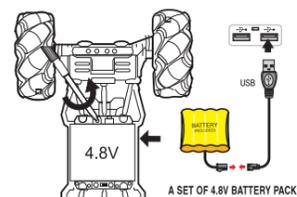


BATTERY CHARGING INSTRUCTIONS:

- Open the battery cover, remove the battery; the power indicator is on. Then connect the battery pack to the other end of the USB.
- Plug the USB into the power interface.
- Deplete the battery before charging. The battery can be fully charged in about 4 hours. Overcharging can lead to battery damage, burns, fire, etc.

NOTICE

When you stop playing, please turn off the power switch, and remove the battery. So we can better protect the battery.

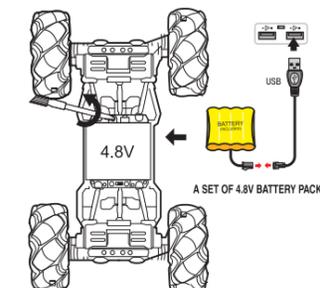

ORDINARY BATTERY INSTRUCTIONS:

- Battery type: 1.5V AA Battery *2;
- Remove and place the battery in the correct way;
- Do not charge the non-rechargeable battery;
- New batteries can not be used with the old one at the same time.
- The battery with the same model or equivalent to the recommended model can be used;
- The battery should be placed in the correct polarity;
- The exhausted battery should be taken out of the toy;
- Rechargeable battery can only be charged under the supervision of an adult;

THE WATER IS POURED THROUGH THE FUNNEL INTO THE TANK.

WATER

COVER

NOTICE

- WHEN SHOOTING WATER, IT IS RECOMMENDED THAT THE FUNNEL SHOULD BE LEFT ON THE TANK, SO THAT THE OZZING WATER CAN BE RECYCLED BACK INTO THE TANK.
- WHEN REPLACING THE BATTERY, IT IS RECOMMENDED TO KEEP THE COVER TIGHTLY ON THE WATER TANK, OTHERWISE WHEN THE VEHICLE ROLL OVER AND WATER WILL FLOW OUT OF THE TANK.
- IF WE WANT TO PUT THE TOY CAR AWAY, PLEASE EMPTY THE WATER TANK AND WIPE THE CAR CLEAN SO THAT WE CAN PREVENT THE WATER FROM SEEPING INTO THE MAIN BODY AND CAUSING A SHORT CIRCUIT.

(ONLY APPLICABLE TO R/C CAR WITH WATER SHOOT FUNCTION)

LOAD THE PROJECTILE INTO THE ROOF OF THE VEHICLE

LAUNCH POINT

LAUNCH PORT

NOTICE

- THERE ARE FIVE MISSILE PORTS ON THE GUN BARREL. PLEASE INSERT THE MISSILES INTO THE MISSILE PORTS AND PRESS THEM TO THE READY-TO-LAUNCH STATE. THE MISSILE IS LAUNCHED AS SOON AS THE LAUNCH PORT REACHES THE LOCATION OF THE LAUNCH POINT.
- DO NOT LOAD THE MISSILE WHEN THE LAUNCH PORT IS AT THE LAUNCH POINT, OTHERWISE THE MISSILE WILL NOT BE ABLE TO LAUNCH.
- PLEASE TAKE OUT THE MISSILES WHEN YOU WANT TO PUT THE R/C CAR AWAY.
- SINCE THE LAUNCH SYSTEM IS AN ELECTRIC DEVICE, PLEASE DO NOT MANUALLY LAUNCH THE BUTTON, OTHERWISE THE LAUNCH SYSTEM WILL BE DAMAGED.

(ONLY APPLICABLE TO R/C CAR WITH DART SHOOT FUNCTION)

OPERATING INSTRUCTIONS

KEEP SHOOTING (PRESS ONCE) / STOP SHOOTING (PRESS AGAIN)

SHOOT

OPERATING INSTRUCTIONS

KEEP SHOOTING (PRESS ONCE) / STOP SHOOTING (PRESS AGAIN)

SHOOT

OPERATING INSTRUCTIONS

MOVE HORIZONTALLY TO LEFT

MOVE HORIZONTALLY TO RIGHT (KEEP PRESSING) / AUTOMATIC DEMO (PRESS ONCE) / STOP AUTOMATIC DEMO (PRESS AGAIN)

OPERATING INSTRUCTIONS

ROTATE 360° TO THE RIGHT

ROTATE 360° TO THE LEFT

OPERATING INSTRUCTIONS

BACKWARD

FORWARD

PROBLEM SOLVING GUIDELINES

PARTS	REASON OR PHENOMENON	PROCESSING METHOD
REMOTE CONTROL	1. LOW BATTERY.	1. REPLACE WITH NEW BATTERIES.
	2. EXCEEDING THE CONTROL DISTANCE	2. KEEP THE CONTROL DISTANCE WITHIN 30 METERS AND KEEP IT ON THE RIGHT FREQUENCY.
	3. THERE IS NOT MATCHING THE FREQUENCY BETWEEN R/C CAR AND REMOTE CONTROL	3. TURN ON THE POWER SWITCH OF THE REMOTE CONTROL AND THE R/C CAR RESPECTIVELY. IF IT'S FAILS TO MATCH THE FREQUENCY, REPEAT THE STEPS AGAIN.
R/C CAR	1. TURN OFF THE POWER.	1. TURN ON THE POWER.
	2. THE RECHARGEABLE BATTERY PACK IS NOT PROPERLY CONNECTED TO R/C CAR ACCORDING TO THE ELECTRODES.	2. CHECK THE BATTERY CONNECTION BETWEEN THE REMOTE CONTROL AND THE R/C CAR.
	3. LOW BATTERY.	3. RECHARGE THE BATTERY PACK OR REPLACE WITH A SUFFICIENT ONE.
	4. THE R/C CAR STOP AND GO.	4. RECHARGE THE BATTERY PACK OR REPLACE WITH A SUFFICIENT ONE.

WARNING:

Not suitable for children under 3 years old due to small parts which may represent a choking hazard.

Adult supervision and assembly required. Please remove all tags, ties and packaging before giving to child.

WARNING: DO NOT aim at eyes or face.
WARNING: DO NOT use or fire other projectiles.