
# 转单色黑出版



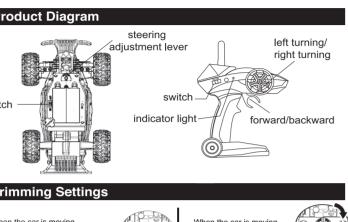


FechBrands by Electus Distribution Pty. Ltd. 320 Victoria Rd. Rydalmere NSW 2116 Australia Int'l: +61 2 8832 3200 Fax: 1300 738 500 Made in China

# When the car is moving to the left, adjust the trin to the right.Until the car car returns to a **Battery Installation** 1. Open the battery cover,Follow Picture 1 to install 4 AA batteries into the remote control and then cover the battery cover. 2. Open the battery cover and plug the battery pack into the vehicle's power port as shown in Picture 2. 7.4V 3.Load the battery pack into the battery box and



 
to the right, adjust the trin to the left. Until the




HOL


5.Reverse and turn left: push the nrottle forward while turning the teering wheel to the left.

  1.Forward: pull down the accelerator





 4.Go forward and turn right:pull down



throttle forward while turning the steering wheel to the right




1:16

# 1:16 WI-FI FPV R/C CAR




 TechBrands by Electus Distribution Pty. Ltd. 320 Victoria Rd. Rydalmere NSW 2116 Australia Int'l: +61 2 8832 3200 Fax: 1300 738 500


# left turning/ right turning switchforward/backward



 
**Battery Installation** 1. Open the battery cover, Follow Picture 1 to install
4 AA batteries into the remote control and then
cover the battery cover.
2. Open the battery cover and plug the battery
pack into the vehicle's power port as shown in
Picture 2.
3. Load the battery pack into the battery box and
then cover. 7.4V



 
1.Forward: pull down the accelerator the throttle force to control the speed of the vehicle.



 
3.Go forward and turn left: pull down the gas pedal while turning the left steering wheel.



 
5.Reverse and turn left: push the throttle forward while turning the steering wheel to the left.



NOH

 

### USB Charging

 

USB Charging

Remove the battery from the car, Connect the USB charging cable to the computer USB interface, while Another section is connected to the battery port.

shorten the life of the remote control car

- When the car is moving, please do not touch the four wheels of the remote control car with your hands to avoid the risk of twisting and cutting.
  When the power of the remote control or remote control car is insufficient, the remote control distance will be affected, and there will be a situation where the driving is too slow or the climbing is difficult.
- Don't let the remote control car fall or crash heavily, so as not to damage the remote control car or shorten the life of the remote control car
- Don't play on roadsides, puddles, dirt or other dangerous places to avoid danger.
- 1.If not using this product for a long time, please remove the battery to avoid leakage or damage to
- the product.

  2. Use a damp cloth to gently wipe the car.

  3. Don't put the toys on the high temperature, moisture and direct sunlight.

  4. Don't put toys in water, which may cause damage to electronic components.

  5. Products sold Once, any security problems produced by the operation and use, control and other aspects, not be responsible by the factory.

  6. In case of any problems such as use, operation and maintenance, technical support and aftersales service, Please contact the local distributor.

When the car is moving, please do not touch the four wheels of the remote control car with your hands to avoid the risk of twisting and cutting.
 When the power of the remote control or remote control car is insufficient, the remote control distance will be affected, and there will be a situation where the driving is too slow or the climbing is difficult.

• Don't let the remote control car fall or crash heavily, so as not to damage the remote control car or

If not using this product for a long time, please remove the battery to avoid leakage or damage to the product.

the product.

2. Use a damp cloth to gently wipe the car.

3. Don't put the toys on the high temperature, moisture and direct sunlight.

 
4. Don't put toys in water, which may cause damage to electronic components.

5. Products sold Once, any security problems produced by the operation and use, control and other aspects, not be responsible by the factory.

6. In case of any problems such as use, operation and maintenance, technical support and aftersales service, Please contact the local distributor.

「咬口 恒祺 08.17 GT4270 说明书 背面 128克铜版纸 折页 印1500份 2019.28.21

• Don't play on roadsides, puddles, dirt or other dangerous places to avoid danger.







# APP Download and Install

Scan the Below QR code to download



 
App Name: HENGQI PLAY

1. Connect the camera to the car, and the < 设置 camera indicator light keeps on. Go to your phone's Settings and find the WIFI list called "WiFi FPV Car" ar

 
connect.(see shown picture)
3. Open HENGQI PLAY APP, Click "START" enter into the APP interface If connect correct, that you can see the FPV on the interface and Start to

其他.

Warning: When the battery voltage is too low, the camera automatically disconnects and enters the automatic protection state.









## APP Download and Install

Scan the Below QR code to download.



- 1. Connect the camera to the car, and the < 设置 camera indicator light keeps on.
- Go to your phone's Settings and find the WIFI list called "WiFi FPV Car" an connect.(see shown picture)
  3. Open HENGQI PLAY APP, Click
- " START" enter into the APP interface If connect correct, that you can see the FPV on the interface and Start to



Tips: Camera image transmission distance is 20-30 meters, when using mobile phone control, it is recommended to control the model car by video shooting within 10 meters. Suggest to control by remote for the beginners.

Warning: When the battery voltage is too low, the camera automatically disconnects and enters the automatic protection state.

- The use of batteries has certain risk, it may cause personal injury,or property damage. • Use only factory supplied charger. Before cleaning the model, make sure the model is disconnected from the charger
- Do not charge or use the swelling, leaking or damaged battery
- Do not overcharge the battery.When the battery are fully charged, pull out the charge. After charge complete, do not recharge to avoid overheat.
- Do not charge near combustible or flammable(carpet, wood floor, solid wood furniture,etc.) or on surface of conductive objects. Should observe the battery at any time.
- Don't charge when the battery is still hot.
- The temperature of the battery is between O C and 40 C .
- Pull out the charger when not charged.
- Do not use plastic packaging has been damaged batteries.
- When the product is turned on, do not insert or remove the battery.
- Do not allow the battery to excessive physical shock. • Do not use the expansion, leakage, breakage, or emits an odor of the battery.
- Children contact with battery is prohibited. • Do not put battery into the fire, to avoid contact with liquid, the model can not be exposed to
- the rain, and should not be placed in the damp place. • Please do not remove the battery or cut, drill. The battery or charger can not carry heavy
- things. Do not knock the battery. • Do not use solvents, alcohol, or other flammable solvents to clean the charger.
- Prevent the short circuit. Avoid direct contact with electrolytic material of the battery, electrolytic material and electrolytic steam is harmful to the body.

Up to 20km/h 2.4GHz Digital Up to 50m 720p (1280 x 720) @ 25fps

1x7.4V Li-ion, 500mAh(Included) 4 x AA (Not Inclu 315(L) x 193(W) x 120(H)mm

-5-

- The use of batteries has certain risk, it may cause personal injury,or property damage.
- Use only factory supplied charger. Before cleaning the model, make sure the model is disconnected from the charger
- Do not charge or use the swelling, leaking or damaged battery
- Do not overcharge the battery.When the battery are fully charged, pull out the charge. After charge complete, do not recharge to avoid overheat.
- Do not charge near combustible or flammable(carpet, wood floor, solid wood furniture,etc.) or on surface of conductive objects. Should observe the battery at any time.
- Don't charge when the battery is still hot.
- The temperature of the battery is between O C and 40 C .
- Do not use plastic packaging has been damaged batteries.
- When the product is turned on, do not insert or remove the battery.
- Do not allow the battery to excessive physical shock. • Do not use the expansion, leakage, breakage, or emits an odor of the battery.
- Children contact with battery is prohibited.
- Do not put battery into the fire, to avoid contact with liquid, the model can not be exposed to the rain, and should not be placed in the damp place. • Please do not remove the battery or cut, drill. The battery or charger can not carry heavy
- things. Do not knock the battery. • Do not use solvents, alcohol, or other flammable solvents to clean the charger
- Prevent the short circuit. Avoid direct contact with electrolytic material of the battery, electrolytic material and electrolytic steam is harmful to the body.

Up to 20km/h 2.4GHz Digital Up to 50m 720p (1280 x 720) @ 25fps

1x7.4V Li-ion. 500mAh(Included) 4 x AA (Not Included 315(L) x 193(W) x 120(H)mm

「咬口 恒祺 08.17 GT4270 说明书 正面 128克铜版纸 折页 印1500份 2019.28.21