

Product Manual



Thank you for purchasing our game Console.
Introduction as follows:


Product Description

1. The screen size of this product is 2.8inch. To play games, you can use the console panel , or with the extra game controller , supporting 2 players.
2. Power Supply :4pcs AA 1.5v external dry batteries or use a data cable with charger.
3. With AV cable to connect to the TV.
4. Size: 104mmX108MMX166MM

Instructions

1. First, open the battery cover on the back of the arcade console and install 4 AA 1.5V dry batteries. Note: the battery positive and negative poles cannot be reversed. Install the batteries according to the polarity signs in the battery compartment, then close the battery cover.
2. If don't use 4 AA 1.5V dry battery , you can supply power with the data cable ;
3. The AV cable should be correctly connected to the TV. The yellow interface is for video, and the white is for sound.
4. When the power switch is on, the power indicator will light up, and all games will be displayed on the screen. Then press the START button to enter the game
5. Arcade direction keys play the role of up, down, left and right direction key in the game;
6. A/B is the function key, the moving way will be different according to the game definition .
7. You can select 2 players in Some games, then press the SELECT key to SELECT 2 players, and plug in the extra game controller;
8. Press the RESET button in the game can return to the game menu page;
9. Be sure to turn off the power switch after the game .

Button operation instructions

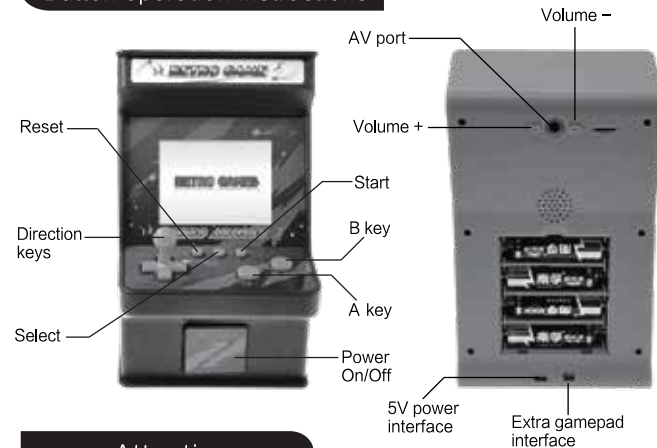

Attention

1. Please read this instructions carefully before using this product;
2. When replacing the batteries, the positive and negative poles cannot be reversed . Please load the battery correctly according to the battery signs;
3. Used batteries should not be thrown into fire to prevent explosion;
4. This product contains small parts and not suitable for children under 3 years old;
5. Be sure to turn off the power switch after the game, if you will not play the game for a long time ,you need to take off the battery. And load the battery again when play next time;
6. While playing the game, if the TV screen appears crash, screen darken, or no display, which may be due to the lack of battery power, you can try to replace the battery , then continue the game;
7. Do not knock, beat, stick, puncture or attempt to decompose the product to avoid unnecessary damage to the product ;
8. If the product is disassembled by a non-professional by mistake, it will not be included in the after-sales warranty service

Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555