

GT4296



(Operating instruction)

Please read the instructions carefully before using.
Please take care of the instructions for necessary at a later date.

Contents



Mini racer x1



Transmitter x1




Instruction sheet x1




Road-block x4

Part details

● Transmitter

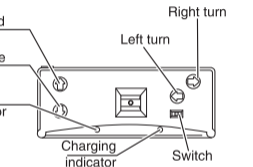


● Mini racer


 


Preparation

 
1. Open the can, detach the can cover and can body. Push the LOCK inside the can cover towards the direction shown to release the 4 road-block.



  
2. Take out the transmitter and car from the can body. Slide the car by the direction shown in the picture, take it out.



 3. Use a Phillips screwdriver to loosen the screw counterclockwise and open the battery cover on the back of the remote control in the direction of the arrow.



 4. Insert 2 x AA batteries with the correct polarity, then replace the battery cover, tighten the screws.




Operation

1. After installing the battery on the remote control, turn on the switch and the frequency light flashes. After the car turned on, the remote control frequency light will go out, indicating that the frequency matched successfully. If the light flashes, it means the frequency matched unsuccessfully.




2. Function of transmitter button:
(1). After the remote control button is pressed, the frequency light will light up and the car will act accordingly.
(2). When the forward/backward button pressed, the engineering vehicle can move forward/backward.
(3). When you press the forward/backward button and press the left/right turn button at the same time, the engineering vehicle can turn forward/backward and turn left/right.

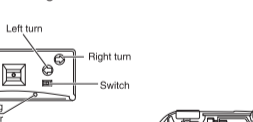

3. Adjust the trimmer at the front of bottom of the engineering vehicle to adjust the straight-line driving performance of the engineering vehicle.

 1. Open the charger cover as illustrated and take out the CHARGING PLUG.



2. Insert the CHARGING PLUG to the CHARGING JACK on the bottom of the mini racer, the CHARGING INDICATOR lights up indicate the charging is in process. Make sure the power switch of the car is turned off. It is normal for the frequency lamp to flash when charging. When charging, the charging head should be recognized the direction, and remember to turn off the switch when not in use.



3. The mini racer is fully charged when the CHARGING INDICATOR goes off. Charging time: 3-4 minutes.



Cautions:

- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type are recommended to be used.
- Exhausted batteries should be removed from the product.
- Do not dispose batteries in fire, or batteries will explode or leak.
- The supply terminals are not to be short-circuited.
- Batteries are to be inserted with the correct polarity.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before being charged (if removable).
- Remove batteries if the product is not to be used for an extended period.
- The packaging has to be kept since it contains important information.

Warranty:

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months. If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose. This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure. To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Any expenses relating to the return of your product to the store will normally have to be paid by you. The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by: Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555