

GT4297

1:16 R/C EV Charging Car



 
User Manual

1 Main parameters

Materials: Plastic and electronic components


Vehicle battery: 1 piece of 3.7V rechargeable Li-ion battery (non-detachable)

Remote control battery: 2 pcs of 1.5V AA batteries (not included)

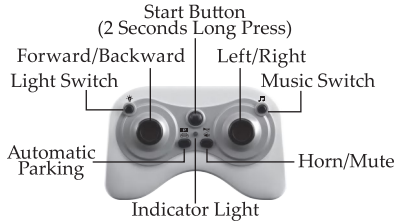

2 Installing batteries

 1. Remove the battery compartment door at the back of the remote control. Install 2 pcs of 1.5V AA batteries in the correct polarity as indicated into the battery compartment. Reinstall the battery door and fix it with the screw (Fig 2A).

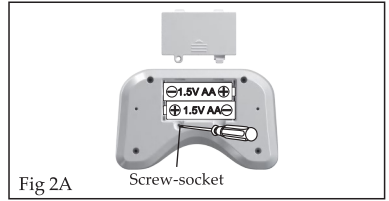

3 2.4GHz pairing procedure

1. Install the batteries into the remote control. Turn on the remote control and the vehicle. The pairing procedure will start automatically. The remote control indicator light will turn off indicating that the pairing procedure was successful.
2. The remote control can be paired only with one vehicle at once. Each set has an interference free system.
3. If there is no linking signal for 2 minutes the remote control will automatically shut down.
4. To re-pair the set restart the remote control and the vehicle.



4 Operations

1. Start

After code matching successfully, press any button on the remote controller to start.

2. Horn/Mute button

After the car start, press “🔊” on the remote controller to will make a horn sound. Long press 2 seconds “🔊” to enter mute state. Press “🔊” again exit the mute state.

3. Forward/Backward

Use the driving stick to control forward and backward movement (Fig 4A).

4. Left/Right

 
Use the steering stick to control left/right movement (Fig 4B).

5. Amazing lights show

After the car start, press “💡” on the remote controller and the headlights will cycle through 7 lighting modes.(Fig 4C).

6. Music switch

After the car start, press “🎵” on the remote controller to cycle through 5 music modes.(Fig 4D).

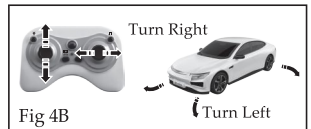

7. Automatic parking demonstration

After the car start, press “**P**” on the remote controller to demonstrate automatic parking, and the body comes with 4 parking modes.(Fig 4E).

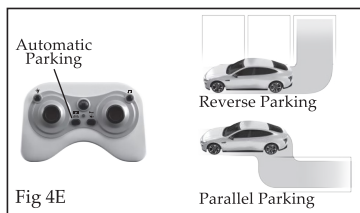 


Fig 4E

5 Additional features

1. Auto off

If there is no linking signal for 2 minutes the remote control will automatically shut down.

2. Interference free system

The interference free system allows multiple sets to be used in one area without interference.

6 Charging the battery

1. Battery needs to be charged before first use. The fast charging time is about 30 minutes(output voltage is DC5V, output current $\geq 2A$). Do not charge for more than 2 hours.

2. Connect the charging pile to the vehicle according to the correct socket, and then plug the USB socket of the charging pile into the USB port of the computer, mobile phone charger or mobile power supply for charging. (Fig 5A).

3. The indicator light of the charging pile is flashing when charging, and all the indicator lights are on when it is fully charged. After charging is complete, please disconnect the power plug and remove the charging pile and store it in a safe place to avoid accidents.

4. The charging pile is not a toy, please use the charging pile that comes with this product and charge according to the instructions.

5. The matched charging pile of the product is only applicable to this product, rather than other equipment.

6. If not in use, please turn the vehicle's power switch to the “OFF” position. If need to store it for a long time, please take out the battery of the remote control to avoid damage to the product caused by battery leakage.

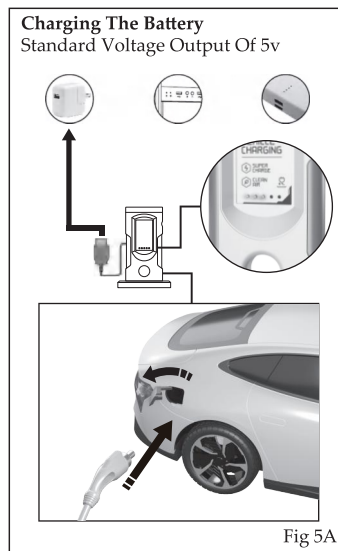 


Fig 5A

7 Notice

1. Do not play this toy on roads or crowded places to avoid danger.

2. Do not play this product in stagnant water, as it may short-circuit the circuit and damage it.

3. The surface of the product should be kept clean. If it is dirty, use a clean and soft cloth to wipe the stains on the surface of the toy.

4. The vehicle speed slows down significantly during operation, and the battery may be insufficient. Please charge in time.

5. Non-rechargeable batteries are not to be recharged. The batteries should be charged under adult supervision.

6. Don't insert the DC plug of the charging pile into the output socket.

7. Batteries are to be inserted with the correct polarity.

8. Different types of batteries or new and used batteries are not to be mixed.

9. The supply terminals are not to be short-circuited.

10. Exhausted batteries are to be removed from the toy.

11. The toy is not to be connected to more than recommended number of power supplies.

12. Regularly inspect the battery, cord, plug, enclosure and other parts. Do not use if damaged.

CHOKING HAZARD-small parts, not for children under 3 years.

Specifications, colors and contents may vary from illustration.

Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555