


Safety information:

This information is provided in the interest of your safety. Please read the following carefully before carrying out the installation or use of the appliance. This appliance must be only used for its intended purpose. If the power cable requires replacement, this must only be undertaken by a suitably qualified person.

Remove coin cover to retrieve deposited coins

on ↔ off

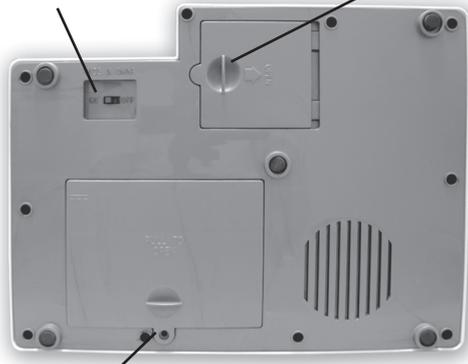

*Remove screw at the bottom of machine to open battery compartment. (requires 3 "D" batteries)

Please move the grabber to the left side to take out the grabber bag.

*Note:

- Non rechargeable batteries are not to be charged.
- Rechargeable batteries are to be removed from toy before being charged OR do not use rechargeable batteries.
- Rechargeable batteries are to be charged under adult supervision OR do not use rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy.
- The supply terminal are not to be short-circuited.



1 Insert real or plastic coins (included) to start game



2 Use mini joysticks to grab prizes



3 Move crane to drop slot to receive prize

Mini Arcade Claw Machine



Toys & Lollies not included

Distributed by:
Electus Distribution Pty Ltd
46 Eastern Creek Dr, Eastern Creek NSW 2766 Australia
Ph 1300 738 555 / Int'l +61 2 8832 3200 / Fax 1300 738 500
www.electusdistribution.com.au

USER MANUAL