 


MINI ARCADE CLAW MACHINE

AGES
3+

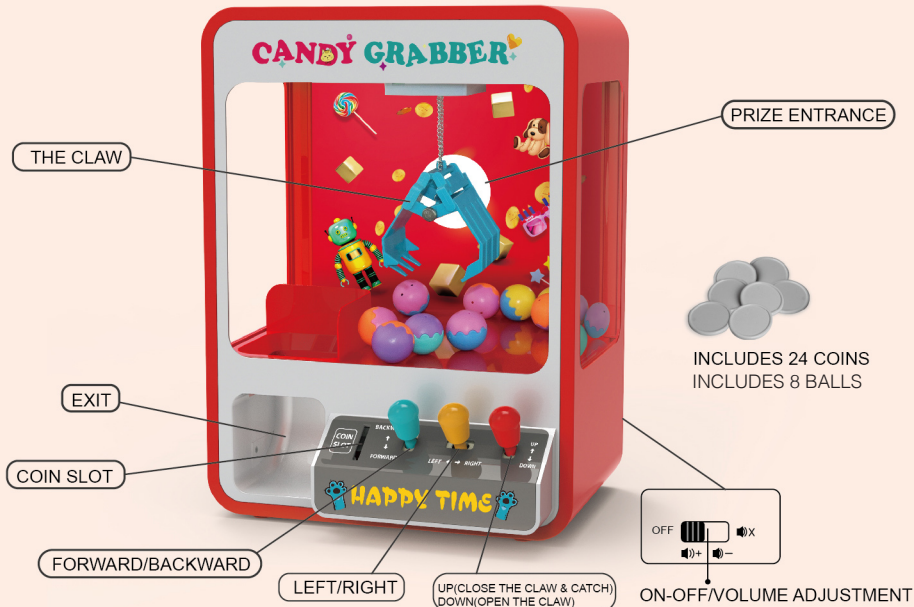

Precautions:

1. This product does not contain batteries
2. This product is not intended for use by children under the age of 3.
3. Please read the operating instructions carefully before use.
This product contains spherical objects and is recommended to be used under adult supervision.
4. Before using this product, please ensure that all parts are complete and the installation is stable.
5. Do not allow children to disassemble and clean this product in any way.
6. Regularly check whether other parts such as wires, plugs, casings are damaged, and stop using them when they are found to be damaged until they are repaired in good condition.
7. Only use the recommended transformer for the toy.
8. Toys cannot be connected to the multi-hand recommended amount of power
9. Transformer (USB cable) is not a toy, do not let children play
10. The color, accessories and design of this product may differ from the illustration.
11. This package contains important information, please keep it for future use.

PLEASE NOTE:

This item is not intended to be used as a candy/toy dispenser. It is a game of challenge and skill, just like the real arcade game. Therefore a certain degree of skill is required. Not recommended for children under 3 years of age, as it requires hand/eye coordination. When using candies use wrapped candies only.

WARNING:

- Not suitable for children under 3 years old due to small parts which may cause a choking hazard.
- As with all electrical products, do not operate near water as hazardous conditions may occur.
- Turn the game off when not in use.
- Remove batteries if the game is not used for extended periods.
- Adult supervision is recommended.
- Do NOT use different types of batteries at the same time.
- Do NOT use new and old batteries at the same time.
- Do NOT attempt to re-charge non-rechargeable batteries.
- Be sure to install batteries with the correct polarity.
- When batteries are exhausted, remove them from the battery compartments to prevent damage or danger.
- Do NOT attempt to short circuit the terminals.

INSTRUCTIONS:

1. Install batteries (3x"D") as instructed.
2. Power switch in the back of the machine, power switch at the same time additional voice control function, can adjust the volume. Adjust according to the printed content on the switch.
3. After coin, can officially start the game. Control 3 joysticks to move claws and capture prizes.

* Only one coin is needed for each game.

Please use the built-in plastic coin to avoid bad effects.

 
 
* The maximum time of each game is 60 seconds, when the time is up, the game will be terminated automatically. Or when a prize is successfully captured during game time, a cheer is given and the game is automatically terminated. Need to re-coin to continue.

* From left to right, the first joystick moves the claws forward and back; The second joystick moves the claws left and right; The third joystick raises the claws up and down, opening them down and closing them up for capture.

* Power supply mode: use 3 x "D" size batteries (not included).

TIPS:

1. When the machine is in normal operation, please do not shake the machine or put items into the port
2. Do not put game coins or small objects into the doll machine, otherwise the game coins or small objects fall into the gap of the rotating shaft, which may affect the function of the doll machine.
3. Do not operate the operating lever continuously and quickly, so as not to damage the operating lever or the circuit system, resulting in the machine not running normally.

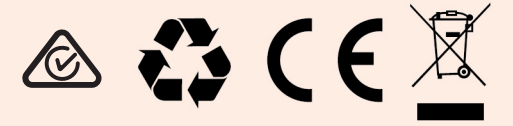

MADE IN CHINA



Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months. If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555