

# MINI ELECTRONIC SAFE

GT4306



## USER MANUAL

### 1. BATTERY INSTALLATION

1. Remove the screw and battery cover located at the bottom of the safe.
2. Insert 3 x AA (not included) batteries using the correct polarity.
3. Place the battery cover back on and screw in place.

### 2. OPENING SAFE

1. Once the batteries have been inserted, enter the default password 0000 on the keypad.

**Note: If you enter the wrong password, the LED will turn red.**

2. The LED will turn green, turn the handle on the front of safe clockwise to open the safe.

3. Close the safe once you have finished removing the coins and notes.

**Note: If the safe door is open more than 10 seconds, the green LED will be flashing until the door is closed.**

### 3. CHANGE PASSWORD

1. Enter the current password (Default: 0000) and turn the handle to open the safe.
2. Press and hold the \* button, the green and red LEDs will start flashing.
3. Enter the new 4 digit password, once it has been entered then press the # button to store it successfully.
4. Close the safe, the LEDs will stop flashing.

**Note: If you have forgotten your password for the safe, remove the batteries and re-insert them. The password will revert back to default (0000).**

### 4. NOTE ROLLER & COIN SLOT

Place the coins in the coin slot located on top of the mini electronic safe. Do not place coins in the note roller located at the front of the mini electronic safe as it may get stuck. Place the notes in the automatic note roller located at the front of the mini electronic safe. Once you have inserted a note, the green LED will stop flashing after 3 seconds. If the note is stuck, the LED will turn red. Enter the password to open the door and then you can remove the note.

**Note: There is a switch located on the inside of the door. When its switched to the left, you will hear additional sounds such as the door opening. When its switched to the right, it will only have the beeping sounds of the password being entered.**

## WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555