 


Getting Started

The Coin Pusher uses 4 x D sized batteries.

 
1. Insert batteries in battery compartment.(Dia.A)
2. Place the unit on a firm levelled surface.
3. Before play to start ,you can fill up the Coin Pusher by inserting coins through the 2 slots on the top.
There is a hatch in roof which allows you to feed in the coins faster. Simply use a screwdriver to open the hatch and replace it back on. after feeding in the coins.(Dia.B)
4. **DO NOT** put anything other than the coins into the machine.

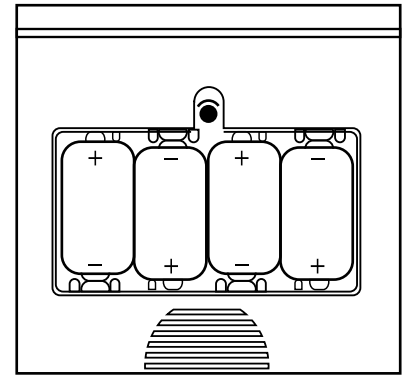

(Dia.A)

You're Ready to Play


1. Now you can choose the setting of the Coin Pusher through the two control switches at front
The control switch on the right is the "ON/OFF" switch incorporated with the "TILT MECHANISM". There is a choice of playing with the system on (Right) or off (Left). If you choose to play with the "TILT MECHANISM" on and when the machine is being tilted, the siren goes off together with flashing lights and the machine will then stop. Turn the switch to 'OFF' (Centre) and then to left or right again to continue the game .(Dia.C)

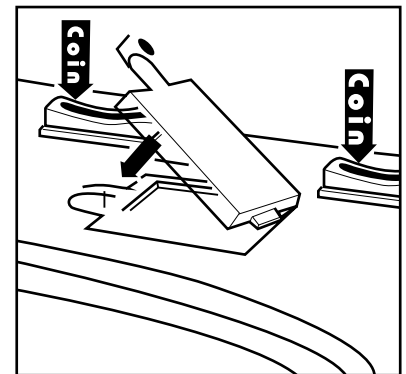

(Dia.B)

The control switch on the left let you choose the setting of the machine - with both lights and music (Centre), with lights only (Right) and less lights and with music (Left). You can change the setting any time during play.(Dia.D)

 
2. Now you can start to play by putting the coin through the 2 slots on the top and try to push as much coins down as possible.
Use your skill to drop the coin at just the right time to push all the coins forward onto the lower shelf, and in turn hopefully push all the coins on that level over the edge as your reward!

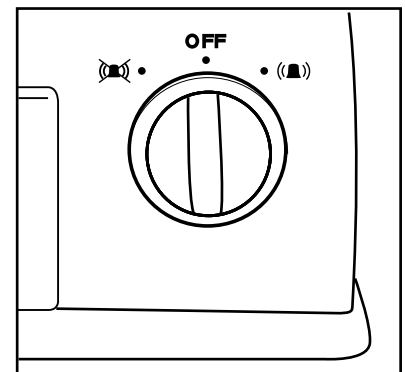

(Dia.C)

Battery Instructions

 - Use A Screwdriver to open the battery compartment.
- Use 4 x D sized batteries (not included).
- Switch toy off before inserting batteries.
- Non rechargeable batteries are not be recharged
- Rechargeable batteries should only be charged under adult supervision.
- Different types of batteries or old and new batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Remove exhausted batteries from the toy.
- Do not short circuit the battery terminals.
- Do not want to throw into the battery to fire or dismantle the solution open their exterior packing.
- Batteries are harmful if swallowed,so keep away from young children.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).

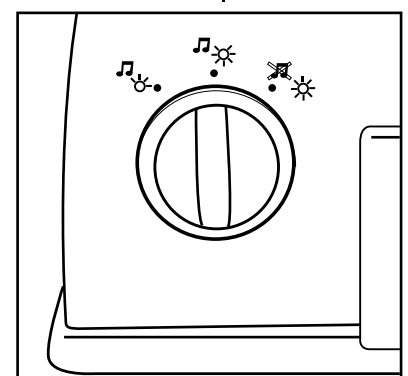

(Dia.D)

Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555