

Instruction Manual

Please read this instruction manual
carefully before operation



In order to operate this remote control car more easily, proficiently and safely, please read this instruction manual carefully before operation. The instruction manual contains important information, please properly keep it.

CATALOGUE

1. Product and transmitter instructions ----- 1
2. Functions ----- 2
3. Modular battery charge and install ----- 3
4. Frequency, ESC(Receiver) ----- 4
5. Precautions ----- 5

ATTENTION

The product is not suitable for children below 14 years of age.

Please pay attention to prevent from electrical shock in using any electronic product.

Please use under the supervision of the adult.

Warning: Please use the product correctly as the instruction manual.

MAINTENANCE AND CARE

1. If the product is not going to be used for a long period, please take out the battery, so as to avoid liquid leakage or product damage.
2. Please wipe the car with wet cloth slightly.
3. Please do not place the products in place with high temperature, humidity and direct sunshine.
4. Please do not place the products in water, because it will probably damage the electronic component.
5. Once the product has been sold, we will not be responsible for any safety responsibility caused by operation, using or control.
6. In case of any operation, using or maintenance problem, we will authorize the franchisers to provide technical support and after-sales service, and please contact with the local franchisers.

PRODUCT PARAMETERS

Product name: Brushless 4WD High Speed

Control distance: 100-150

 
Transmitter battery: 4XAA (additional purchase)

Frequency: 2.4G


Modular battery: 7.4V 2000mAh

Charging time: around 4h

INTRODUCTION OF TRANSMITTER

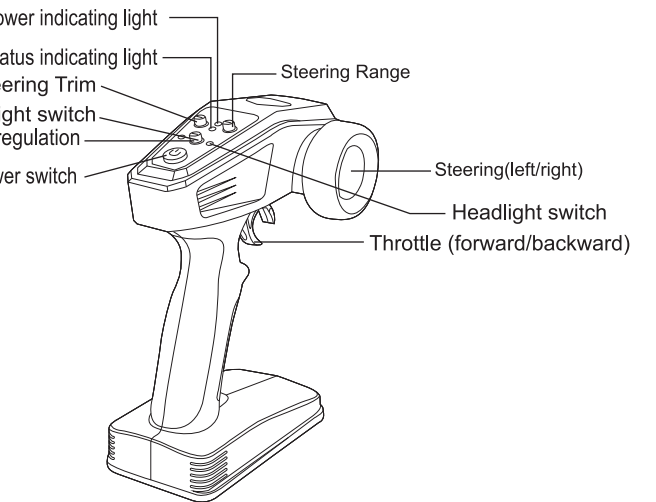

TRANSMITTER BATTERY

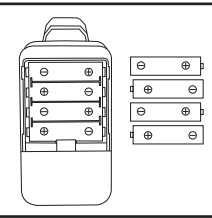 

Attention

- 1) The transmitter uses 4x1.5V "AA" non-rechargeable batteries.
- 2) Loading and unloading the battery should correctly operate according to the polarity and voltage marks on the battery box. The battery should not have any short circuit.
- 3) The non-rechargeable battery can not be charged.
- 4) The batteries of different types or new and old batteries can not be mixed in using.

 
FUNCTION INTRODUCTION

Introduction of the Operating Rod



1. Throttle



2. Steering Wheel

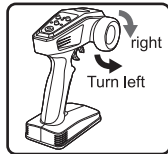


  3. Lighting switch

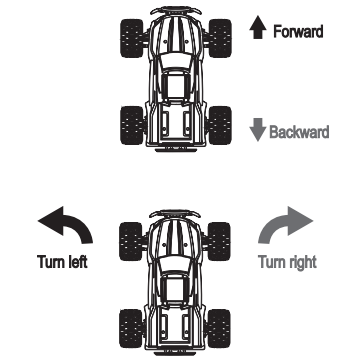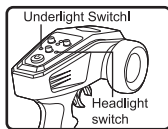


Short press to change the color of the Headlight and Underlight.

 
BATTERY INSTALLATION OF THE VEHICLE

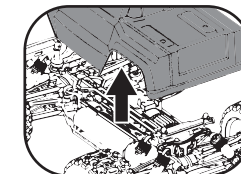

 
1. Open the car shell

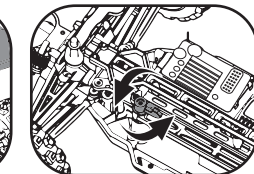

 
2. Open the lock

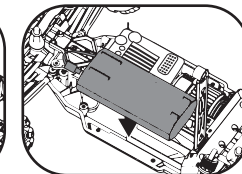

 3. Load the battery according to its polarity

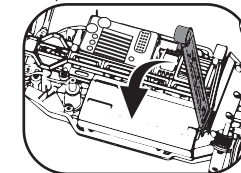


 4. Place the battery and put down the strip

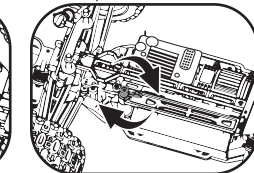

5. Close the lock

 
CHARGE THE BATTERY OF THE VEHICLE



After removing the battery, connect it to the USB charging port that comes with it, and then insert the other end of the charging cable into the charging adaptor (5V, 2A).

When charging, the USB red light is always on and the green light is flashing. When fully charged, the USB red light and green light are always on.

 BATTERY




1. Press the button on the battery to check the battery power.
2. When one red light on the battery flashing fast, it means that the battery is in a low state of power, please charge the battery immediately.

FREQUENCY MATCH



 1. Turn on the transmitter.




2. Press and hold the Receiver as pic. switch

3. At this time, the lights of the transmitter and the car stay on, indicating that the frequency is successful matching.

⚠ Note: Make sure the throttle lever is in the middle position. Do not touch the throttle lever when turning on the transmitter power.

 RECEIVER ON THE CAR

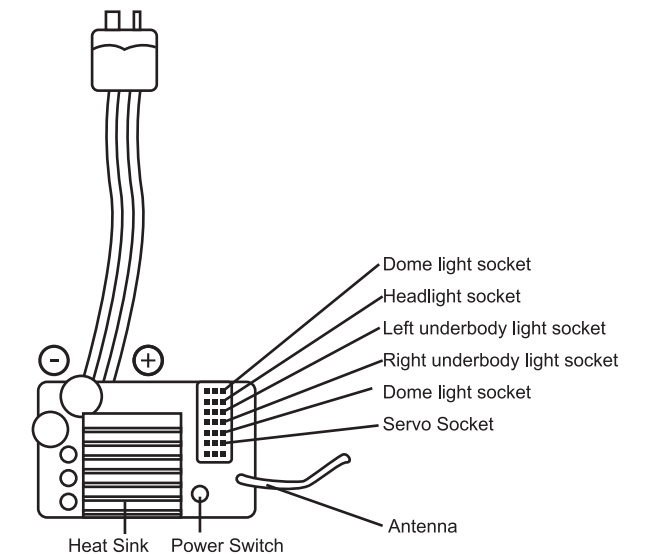

PRECAUTIONS

1. When using the product, please keep away from the railway, highroad, and other dangerous environments.
2. In using the product, please keep away from the cellphone station, big-power emitting equipment and other environment with high electromagnetic interference.
3. In using the product, please keep away from the bike or car or the like.
4. Please do not use the product in raining, thunderstorm, sandstorm, fog, snow, strong wind, low temperature or other severe environment.
5. **This product is not waterproof. Please do not operate the product near water.**
6. Please always keep the remote control vehicle within the visual range of the operator.
7. Please do not operate the product near the site with children playing.
8. Please do not use the product chase after any transportation tool or affect the normal operation of the transportation tool.
9. The product can not be used after drinking, tiredness, taking medicine or having poor physical condition.
10. Please inspect the product before each operation, including but not limited to the firmness of the component, crack or wearing of the body and tire, battery power amount, effectiveness of the indicating light and so on. In case of any abnormality, please immediately stop using and replace the corresponding components.
11. If car is acting irregular it is likely to have a accidental crash if used please give car a lookover before hand.
12. Please do not operate by force.
13. Please do not hinder any moving part.
14. Please not refit the product, or use the product for any not originally designed application
15. Please operate as the instruction manual.
16. Please use the component of the original plant for maintenance and replacement.
17. It is not allowed to mix the batteries of different categories in using.
18. Please do not use the expanded, leaked or damaged battery.
19. In charging the battery, please do not approach any flammable product (such as blanket, wooden furniture and wooden plate and so on.)
20. Please use the charging line configured by the original plant. The charging line of other brand or the damaged charging line can not be used.
21. Please do not squeeze the battery or enable it to have short circuit, so as to avoid explosion.
22. **The motor is hot, please do not touch it to avoid being burned.**

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure. To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555