

GENERAL INFORMATION

BATTERY WARNING:

- 1. Failure to follow all the instructions may result in serious injury, irreparable damage to the battery and may cause a fire, smoke or explosion.
- 2. Always check the battery's condition before charging or using it.
- 3. Replace the battery if damaged, gives a foul odor or show signs of overheating, discoloration, deformation and leakage.
- 4. Never use anything other than the approval charger the battery. Always use a balancing charger for battery. It is recommended that you do not to use any other charger than the one provided with the product.
- 5.The battery temperature must never exceed 60°C (140°F) otherwise the battery could be damaged or ignite.
- 6. Never charge on a flammable surface, near flammable products or inside a vehicle (perferably place the battery in a non-flammable and nonconductive container).
- 7. Never leave the battery unattended during the charging process. Never disassemble or modify the housing's wiring, or puncture the cells. Always ensure that the charger output voltage corresponds to the voltage of the battery. Do not overcharge the batter that may cause short circuit.
- 8. Never expose the battery to moisture or direct sunlight, or store it in a place where temperatures could exceed 60°C(car in the sun, for example).
- 9. Always keep it out of reach from children.
- 10. Improper battery use may result in a fire, explosion or other hazard.
- 11. Non-rechargeable batteries are not be charge again. Rechargeable batteries are only to be charged with the supervision of an adult.
- 12. Different types of batteries or new or used batteries which are different are not be mixed.
- 13. Batteries are to be inserted with the correct polarity.
- 14. The supply terminal should be used well to avoid short circuit. Examination of the transformer and battery charger regularly is encouraged to check any damage in the cord, plug, enclosure and other parts. If damage is observed, it must not be used until it has been repaired.
- 15.The packaging has to be kept since it contains important information.
- 16.The toy is only to be connected to Class II equipment bearing the symbol.



WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.
If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.
This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.
To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.
Any expenses relating to the return of your product to the store will normally have to be paid by you.
The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:
Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555

1:18 SCALE
RC HIGH SPEED
4WD TRUGGY



USER MANUAL

WARNINGS

- Not suitable for children under 3 years, small parts may present a choking hazard.
- Recommended for children aged 14 years and over.
- Adult supervision is required during operation and charging.
- Remove all packaging materials before giving the toy to a child and dispose of the materials safely.
- Do not modify or attempt to repair the RC truggy.
- Do not use the RC truggy if any component is damaged or loose.
- Keep the RC truggy away from water, heat or excessive moisture.

 
Operation & Care:

- Only operate the RC truggy indoors or in a suitable open area away from obstacles.
- Do not touch the RC truggy's wheels while it is moving.
- Switch off the RC truggy and remote control when not in use.
- Store the product in a cool, dry location away from direct sunlight.
- Clean the product using a soft, dry cloth.
- Do not use water, solvents or abrasive cleaners.
- Do not immerse any part of the product in water.


Battery Charging & Safety:

- The rechargeable battery must only be charged by an adult or under direct adult supervision.
- Only use the supplied USB charging cable.
- Connect the charging cable to a suitable 5V USB power source.
- Do not use a damaged charging cable, battery or USB power source.
- Charge the product indoors in a dry, well-ventilated location.
- Place the product on a hard, flat and non-flammable surface while charging.
- Do not leave the product unattended while charging.
- Do not charge the product overnight.
- Disconnect the charging cable when charging is complete.
- Do not operate the RC truggy while it is charging.
- Do not cover the RC truggy or charging cable during charging.
- Keep the product away from fire, direct sunlight and excessive heat.
- Do not attempt to remove or replace the internal battery unless the product is specifically designed for user replacement.
- Stop charging immediately if the battery becomes hot, leaks or shows any sign of damage.
- Insert batteries according to the polarity markings inside the battery compartment.
- Do not mix old and new batteries.
- Do not mix alkaline, standard carbon-zinc or rechargeable batteries.
- Do not mix batteries of different brands or capacities.
- Do not attempt to recharge non-rechargeable batteries.
- Rechargeable batteries must be removed from the remote control before charging.
- Rechargeable batteries must only be charged under adult supervision.
- Remove exhausted batteries immediately.
- Remove the batteries if the remote control will not be used for an extended period.
- Do not short-circuit the battery terminals.
- Do not dispose of batteries in fire.
- Keep new and used batteries away from young children.

BOX CONTENTS

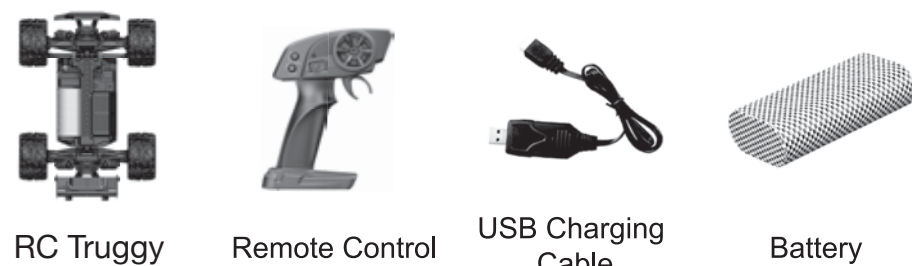

CHARGING

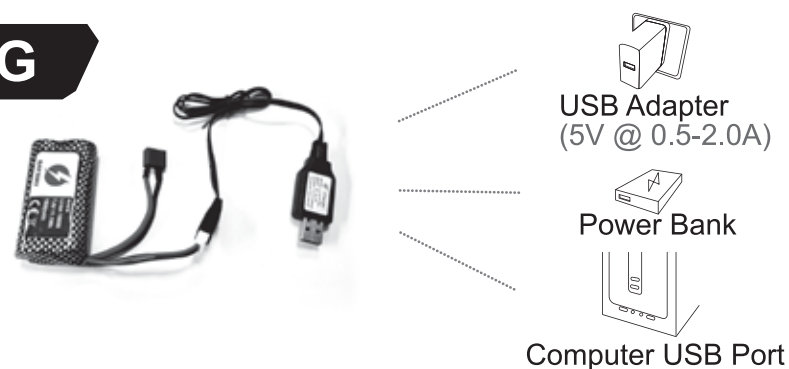 

CHARGING

 
The battery is not fully charged when manufactured. When the car battery is low, the car will activate LVC (Low Voltage Cut-Off) protection. To protect the battery, the car can only move forward and backward. Please charge the battery.

1. Plug the USB charging cable into a computer USB port, power bank, or USB adapter (5V, 0.5–2.0A).
2. Connect the battery wire to the USB charging cable.
3. Charging time: approximately 180 minutes.
4. The green indicator light on the USB charging cable will flash while charging and will turn solid once fully charged.


ATTENTION:

- Please keep the battery in sight while charging. Do not place the battery on a flammable surface.
- If the battery pack or USB charging cable is damaged, stop using it immediately and replace the damaged accessories as soon as possible.

PRODUCT DIAGRAM

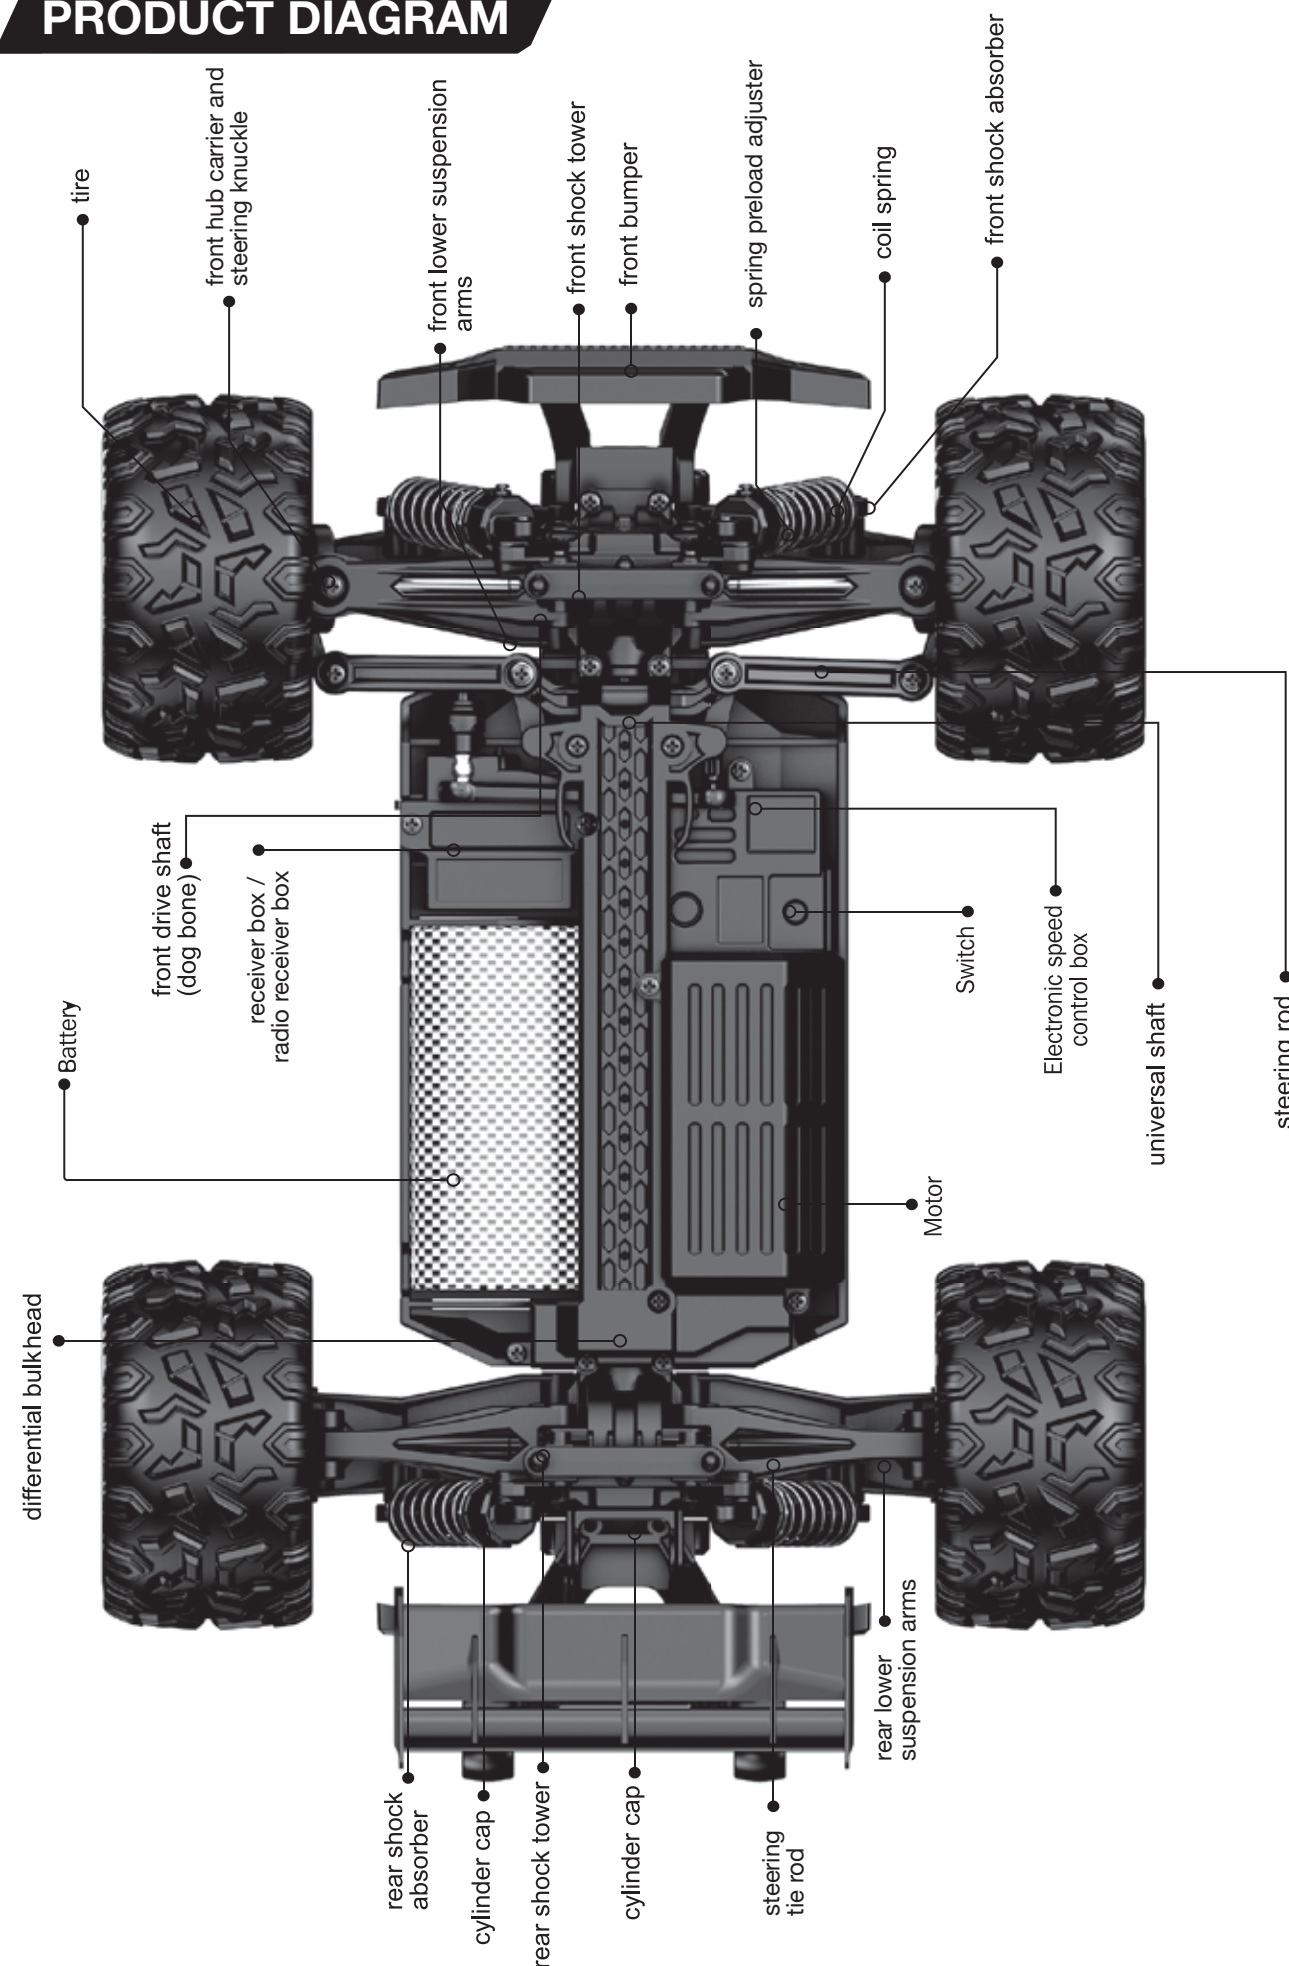

REMOTE CONTROL DIAGRAM

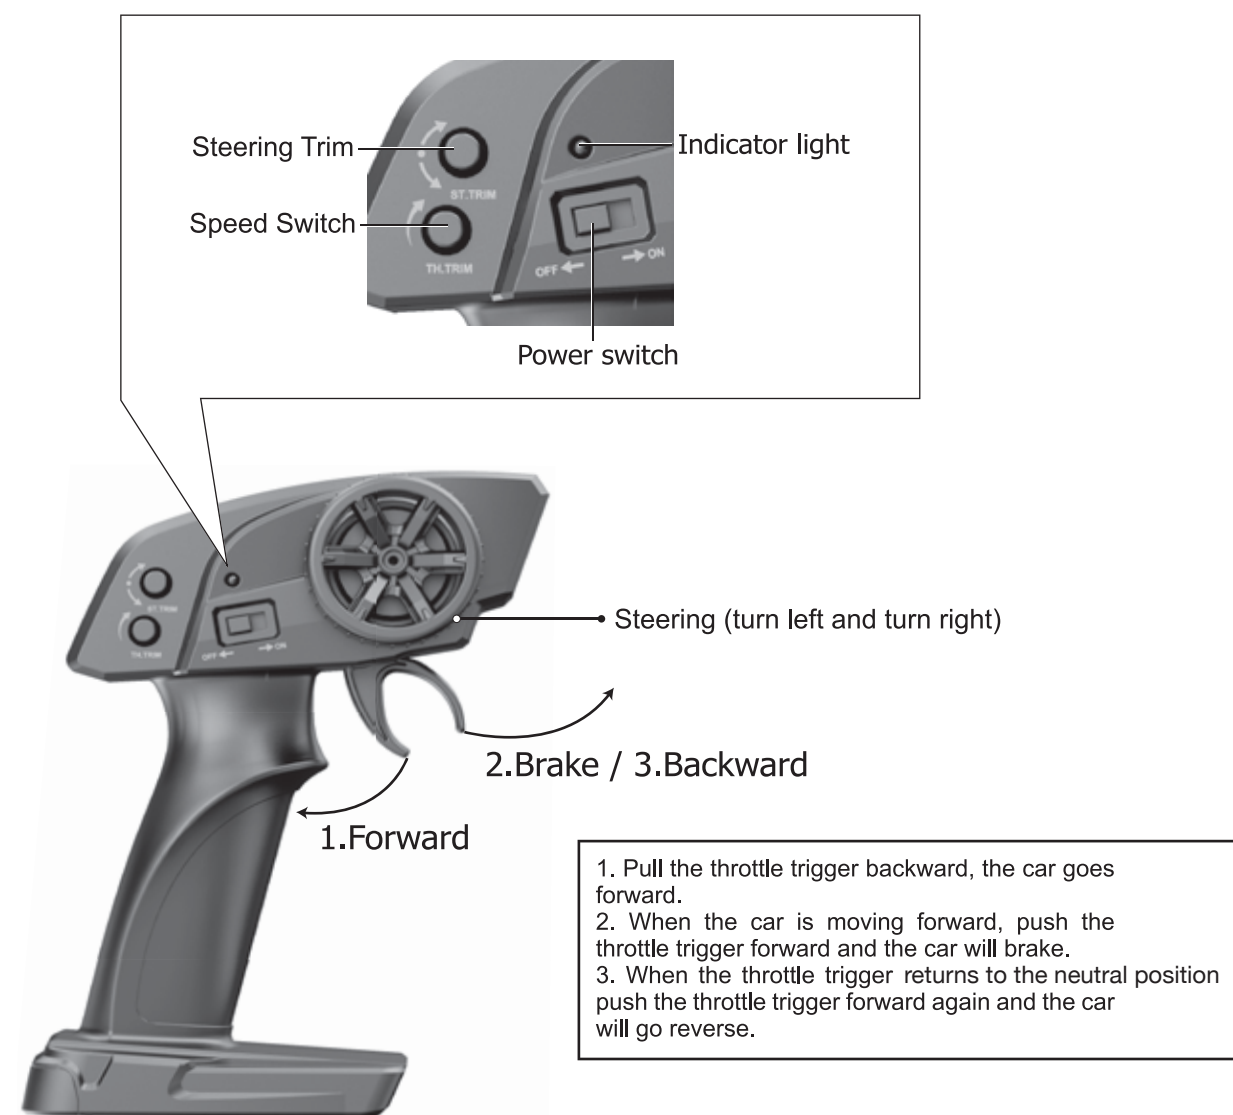 


REMOTE LED CODES

LED color/pattern	Name	Hints
Red light always on	Normal driving mode	
Red light flashing slowly (on at 0.5s/off at 0.5s)	Low battery warning	Please replace the remote control batteries.
Red light flashing quickly (on at 0.125s/off at 0.125s)	Connection failed / error	If the transmitter and receiver fail to pair, turn off the remote control and restart it to restore normal operation. Out of range if the connection fails.


BATTERY INSTALLATION

RC CAR BATTERY

 
If the car will not be used for a long time, make sure to turn it off and remove the battery.

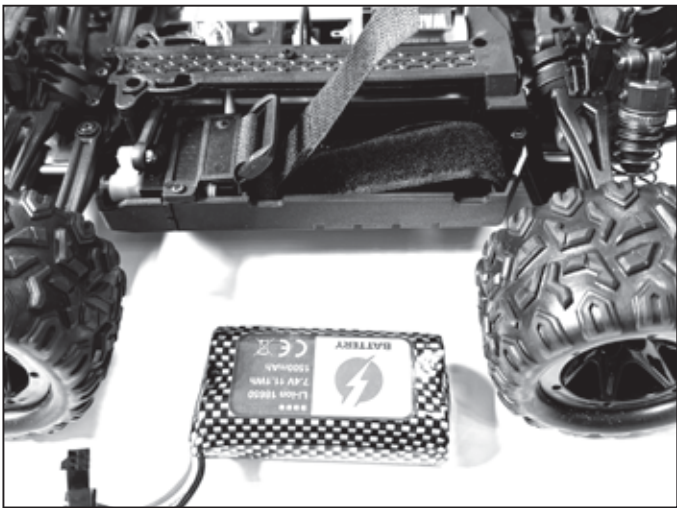

 
1. Open the nylon tie.

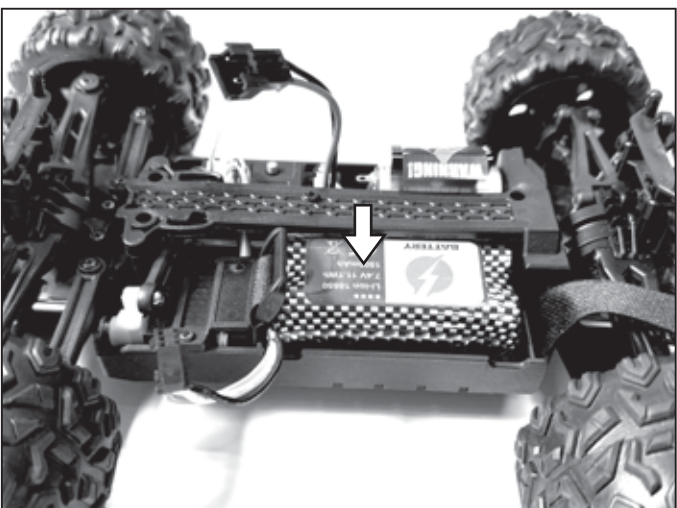

 2. Installation of batteries.

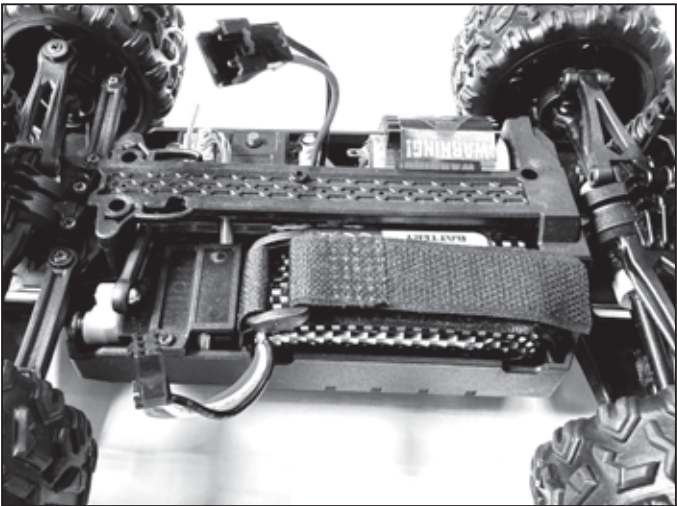

 3. Tighten the nylon tie.

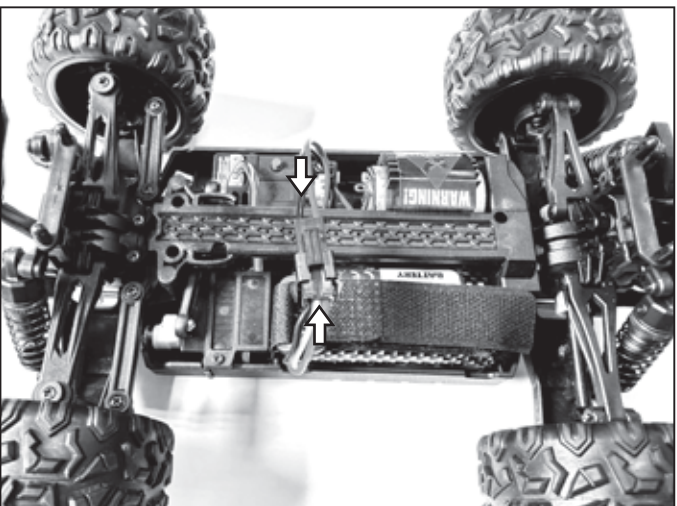

4. Insert the battery plug.

REMOTE CONTROL BATTERY

 
 


- ① Push the battery cover out.
- ② Insert 2 AA batteries (not included) in the correct direction.
- ③ Push the battery cover in.

If the remote will not be used for a long time, make sure to turn it off and remove the batteries.


When the battery of the remote control is low, the indicator light of the remote control will flash slowly.

OPERATION PAIRING

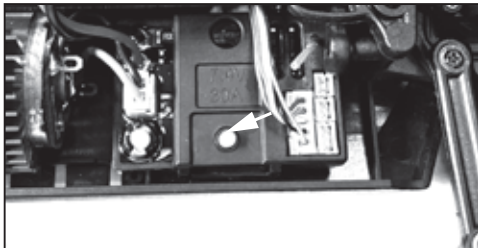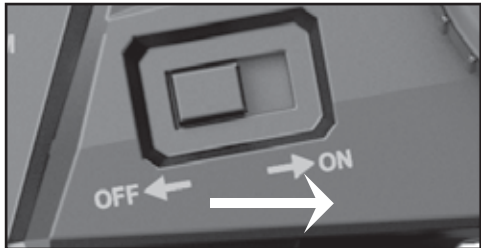

- ① Make sure the battery is charged.
- ② Insert batteries to the car and the remote.
- ③ Turn on the car power switch and the remote power switch. (**DO NOT pull the throttle trigger during pairing**)
- ④ The car and remote control will pair automatically.
(The remote power indicator and the car power indicator will flash while waiting for the pairing process and will turn solid once paring is successful.

 FORWARD, REVERSE, TURN LEFT, TURN RIGHT

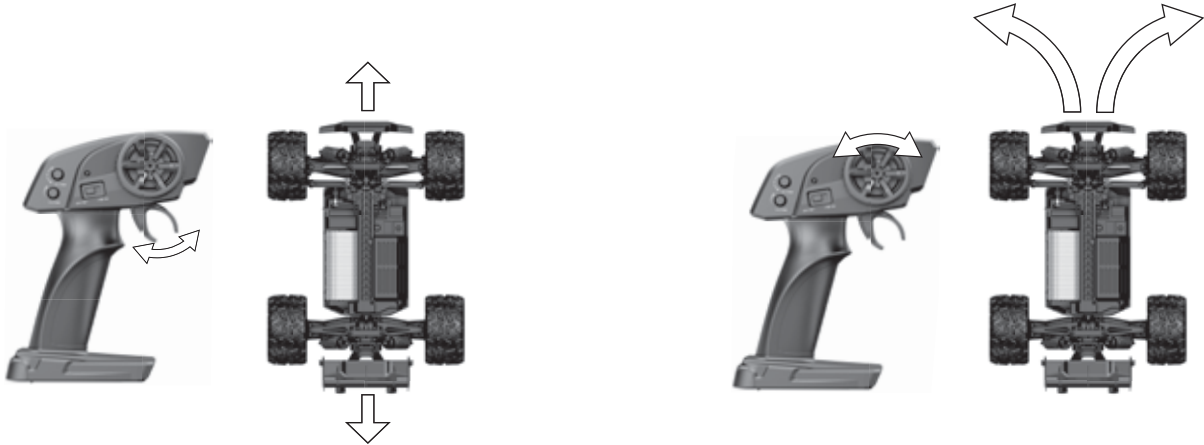


Pull the throttle trigger backward, the car goes forward. Push the throttle trigger forward, the car brakes, then push the throttle trigger forward again, the car goes backwards . (The throttle controls the speed)

Turn the steering control wheel counterclockwise, the car turns left. Turn the steering control wheel clockwise, the car turns right. (Control the Steering Wheel Rotation Angle can control the degree of turning)


MAXIMUM SPEED CONTROL

 Turn the speed switch counterclockwise to reduce the maximum speed of the car.

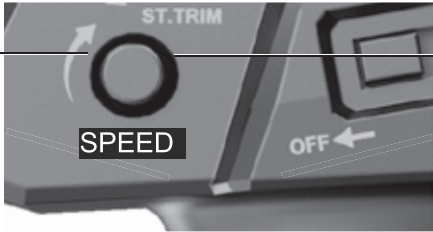

Turn the speed switch clockwise to increase the maximum speed of the car.

 STEERING TRIM

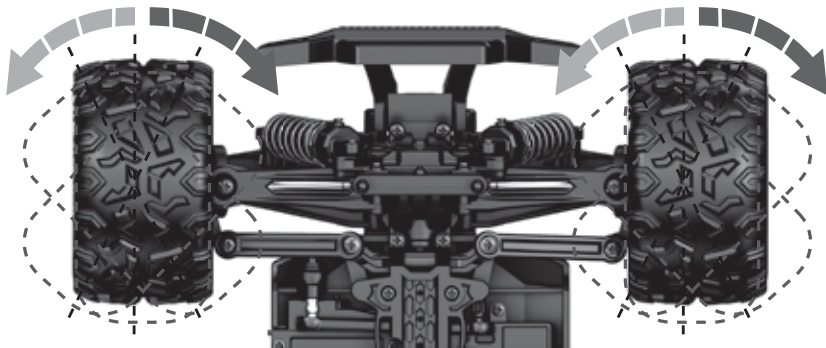

If while the car is moving forward and veering to left then turn the steering trim knob to the right until the car is moving straight. If while the car is moving forward and veering to right then turn the steering trim knob to the left until the car is moving straight.

FREQUENTLY ASKED QUESTIONS

QUESTION	CAUSE	SOLUTION
No match or can't control it	1. The car battery or remote control battery is completely dead 2. Out of remote range	1. Replace or recharge the batteries 2. Move the car closer to the remote control
Can't go forward or reverse	1. Low battery 2. The car shorted out when it got wet 3. Poor contact between motor and electronic speed controller	1. Charging 2. Let the car dry completely 3. Reconnect the connection wire between the motor and the electronic speed controller
Can't turn left or turn right	1. Low battery 2. The car shorted out when it got wet 3. Poor contact between steering gear and electronic speed controller	1. Charging 2. Let the car dry completely 3. Reconnect the connection wire between the steering gear and the electronic speed controller
The battery will not charge	1. The output voltage or current of the power supply is too high 2. The charging cable or battery is broken	Use a power supply with an output of 5V, 0.5–2A
The wheels turn on their own	Pull the throttle trigger during pairing	Re-pair the car and remote control without pulling the throttle trigger

SPECIFICATIONS

Speed: Up to 45km/h

Frequency: 2.4GHz

Remote Control Range: Up to 80m

Play Time: Up to 20 Minutes

Charge Time: Up to 2 Hours

Batteries:

Truggy: 2S 7.4V Li-ion, 1500mA

Remote Control: 2 x AA (Not Included)

Dimensions: 280(L) x 200(W) x 110(H)mm