

1:18 Scale RC Excavator With Joystick Controller



User Manual



R-NZ

WARNINGS

- Not suitable for children under 3 years, small parts may present a choking hazard.
- Recommended for children aged 6 years and over.
- Adult supervision is required during operation and charging.
- Remove all packaging materials before giving the toy to a child and dispose of the materials safely.
- Do not modify or attempt to repair the excavator.
- Do not use the excavator if any component is damaged or loose.
- Keep the excavator away from water, heat or excessive moisture.


Operation & Care:

- Only operate the excavator indoors or in a suitable open area away from obstacles.
- Do not touch the excavator's tracks while it is moving.
- Switch off the excavator and remote control when not in use.
- Store the product in a cool, dry location away from direct sunlight.
- Clean the product using a soft, dry cloth.
- Do not use water, solvents or abrasive cleaners.
- Do not immerse any part of the product in water.

Battery Charging & Safety:


- The rechargeable battery must only be charged by an adult or under direct adult supervision.
- Only use the supplied USB charging cable.
- Connect the charging cable to a suitable 5V USB power source.
- Do not use a damaged charging cable, battery or USB power source.
- Charge the product indoors in a dry, well-ventilated location.
- Place the product on a hard, flat and non-flammable surface while charging.
- Do not leave the product unattended while charging.
- Do not charge the product overnight.
- Disconnect the charging cable when charging is complete.
- Do not operate the excavator while it is charging.
- Do not cover the excavator or charging cable during charging.
- Keep the product away from fire, direct sunlight and excessive heat.
- Do not attempt to remove or replace the internal battery unless the product is specifically designed for user replacement.
- Stop charging immediately if the battery becomes hot, leaks or shows any sign of damage.
- Insert batteries according to the polarity markings inside the battery compartment.
- Do not mix old and new batteries.
- Do not mix alkaline, standard carbon-zinc or rechargeable batteries.
- Do not mix batteries of different brands or capacities.
- Do not attempt to recharge non-rechargeable batteries.
- Rechargeable batteries must be removed from the remote control before charging.
- Rechargeable batteries must only be charged under adult supervision.
- Remove exhausted batteries immediately.
- Remove the batteries if the remote control will not be used for an extended period.
- Do not short-circuit the battery terminals.
- Do not dispose of batteries in fire.
- Keep new and used batteries away from young children.

BOX CONTENTS

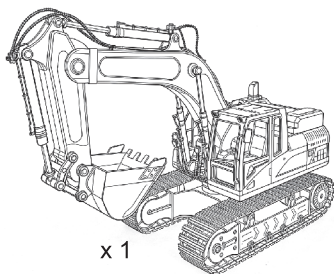

x 1

Excavator

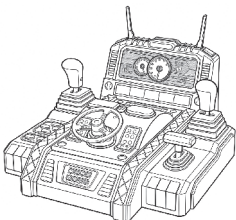


x 1

Joystick Remote Control




x 1

Exhaust Spray Water Bottle

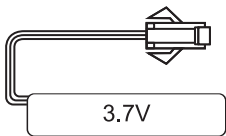

x 1

3.7V Li-ion Battery

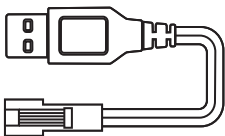


x 1

USB Charging Cable

PRODUCT DESCRIPTION


EXCAVATOR

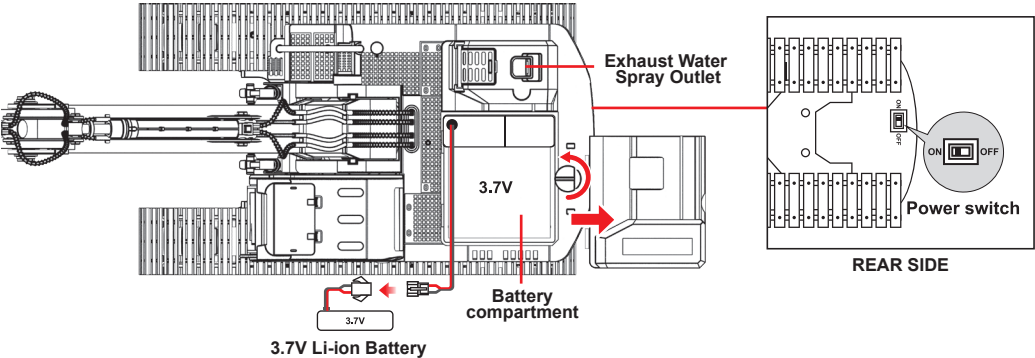

INSTALL THE BATTERIES

1. Turn the lock to open the cover.
2. Open the battery compartment and connect li-ion battery with rc excavator.
3. Close the battery cover and turn the lock to secure it.

JOYSTICK REMOTE CONTROL

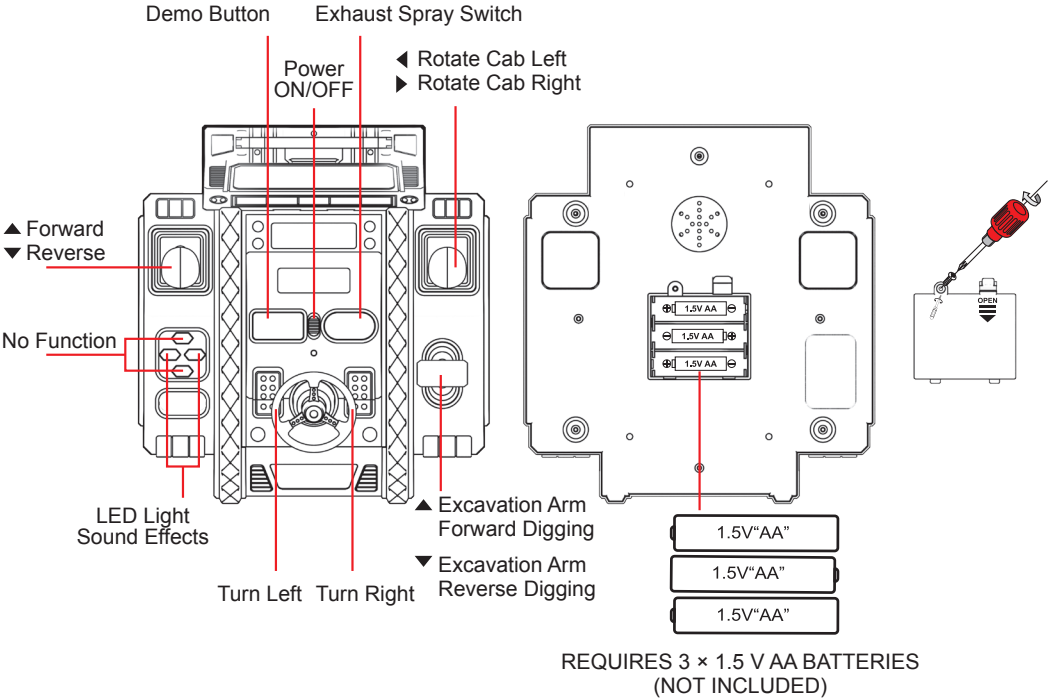


INSTALLING THE CONTROLLER BATTERIES

- 1. Unscrew and remove the battery cover.
- 2. Insert 3 × 1.5 V AA batteries, ensuring the correct polarity.
- 3. Replace the battery cover and tighten the screw.

CHARGING THE BATTERY

- 1. Turn the lock to open the battery compartment cover, then remove the battery.
- 2. Connect the battery to the USB charging cable.
- 3. Connect the charging cable to a suitable USB power source.

Note: It is recommended to fully charge the battery before first use.

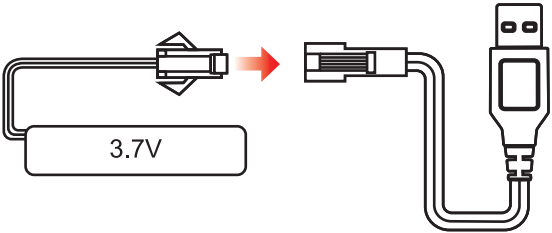


PAIRING

Switch on the controller. The controller indicator light will flash. Then switch on the excavator. When the excavator emits two beeps and the controller indicator light turns off, pairing is complete.


Note: Ensure that the batteries are correctly installed in both the excavator and the controller before pairing.

OPERATION

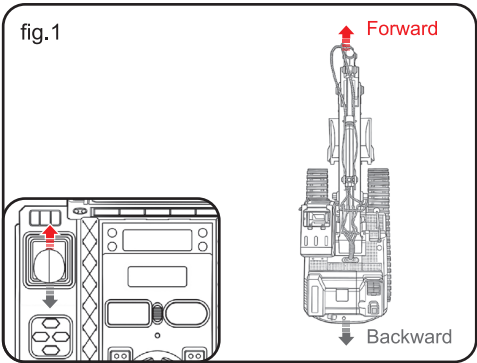


FORWARD/REVERSE

Push the forward/reverse joystick up to move forward and down to move backward.

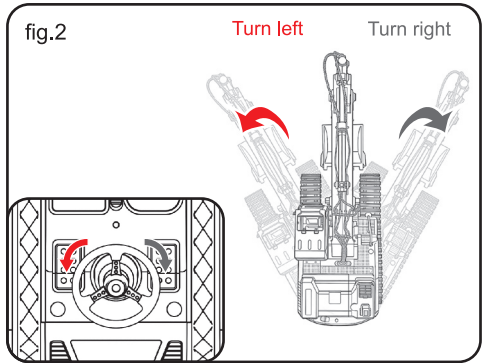


TURN LEFT/RIGHT

Turn the steering wheel left or right to steer the excavator.

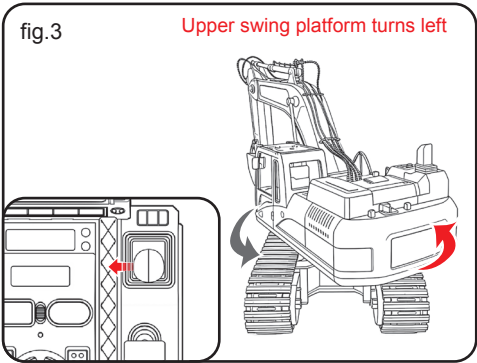


ROTATE THE UPPER PLATFORM LEFT

Push the joystick to the left to rotate the upper platform to the left.

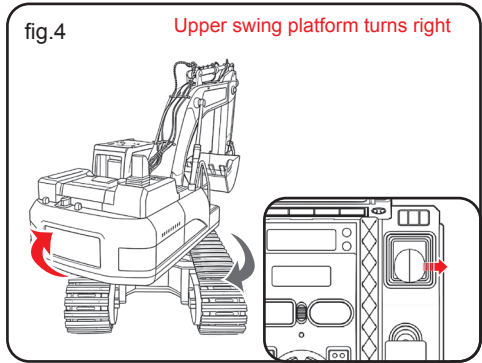


ROTATE THE UPPER PLATFORM RIGHT

Push the joystick to the right to rotate the upper platform to the right.

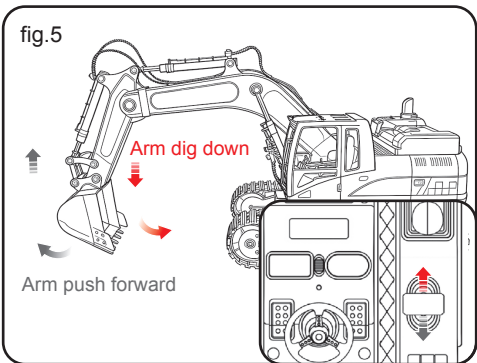

ARM CONTROL


Push the joystick up to lower the arm.
Push the joystick down to extend the arm forward.

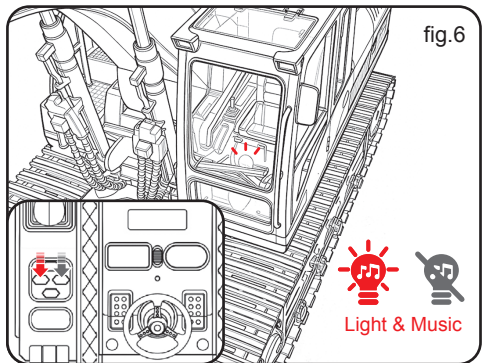

LIGHT AND SOUND SWITCH

Press the left or right button to turn the lights and sounds on or off.


fig.7

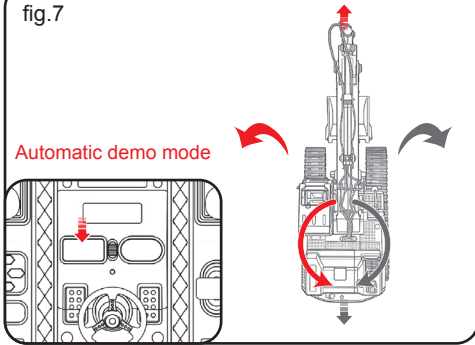

AUTOMATIC DEMO MODE

Press the demo button to activate the excavator's automatic demonstration mode.

fig.8

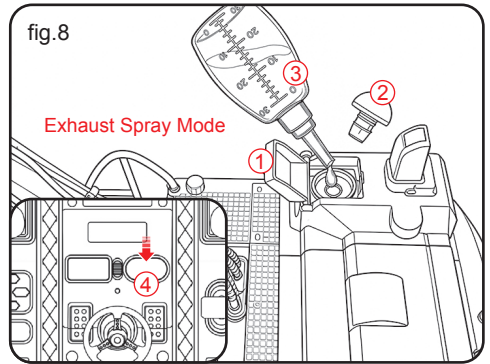

Exhaust Spray Mode

1. Open the water inlet cover.
2. Remove the sealing plug.
3. Fill the water tank with clean water.
4. Replace the sealing plug and close the cover securely.
5. Press the spray button to activate the spray function.

SPECIFICATIONS

Remote Control Range: Up to 30m
Play Time: Up to 15 Minutes
Charging Time: Up to 2 Hours

Batteries:
Excavator: 3.7V Li-ion, 800mA
Remote: 3 × AA (Not Included)
Dimensions: 440(L) × 135(W) × 310(H)mm

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you. The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555