

Technical Specifications:


Wireless Frequency: 433MHz
Wireless Range: Up to 50m
Batteries: Includes 1 x CR2032 (Transmitter)
Requires 3 x AA (Receiver)
IP Rating: IP54 (Transmitter)
Dimensions: 85(L) x 40(W) x 19(D)mm (Transmitter)
85(H) x 85(W) x 24(D)mm (Receiver)

Distributed by:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia

Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500

www.techbrands.com

Made in China

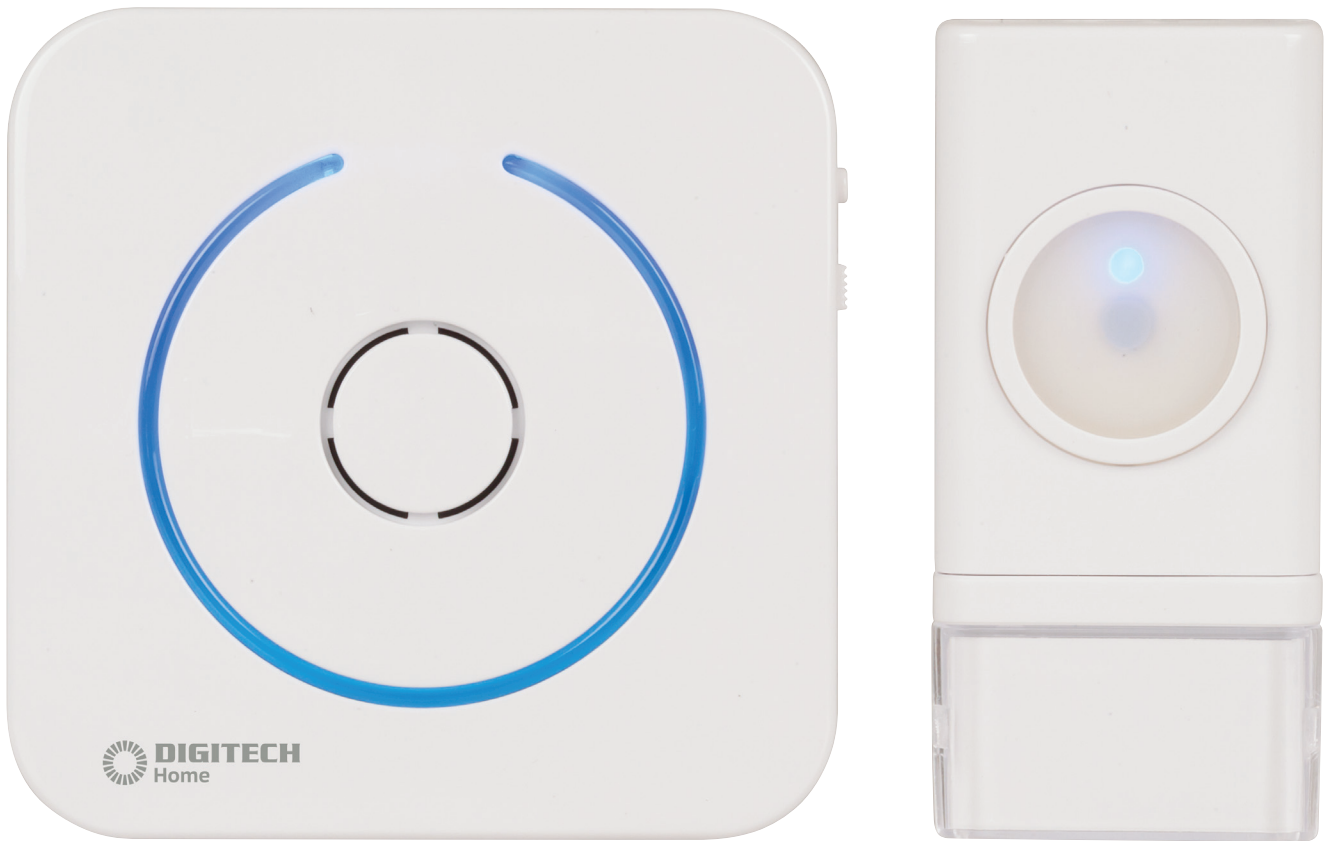

**Battery Operated
Wireless Doorbell
Up to 50m Range
LA-5048
User Manual**

Operating Instructions

This Wireless Door Chime is simple and easy to install. With no wire required, the doorbell attaches to the outside of your door frame by strong double-sided tape and the wireless chime unit can be wall-mounted anywhere inside, up to 50m transmission range.

Please read the following instructions before use, and retain them for future reference.

In the Box:

- 1 x Wireless Door Chime
- 1 x Doorbell
- 1 x Mounting Kit
- 1 x Instruction Manual



How it Works:

Pushing the button of the Doorbell activates the Wireless Door Chime Alert inside your property to advise you that there is someone at the door using the pre-selected Chime and flashing the Blue LED Indicator Ring.

LED Indicator:

Working: The light will flash blue when it is in the working state.

Low Power: The blue light will be "Always On" when the voltage is <3.3V.

Note: When the light indicates low power, please replace batteries in time.

Important Information to Read Before Installation

- Replace the batteries once every year.
- Only use 1.5V AA alkaline batteries (Wireless Door Chime Unit)
- Only use Lithium CR2032 battery (Doorbell)
- Do not use the Wireless Door Chime Alert outdoors (Indoor Use Only)
- Test the alarm once a month to ensure it is still working and the batteries are in good condition.

Before you Begin:

Batteries are included in the Doorbell, and are fitted in the factory for your convenience, to ensure they reach you in top condition there is a small plastic tab protecting them which is sticking out of the side of the casing. Remove this by pulling gently and discard it.

Batteries are not included in the Wireless Door Chime Alert and will need to be fitted before it can be used. Open the battery compartment cover on the rear of the unit. Place 3 new alkaline AA batteries into the Wireless Door Chime alert noting the correct orientation that is shown inside the battery compartment.

Put the On/Off switch into the 'ON' position. Your Wireless Door Chime Alert is now ready for use.

TIP: Test your doorbell by pushing the button.

Mounting the Doorbell:

Use the provided double-sided tape to stick the Doorbell to the frame of your outside door - ensure it is clean and free from dirt.

Mounting the Wireless Door Chime Alert:

Use the provided fixings to put a screw into the wall in the required location, hang the Wireless Door Chime to it using the Screw Mounting Point.

NOTE: Ensure there are no electrical cables or pipes behind the wall at the point you drill the hole for the screw - If in any doubt, consult a trade professional before proceeding.

Replacing Batteries in the Wireless Door Chime Alert:

- Open the battery compartment cover on the rear of the wireless door chime alert.
- Remove the old batteries.
- Place 3 new alkaline 1.5AA batteries into the alarm noting the correct orientation that is shown inside the battery compartment.
- Only use replacement alkaline batteries.

Replacing Batteries in the Doorbell:

- Pry open the casing using a flat-headed screwdriver inserted into the recess on the bottom of the Doorbell.
- Remove the old battery. (Note the orientation of the battery - Positive terminal should be face up)
- Place 1 new lithium 3V, CR2032 battery into the alarm noting the correct orientation that is shown inside the battery compartment.
- Push the covers together until you hear it click back into place.
- Only use replacement alkaline batteries.

Pairing:

The Doorbell and Wireless Door Chime is paired at the factory. However, if the Alarm doesn't sound when you push the button, please follow the following procedure to pair.

- Press the Pair Button using a small pointed object on the back of the Wireless Door Chime Alert.
- Press the button of the Doorbell
- The Alarm will sound - your unit is now paired.

Additional Door Chime Pairing:

- Press the Pair Button using a small pointed object on the back of the ADDITIONAL Wireless Door Chime Alert.
- Press the button of the Doorbell
- The Alarm will sound - your unit is now paired.

Note: Up to 20 Door Chimes can be paired with one Doorbell.

Additional Doorbell Pairing:

- Press the Pair Button using a small pointed object on the back of the Wireless Door Chime Alert.
- Press the additional Doorbell
- The Alarm will sound - your unit is now paired.

Note: Up to 20 Doorbells can be paired with one Door Chime.

Clear Paired Doorbell:

Slide the power switch to "OFF". Hold down the Pair Button and then slide the power switch to "ON". After 2 seconds, release the Pair Button and the door chime will sound "Ding-Dong" and the indicator light flashes blue, which means all paired doorbells with this chime are cleared successfully.

